

 **PRINCESS®**


**EN** Instruction manual



**Stick mixer**

01.221206.02.001

PARTS DESCRIPTION

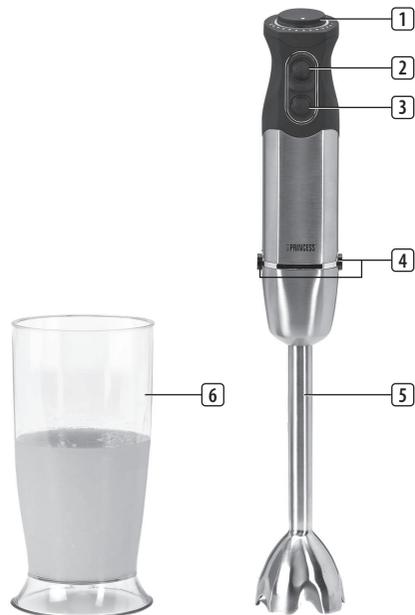

## IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using your Princess product. By ignoring the safety instructions Princess cannot be held responsible for the damage. When using an electrical appliance, basic safety precautions should always be observed, including the following:

**IMPORTANT: This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children shall not use or play with this appliance. Close supervision is necessary to keep appliance and cord out of reach of children during use.**

### WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Never move the appliance by pulling the cord and make sure the cord does not become entangled. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- **CAUTION:** In order to avoid hazard, this appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent fire or shock hazard do not expose this appliance to rain or moisture.
- Do not allow children to use the device without supervision.
- Always switch off and remove the power cord from the electrical outlet before changing accessories or approaching parts that move in use.
- Always remove the power cord from the electrical outlet if it is left unattended and before assembling, disassembling or cleaning.
- It is absolutely necessary to keep this appliance clean at all times, because it comes into direct contact with food.
- **DO NOT** overfill.
- **CAUTION: DO NOT PROCESS HOT FOODS OR HOT LIQUIDS.** Allow hot ingredients to cool before processing.

- Keep hands, hair, clothing, and utensils out of container while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used **ONLY** when the appliance is not running.
- **IMPORTANT:** The chopping blades are very sharp, and must be handled with care. When handling the blades, always hold by the shaft. Failure to do so will result in a risk of laceration.
- **THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.

**FOR HOUSEHOLD USE ONLY**  
**SAVE THESE INSTRUCTIONS**  
[www.princesshome.eu](http://www.princesshome.eu)

## **PARTS DESCRIPTION**

1. Speed controller
2. Normal speed button
3. Turbo speed button
4. Release buttons
5. Stainless steel stick
6. 800ml Measuring cup

## **BEFORE THE FIRST USE**

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 10cm free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50Hz).
- Never use the mixer for longer than 1 minute continuously. After this, allow the mixer to cool down for 5 minutes.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.

## **USE**

- **CAUTION:** Always turn off and unplug from the wall power socket before fitting or removing attachments.
- **CAUTION:** DO NOT handle by the blade. The blade attachments are very sharp. Use caution when handling and storing.
- Connect the stainless steel stick (5) to the motor unit by aligning the notches on the motor unit with the recesses on the attachment. Press the attachment up onto the motor unit until it clicks into place, securely locking the attachment and the motor unit together.
- Plug in the power cable to the wall socket.
- To avoid splashing, place the blender shaft into your ingredients before operating the blender. Select the optimal speed for blending by turning the speed control dial (1) from 1 to 5, with one being the slowest speed and five the fastest.

- With a firm grip on the blender, Press and hold the Normal speed power button (2) to start blending. Keep a firm hold of the beaker, bowl or saucepan handle as you blend.
- When you use the Turbo speed button (3), the appliance operates at maximum speed. In this case, you can't adjust the speed with the speed control dial (1). For maximum blending power, press and hold the Turbo button (3).
- Make a rotating, up and down motion to obtain even blending of the food.
- The stick (5) and the measuring cup (6) are designed for pureeing foods such as soups, sauces, milkshakes, smoothies, baby food or crushing ice. It is not suitable for grinding hard items such as coffee beans. Do not blend hot liquids.
- Note: for crushing ice cubes, add some water in the measuring cup. Remove any bones from the meat and cut food into cubes of 1-2 cm.
- To disengage the attachment from the motor unit, unplug the device first, press and hold the release buttons while pulling down the attachment to disengage from the motor unit.
- For fibrous foods (leeks, celery, asparagus, etc) clean the blender shaft regularly during use. Always follow the safety instructions for disassembly and cleaning.
- For fruit-based preparations, first cut up the fruit into manageable sized pieces and remove pips, stones and thick skins.
- Use short bursts only when processing hard foods like sugar, cereals, chocolate, seeds and nuts.

EN

## CLEANING AND MAINTENANCE

- Unplug the appliance. Use a soft, slightly damp cloth to wipe appliance surfaces.
- Clean the accessories with warm soapy water to avoid bacterial growth. The accessories are also dishwasher proof.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device itself is **not** dishwasher proof.
- CAUTION! The knives in the stick and in the bowl are very sharp, never try it yourself to undo the blades and be careful cleaning them. Avoid all bodily contact with the blades, they can seriously injure you.

## PRACTICAL HINTS

- The ingredients must at least cover the lower part of the blender shaft for the process to be successful.
- Remove any cooking vessels (e.g. saucepan) from the source of heat before blending hot ingredients.
- Leave cooked foods to cool down for a while before blending/ mixing. CAUTION: Do not blend hot/warm ingredients - always allow to cool to room temperature before blending.

## ENVIRONMENT



■ This appliance should not be put into the domestic garbage at the end of its life, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol

on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recycling.

**FOR HOUSEHOLD USE ONLY  
SAVE THESE INSTRUCTIONS**

### Support

[www.princesshome.eu](http://www.princesshome.eu)

smartwares Europe Jules Verneweg 87 5015 BH Tilburg The Netherlands <a href="http://service.smartwares.eu">service.smartwares.eu</a>	NL: 088 5940501 Lokaal tarief
	BE: 078 48 1094(NL) Lokaal tarief
	BE: 078 48 1460(FR) Tuurlokaal
	FR: 0825 560 650 1800/1900
	DE: +49 20 1805 010762
	14CJ/Min. de Federatie. Model max. 4CC/Min
UK: +44 20 345 230 1211	
ES: +34 938427389	



[WEEE Logo]



[www.princesshome.eu](http://www.princesshome.eu)

© Princess 2018