



EN Instruction manual

CN 說明書



Hand blender
01.221226.16.001

PARTS DESCRIPTION / 零部件說明



[WEEE Logo]



EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Do not allow children to use the device without supervision.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Always disconnect the device from the supply if it is left unattended and before assembling, disassembling or cleaning.
- It is absolutely necessary to keep this appliance clean at all times, because it comes into direct contact with food.
- NOTE: The chopping blades are very sharp, avoid physical contact during emptying and cleaning the device, you can seriously injure.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - By clients in hotels, motels and other residential type environments.
 - Bed and breakfast type environments.
 - Farm houses.

PARTS DESCRIPTION

- Speed controller
- Normal speed button
- Turbo speed button
- Release buttons
- Stainless steel stick
- Measuring cup

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- Never use the mixer for longer than 1 minute continuously, after this allow the mixer to cool down for 5 minutes.
- The blades of the slicing and chopping disk and the blade chopping are very sharp, avoid physical contact, you can seriously injure.

USE

Using the chopper

- The hand blender is intended for:
 - Blending fluids, e.g. dairy products, sauces, fruit juices, soups, mixed drinks and shakes.
 - Mixing soft ingredients, e.g. pancake batter or mayonnaise.
 - Pureeing cooked ingredients, e.g. for making baby food.
- Put the S/S stick on the base until it clicks.
- Immerse the blade guard completely in the ingredients to avoid splashing.
- Press and hold the normal or turbo speed button to switch on the appliance. When using the normal speed button, you can adjust the speed with the speed controller. The higher the speed, the shorter the processing time required.
- When you use the turbo speed button, the appliance operates at maximum speed. In this case, you can't adjust the speed with the speed controller.
- Blend the ingredients by moving the appliance slowly up and down and in circles.
- Press the release buttons to disconnect the base of the S/S stick.

CLEANING AND MAINTENANCE

- Always remove the plug from the socket when the device will be cleaned.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.
- The components are not suitable for cleaning in a dishwasher. If exposed to heat or caustic cleaners they might become misshapen or discoloured.

ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Support

You can find all available information and spare parts at www.princesshome.eu!

ZH-CHT 說明手冊

安全

- 若忽視安全指示，製造商恕不負損壞責任。
- 若電源線受損，須由製造商、其服務代理商或相似的合格人員更換受損的電源線，避免危險。
- 切勿以拉扯電源線的方式搬運電器，並確定電源線未纏繞在一起。
- 使用者不可在裝置已接上電源時離去，讓裝置無人看管。
- 本電器只可供家庭用途使用，並僅限用於原本的製造用途。
- 請勿讓未滿 8 歲的兒童使用本電器。8 歲以上兒童以及生理、感官或心智不健全之人，或缺乏經驗知識之人，須有人在旁監督，或已指示如何安全使用本電器，且瞭解涉及的危險後，才可使用電器。兒童不可玩耍電器。請讓 8 歲以下兒童遠離本電器及其電源線。8 歲以上的兒童且有大人在旁監督，才可進行清潔與保養工作。
- 若要保護自己避免觸電，請勿將電源線、插頭或電器浸泡在水中或任何液體中。
- 請勿讓兒童獨自使用裝置，必須有人在旁看管。
- 請在更換配件或接近使用中活動的零件之前，關閉電器並切斷電源。
- 若無人看管，以及在組裝、拆解或清潔之前，請務必切斷裝置的電源。
- 必須需要隨時保持此電器清潔無虞，因為此電器會直接接觸食物。
- 注意：切碎刀非常銳利，因此請在清空與清潔裝置時，避免身體接觸，以免受到重傷。
- 本電器旨在在家中與相似的應用中使用，例如：
 - 商店、辦公室及其他工作環境中的員工廚房區。
 - 由飯店、汽車旅館及其他住宅式環境中的客戶使用。
 - 民宿。
 - 農家。

零部件說明

- 速度控制器
- 一般速度按鈕
- 渦輪增壓速度按鈕
- 釋放按鈕
- 不鏽鋼棒
- 量杯

首次使用前

- 請將電器及配件自紙箱中取出。撕下裝置的貼紙、保護膜或塑膠膜。
- 首次使用電器前，請先用濕布擦拭所有可拆卸的零件。切勿使用磨蝕性產品。
- 將電源線插入插座。（注意：連接裝置前，請確定裝置上指示的電壓與當地電壓相符。電壓 220V-240V 50/60Hz）
- 請勿連續使用本攪拌器超過 1 分鐘。每使用 1 分鐘請停機讓攪拌器散熱 5 分鐘。
- 切片刀、切碎刀盤及切碎刀非常銳利，因此請避免身體接觸，以免受到重傷。

使用

使用攪拌器

- 本手持攪拌器適用於：
 - 混合液體，例如奶製品、調味汁、果汁、湯、混合飲料和奶昔。
 - 攪拌軟質食材，例如煎餅麵糊或蛋黃醬。
 - 將煮熟的食材搗成泥，例如製作嬰兒食品。
- 將 S/S 棒置於底座上，直到卡入定位為止。
- 將刀片插板完全浸入材料中，以免飛濺。
- 按任一或極致速度按鈕，以開啟電器。使用一般速度按鈕時，您可使用速度控制器調整速度。速度越高，所需的處理時間越短。
- 使用極致速度按鈕時，電器會以最高速度運轉。此時無法使用速度控制器調整速度。
- 請上下緩慢的繞圈移動電器，混合材料。
- 按下釋放按鈕，以斷開 S/S 棒的底座。

清潔與保養

- 清潔裝置時，請務必從插座拔下插頭。
- 使用濕布清潔電器。切勿使用刺激性與磨蝕性清潔劑、菜瓜布或鋼絲刷，以免使裝置受損。
- 切勿電子裝置浸泡在水中或任何其他液體中。本裝置不適合使用洗碗機清洗。
- 元件不適合在洗碗機內清洗。若暴露於高溫或腐蝕性清潔劑，元件可能會變形或褪色。

環境



本電器不可在使用壽命結束時以家庭廢棄物處理，而是要棄置於回收電器之家用電器收集中心回收處。電器、使用手冊及包裝上的符號主要用於引起您對於重要議題的注意。本電器採用可回收的材質。您可回收二手家用電器，對環境保護盡一份心力。請向當地主管機關詢問相關的回收處資訊。

支援

您可在 www.princesshome.eu 網站中找到所有可用資訊與備用零件！

www.princesshome.eu

© Princess 2018