



EN Instruction manual

CN 說明書



Stick Mixer Set
01.220200.10.001

PARTS DESCRIPTION / 零部件說明



EN Instruction manual

SAFETY

• By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• Never move the appliance by pulling the cord and make sure the cord can not become entangled.

• The user must not leave the device unattended while it is connected to the supply.

• This appliance is only to be used for household purposes and only for the purpose it is made for.

• This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.

• To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.

• Do not allow children to use the device without supervision.

• Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

• Always disconnect the device from the supply if it is left unattended and before assembling, disassembling or cleaning.

• It is absolutely necessary to keep this appliance clean at all times, because it comes into direct contact with food.

• NOTE: The chopping blades are very sharp, avoid physical contact during emptying and cleaning the device, you can seriously injure.

• This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments.
- By clients in hotels, motels and other residential type environments.
- Bed and breakfast type environments.
- Farm houses.

PARTS DESCRIPTION

1. Motor unit
2. Normal speed button
3. Turbo speed button
4. Whisk
5. Whisk base
6. Stick blender
7. Lid
8. Bowl
9. Blades
10. Measuring cup

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Never use the mixer for longer than 1 minute continuously, after this allow the mixer to cool down for 5 minutes.
- The blades of the slicing and chopping disk and the blade chopping are very sharp, avoid physical contact, you can seriously injure.

USE

Using the hand mixer

- Place the whisk base on the engine unit and press until it locks.
- Place the guard in the whisk base. To remove the guard from the whisk base, pull the guard from the mixer bowl.
- Connect the power cable to the socket and select with the speed buttons the desired speed. If you press one of the switches off the device the device starts directly, by releasing the switch stops the machine immediately.
- You can stir minor ingredients such as egg white, cream, instant desserts and eggs and sugar for cakes.

Using the Stick blender

- Place the stick blender onto the engine unit and press until it locks.
- To unlock the stick blender, press the release buttons and take off the stick blender
- Connect the power cable to the socket and select with the speed buttons the desired speed. If you press one of the switches off the device the device starts directly, by releasing the switch stops the machine immediately.
- Always use the delivered measuring cup for pureeing and chopping fruit, vegetables and small pieces of meat.

Using the chopper bowl

- Place the blade at the pivot point in the middle of the bowl.
- Place the lid on the bowl. Place the engine on the lid and press until it locks.
- Connect the power cable to the socket and select with the speed buttons the desired speed. If you press one of the switches off the device the device starts directly, by releasing the switch stops the machine immediately.

- You can use meat, cheese, vegetables, herbs, bread, cookies and nuts heels. Do not chop any hard foods like coffee beans, ice cubes, spices or chocolate, this may damage the knife. Remove any bones from the meat and cut food into cubes of 1-2 cm. Place the bowl on a flat, stable surface.

CLEANING AND MAINTENANCE

- Clean the accessories with warm soapy water to avoid bacterial growth. The accessories are not dishwasher proof.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.
- CAUTION! The knives in the chopper and in the bowl are very sharp, never try it yourself to undo the chopper blade and be careful cleaning it. Avoid all bodily contact with the blades, they can seriously injure you.

GUARANTEE

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.

ENVIRONMENT

- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

ZH-CHT 說明手冊

安全

- 若忽視安全指示，製造商恕不負損壞責任。
- 若電源線受損，須由製造商、其服務代理商或相似的合格人員更換受損的電源線，避免危險。
- 切勿以拉扯電源線的方式搬運電器，並確定電源線未纏繞在一起。
- 使用者不可在裝置已接上電源時離去，讓裝置無人看管。
- 本電器只可供家庭用途使用，並僅限用於原本的製造用途。
- 請勿讓未滿 8 歲的兒童使用本電器。8 歲以上兒童以及生理、感官或心智不健全之人，或缺乏經驗知識之人，須有人在旁監督，或已指示如何安全使用本電器，且瞭解涉及的危險後，才可使用電器。兒童不可玩耍電器。請讓 8 歲以下兒童遠離本電器及其電源線。8 歲以上的兒童且有成人在旁監督，才可進行清潔與保養工作。
- 若要保護自己避免觸電，請勿將電源線、插頭或電器浸泡在水中或任何液體中。
- 請勿讓兒童獨自使用裝置，必須有人在旁看管。
- 請在更換配件或接近使用中活動的零件之前，關閉電器並切斷電源。
- 若無人看管，以及在組裝、拆解或清潔之前，請務必切斷裝置的電源。
- 必須需要隨時保持此電器清潔無虞，因為此電器會直接接觸食物。
- 注意：切碎刀非常銳利，因此請在清空與清潔裝置時，避免身體接觸，以免受到重傷。
- 本電器旨在在家中與相似的應用中使用，例如：
 - 商店、辦公室及其他工作環境中的員工廚房區。
 - 由飯店、汽車旅館及其他住宅式環境中的客戶使用。
 - 民宿。
 - 農家。

零件說明

1. 馬達總成
2. 一般速度按鈕
3. 極致速度按鈕
4. 攪拌器
5. 攪拌器底座
6. 手持攪拌棒
7. 外蓋
8. 調理碗
9. 刀片
10. 量杯

首次使用前

- 請將電器及配件自紙箱中取出。撕下裝置的貼紙、保護膜或塑膠膜。
- 首次使用電器前，請先用濕布擦拭所有可拆卸的零件。切勿使用磨蝕性產品。
- 請勿連續使用本攪拌器超過 1 分鐘。每使用 1 分鐘請停機讓攪拌器散熱 5 分鐘。
- 切片刀、切碎刀盤及切碎刀非常銳利，因此請避免身體接觸，以免受到重傷。

使用

使用手動攪拌器

- 將攪拌器底座放在引擎裝置上並按壓，直到卡入定位。
- 將搖板置於攪拌器底座內。若要從攪拌器底座取出搖板，請從攪拌器碗拉出搖板。
- 將電源線連接至插座，並選擇速度按鈕，調整所需的速率。若您按下裝置的其中一個開關，裝置會直接啟動，將開關釋放則會立即停止機器的運轉。
- 您可攪拌如蛋白、奶油、甜點，以及做蛋糕用的雞蛋與砂糖等材料。

使用攪拌棒

- 將攪拌棒放在引擎裝置上並按壓，直到卡入定位。
- 如要將攪拌棒解除鎖定，請按下釋放按鈕並取出攪拌棒
- 將電源線連接至插座，並選擇速度按鈕，調整所需的速率。若您按下裝置的其中一個開關，裝置會直接啟動，將開關釋放則會立即停止機器的運轉。
- 請務必使用隨附的量杯來製作濃湯和切碎水果、蔬菜及小塊肉類。

使用切碎碗

- 將刀片置於碗中間的軸心點。
- 請將蓋子裝在切碎碗上。將引擎放在外蓋上並按壓，直到卡入定位。
- 將電源線連接至插座，並選擇速度按鈕，調整所需的速率。若您按下裝置的其中一個開關，裝置會直接啟動，將開關釋放則會立即停止機器的運轉。

- 您可使用肉類、起司、蔬菜、香草、麵包、餅乾及堅果。請勿切碎任何硬質食物，例如咖啡豆、冰塊、調味料或巧克力，以免傷害刀片。請將除肉類上的骨頭，並將食物切成 1-2公分大的方塊。請將碗放置於平穩的表面上。

清潔與保養

- 請用溫肥皂水清潔配件以免滋生細菌。請勿用洗碗機清潔配件。
- 使用濕布清潔電器。切勿使用刺激性與磨蝕性清潔劑、菜瓜布或鋼絲刷，以免使裝置受損。
- 切勿電子裝置浸泡在水中或任何其他液體中。本裝置不適合使用洗碗機清洗。
- 小心！攪碎器及攪碎碗內的攪碎刀非常銳利。切勿自行卸下攪碎刀。清潔攪碎刀時務請注意安全。切勿觸及刀葉以免受傷。

保證

- 本產品享有 24 個月保固。只要產品依據指示使用，且用於原本的製造用途，您的保固仍然有效。此外，原始購買證明（發票、銷貨單或收據）要附上購買日期、零售商名稱及產品項號提交。

環境

- 本電器不可在使用壽命結束時以家庭廢棄物處理，而是要棄置於回收電機電子家用電器的集中回收處。電器、使用手冊及包裝上的符號主要用於引起您對於重要議題的注意。本電器採用可回收的材質，您可回收二手家用電器，對環境保護盡一份心力。請向當地主管機關詢問相關的回收處資訊。