



EN Instruction manual
CN 說明書



Master Juicer
01.201851.16.001

PARTS DESCRIPTION / 零部件說明



EN Instruction manual

SAFETY INSTRUCTIONS

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Do not allow children to use the device without supervision.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

PARTS DESCRIPTION

1. Juice cone
2. Pulp compartment
3. Reservoir
4. Axle
5. Base

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50Hz)
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.

USE

- As soon as the half citrus fruit is pressed onto the juice cone, the motor will be activated.
- Place a suitable glass under the spout of the reservoir. The spout can be pushed down to the juice to anticipate, and be folded up for the anti-drip feature. Do not exert too much pressure on the juice cone. If the sound of the motor increases significantly or the motor itself slows down dramatically, this means too much pressure has been exerted.
- Do not run the device for more than 10 minutes at one time.

CLEANING AND MAINTENANCE

- Unplug the appliance. Use a soft, slightly damp cloth to wipe appliance surfaces. Do not allow water or any other liquid to get into the unit.
- Do not use any abrasive detergent or steel wool to clean the iron, as it may scratch the surfaces.
- The components are suitable for cleaning in a dishwasher.

GUARANTEE

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.
- For the detailed warranty conditions, please refer to our service website: service.princess.info



GUIDELINES FOR PROTECTION OF THE ENVIRONMENT

This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

SUPPORT

You can find all available information and spare parts at service.princess.info!

CN 說明書

安全說明

- 生產商對因忽略安全說明而造成的損害不承擔責任。
- 如果電源線損壞，必須由生產商、其服務代理或類似的合格人員更換，以免發生危險。
- 切勿通過拉扯電源線來移動設備，確認電源線沒有纏結。
- 此設備在提供監護或設備安全使用說明並理解所涉及危險的情況下，可供8歲以上的兒童，身體、感官或心智殘障人士，或缺乏經驗和知識的人員使用。不應讓兒童玩弄此設備。不應讓兒童清洗和進行用戶維護，除非他們已超過8歲並且有人監護。
- 必須將設備置放於穩定、平整的表平面上。
- 設備連接電源時必須有人看守。
- 此設備僅宜家用，並且只能用於其專門用途。
- 為保護自己免於觸電，切勿將電源線、電源插頭或設備浸入水或其它液體中。
- 不應讓兒童在無成人監護下使用此設備。
- 更換配件或接近旋轉部件之前應先關閉設備並拔掉電源。

零部件說明

1. 壓汁錐
2. 果汁杯
3. 容量盅
4. 主軸
5. 基座

第一次使用前

- 從盒內取出設備和配件。從設備上去除貼紙、保護膜或塑膠紙。
- 將電源線接入插座。(注:連接設備前，請確定設備上顯示的電壓符合當地的電壓。電壓為 220V-240V 50Hz)
- 首次使用設備之前，請用濕布將所有可拆卸部件擦拭乾淨。千萬不要使用磨蝕性產品。

使用

- 半塊柑橘類水果一壓入壓汁錐，電機即會啟動。
- 在容量盅的出汁口下方放置一個合適的玻璃杯。容量盅的出汁口可以上下調節。不要對壓汁錐施力過大。如果電機的音量明顯增大或轉速明顯降低，說明施加的壓力過大。
- 一次使用時間不得超過10分鐘。

清潔和維護

- 拔掉設備的電源插頭。使用微濕的軟布擦拭設備表面。不要讓水或液體浸入裝置。
- 不要使用任何磨蝕性或鋼絲球清潔貼表面，以防止劃傷表面。
- 本設備的元件可在洗碗機中清潔。

產品擔保

- 本產品被授予24個月的保證期。保修條款的有效性要求產品按照說明書來使用，並用於其專門的目的。此外，還需要提供原始購買（發票、銷售發票或收據）的日期、零售商名稱和產品的編號。
- 要瞭解詳細的保修條件，請參見我們的維修網站：service.princess.info



環保指南

本產品在其使用壽命結束後不應與生活垃圾一起丟棄，必須將其送到電氣和電子家用電器的回收中心。設備上的這個標記、說明書手冊和包裝都提醒你關注這一重要問題。本設備所使用的材料都可以回收利用。通過回收舊的家用電器，你是在對保護我們的環境作出貢獻。有關收集點的資訊，請詢問你當地的政府。

支持

你可以在網站service.princess.info上查找所有的資訊和備件!



service.tristar.eu

Tristar Europe B.V. | Jules Verneweg 87
5015 BH Tilburg | The Netherlands