



EN Instruction manual



Blender Compact Power

01.212070.02.001

## PARTS DESCRIPTION



## IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using your Princess product. By ignoring the safety instructions Princess cannot be held responsible for the damage. When using an electrical appliance, basic safety precautions should always be observed, including the following:

**IMPORTANT: This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children shall not use or play with this appliance. Close supervision is necessary to keep appliance and cord out of reach of children during use.**

### WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Never move the appliance by pulling the cord and make sure the cord does not become entangled. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.

- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- **CAUTION:** In order to avoid hazard, this appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent fire or shock hazard do not expose this appliance to rain or moisture.
- Do not allow children to use the device without supervision.
- Always switch off and remove the power cord from the electrical outlet before changing accessories or approaching parts that move in use.
- Always remove the power cord from the electrical outlet if it is left unattended and before assembling, disassembling or cleaning.
- It is absolutely necessary to keep this appliance clean at all times, because it comes into direct contact with food.
- DO NOT overfill.
- **CAUTION: DO NOT PROCESS HOT FOODS OR HOT LIQUIDS.** Allow hot ingredients to cool before processing.

- Keep hands, hair, clothing, and utensils out of container while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used **ONLY** when the appliance is not running.
- **IMPORTANT:** The chopping blades are very sharp, and must be handled with care. When handling the blades, always hold by the shaft. Failure to do so will result in a risk of laceration.
- **THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.

**FOR HOUSEHOLD USE ONLY**  
**SAVE THESE INSTRUCTIONS**  
[www.princesshome.eu](http://www.princesshome.eu)

## **PARTS DESCRIPTION**

1. 60ml Measuring cup
2. Lid with pouring hole
3. 1000ml Glass jug
4. Blades
5. Speed selector
6. Base

## **BEFORE THE FIRST USE**

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 10cm free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50Hz).
- Never use the blender for longer than 2 minutes continuously. After this, allow the mixer to cool down for 5 minutes.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.

## **USE**

**CAUTION!** The blades (4) in the Princess blender are very sharp, never try it yourself to undo the blades and be careful cleaning them. Avoid all bodily contact with the blades, they can seriously injure you. **WARNING:** Remove utensils prior to processing. Failure to remove may cause the glass jug to be damaged or to shatter, which may cause personal injury.

**WARNING:** Never leave the appliance unattended while in use.

**CAUTION:** Do not blend hot liquids, doing so may cause excessive pressure build up, resulting in risk of the user being burned.

- Place the base unit on a clean, dry, level surface.
- Plug in the power cable to the wall socket.
- The Princess blender has a convenient measuring cup (1), that can be used for measuring ingredients and also acts as a to cover the pouring hole in the lid (2).

- To fit the blender's glass jug (3) onto the main body (6), turn it clockwise until it locks. NOTE: there is only one way to fit the jug in the right position for safety reasons.
- Fill the glass jug (3) with the desired foods (Never fill the glass jug beyond the maximum capacity 1000ml). Do not use the unit without any ingredients inside. Always pour liquids into the blender's glass jug before adding solid ingredients.
- Put the lid (2) including the measuring cup (1) on top of the glass jug (3) and push it down.
- Now you will be able to use the blender's speed selector (5), see the guide below for the different modes. NOTE: Never remove the lid while your blender is running. To add ingredients during operation, either remove the measuring cap or stop the blender first, then open the lid.

**0:** Select this mode to STOP and turns off the blender

**1:** Select this mode for slow blending.

**2:** Select this mode for fast blending.

**P:** Select to PULSE at maximum speed. The blender automatically switches itself off as soon as you release this button, giving you complete control of the task from start to finish. You can also select this mode at the end of a task to emulsify the ingredients. Do not run PULSE for longer than 1 minute, due to possible overheating of the engine. Allow the unit to cool down for 5 minutes before further use.

Table of Suggested Speed:

Speed	Recommended application	Maximum operation time	Hint
1+2	Blending instant juices, soft fruit and cocktails with alcohol with no more than 1000ml	60s	Begin with low speed and increase to high if required
1+2	Blending soup, milkshakes with hard fruit with no more than 1000ml	60s	Begin with low speed and increase to high if required
2	Making sauces, baby food, blending hard fruits or vegetables with no more than 1000ml	60s	
P	Crush Crushing ice cubes with maximum 500ml each time	60s	

EN

## CLEANING AND MAINTENANCE

- Always remove the plug from the socket when the device is to be cleaned.
- Use a soft, slightly damp cloth to wipe appliance surfaces.
- Clean the accessories with warm soapy water to avoid bacterial growth.
- The components are not suitable for cleaning in a dishwasher. If exposed to heat or caustic cleaners they might become misshapen or discoloured.

- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device itself is **not** dishwasher proof.
- **CAUTION!** The blades in the glass jug are very sharp, never try it yourself to undo the blades and be careful cleaning them. Avoid all bodily contact with the blades, they can seriously injure you.

## ENVIRONMENT



■ This appliance should not be put into the domestic garbage at the end of its life, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recycling.

**FOR HOUSEHOLD USE ONLY**

**SAVE THESE INSTRUCTIONS**

## Support

[www.princesshome.eu](http://www.princesshome.eu)

<b>smartwares</b> Europe  Jules Verneweg 87 5015 BH Tilburg The Netherlands  service.smartwares.eu	NL: 089 5945051 Lokaal service
	BE: 079 4810949NLI Lokaal service
	BE: 079 481545050 ToonHout
	FR: 0825 560 650 1800min
	DE: +49 30 1805 070762
	1800Min. de Princess
	Model max. 4300-3600
	UK: +44 30 345 353 1331
	ES: +34 938427589

CUSTOMER SERVICE



[WEEE Logo]



[www.princesshome.eu](http://www.princesshome.eu)

© Princess 2018