





EN Instruction manual

AR دليل الاستخدام



Water Dispenser  
01.283020.04.001

PARTS DESCRIPTION / وصف الأجزاء

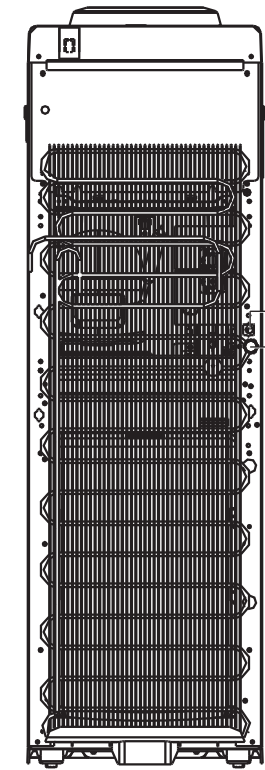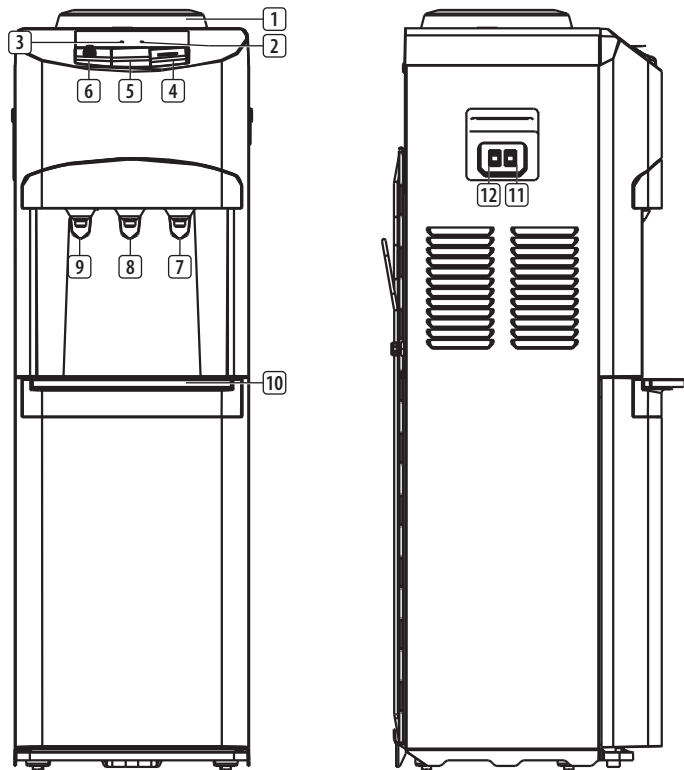

[WEEE Logo]

service.princess.info

© Princess 2015

## AR EN Instruction manual

السلامة

- عند إهمال تعليمات السلامة لا تتحمل الشركة المُصنِّعة أية مسؤولية عن وقوع تلفيات.
- في حالة تلف سلك الإمداد بالطاقة، يجب استبداله بواسطة الشركة المصنعة أو وكيل الصيانة أو أي فني مؤهل لتجنب التعرض إلى المخاطر.
- لا تحرك الجهاز مطلقاً عن طريق سحب السلك، وتأكد من أن السلك لن يصبح متشابكاً.
- يجب وضع الجهاز على سطح ثابت ومستو.
- تم تصميم هذا الجهاز للاستخدام المنزلي فقط وللأغراض التي صُنع من أجلها. ينبغي عدم استخدام هذا الجهاز بواسطة أطفال حتى عمر 8 سنوات. يمكن استخدام هذا الجهاز بواسطة الأطفال من سن 8 سنوات وما فوق والأشخاص ذوي القدرات الجسدية أو الحسية أو العقلية المحدودة أو الذين يفتقرون إلى الخبرة والمعرفة إذا تم الإشراف عليهم أو إرشادهم بشأن كيفية استخدام الجهاز بطريقة آمنة وفهمهم للمخاطر المحتملة. يجب على الأطفال عدم اللعب بهذا الجهاز. احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 8 سنوات. يجب على الأطفال عدم القيام بعملية التنظيف وصيانة المستخدم إلا إذا كانوا أكبر من 8 سنوات وفي وجود من يشرف عليهم.
- لحماية نفسك من التعرض إلى صدمة كهربائية، لا تلمس السلك أو القابس أو الجهاز في الماء أو في أية سوائل أخرى.
- هذا الجهاز مخصص للاستخدام المنزلي وللأغراض التي صُنع من أجلها. يمكن استخدام هذا الجهاز بواسطة الأطفال من سن 3 سنوات فأكثر إذا تم الإشراف عليهم أو إرشادهم بشأن كيفية استخدام الجهاز بطريقة آمنة وفهمهم للمخاطر المحتملة. يجب على الأطفال عدم القيام بعملية التنظيف وصيانة المستخدم إلا إذا كانوا أكبر من 8 سنوات فأكثر وفي وجود من يشرف عليهم. احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 3 سنوات.



- قد يسخن السطح أثناء الاستخدام.
- لا تستخدم الجهاز إلا مع الموصل المناسب فقط.
- يمكن استخدام هذا الجهاز بواسطة الأطفال من عمر 3 سنوات فأكثر إذا تم الإشراف عليهم أو إرشادهم بشأن كيفية استخدام الجهاز بطريقة آمنة وفهمهم للمخاطر المحتملة. يجب على الأطفال عدم القيام بعملية التنظيف وصيانة المستخدم إلا إذا كانوا أكبر من 8 سنوات فأكثر وفي وجود من يشرف عليهم. احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 3 سنوات.

وصف الأجزاء

1. سائل القارورة
2. لمبة مؤشر التبريد
3. لمبة مؤشر التسخين
4. زر الماء البارد
5. زر درجة حرارة الغرفة
6. زر الماء الساخن
7. زر الماء البارد
8. صنبور الماء بدرجة حرارة الغرفة
9. صنبور الماء الساخن
10. مجمع الماء
11. مفتاح التسخين
12. مفتاح التبريد
13. سلك الطاقة
14. مخرج الماء الساخن

قبل الاستخدام الأول

- تم تركيب النموذج على أرض مستوية قوية بالقدر الكافي لدعمه عندما يكون مليء بالكامل.
- حافظ على وجود هذه الماكينة في بيئة جافة وتجنب ضوضاء الشبكات الجارية. حافظ على وجود الحجاب الخلفي من الماكينة بعيداً عن أي شيء.
- تأكد من أن النموذج ووضعه بشكل عمودي لمدة ساعتين كحد أدنى قبل وضع قارورة الماء ووضع القابس في المقبس وتشغيل النموذج.
- لا تقم أبداً بقلب الماكينة رأساً على عقب، ولا إمالتها لما يزيد عن 45 درجة.
- تم تنظيف نموذج الماء مسبقاً في المصنع، ولكن يجب تنظيف الحزان ومخطوط الماء بماء العذب قبل الاستخدام.

الاستخدام

- بعد التأكد من سلامة الاستخدام مع القوارير سعة 3 أو 5 جالون.
- اخرج المقبس من القارورة.
- أدخل القارورة بشكل عمودي في حامل القارورة أعلى الماكينة. لا تقم بتوصيل سلك الطاقة أو الضغط على المفتاح الآخر حتى يخرج الماء من صنبور الماء الساخن.
- أدخل القابس في المقبس، ثم قم بتشغيل مفتاح الطاقة. ستظهر لمبات المؤشر.
- اخرج القارورة بشكل عمودي باستخدام اليدين عندما تكون القارورة فارغة.
- تجنب إلقاء القارورة بالماكينة، لا تقم بتوصيل سلك الطاقة وتشغيل مفتاح التسخين إلا عندما يخرج الماء من صنبور الماء الساخن.

نظرة ثلاث دقائق بعد تشغيل المفتاح قبل استخدام الجهاز

- عندما لا تكون هناك حاجة إلى الماء البارد أو الساخن لمدة أطول، يُنصح بإيقاف هذه الوظائف باستخدام المفاتيح المناسبة لتوفير الطاقة.
- في حالة عدم استخدام هذه الماكينة لمدة طويلة، قم بإيقاف تشغيل الماكينة، ثم قم بسحب القابس من المقبس وقم بتصريف الماء الخلفي من المصنف في الخيارات الخلفي من الماكينة. من المهم أن تدفع الماء الساخن يود قبل تصريف الماء من الماكينة.
- لا تقم أبداً بتشغيل الماكينة (أو إيقاف تشغيلها عن طريق إيقاف تشغيل القابس في أو من المقبس).
- لا تقم أبداً بقلب الماكينة رأساً على عقب، ولا إمالتها لما يزيد عن 45 درجة.
- عند استناد الماكينة بسبب التلغ، يرجى إيقاف مفتاح التبريد والانتظار ما يقرب من أربع ساعات قبل تشغيلها مرة أخرى.
- للحصول على الماء من الجهاز، ضع كوب أو فحان زجاجي تحت أحد الصائير واضغط واستمر في الضغط على الزر الملائم.
- عند استخدام وظيفة الماء الساخن، يرجى تحريك المفاح الآخر الموجود على الزر قبل الضغط والاستمرار في الضغط على الزر. يرجى توضع إخبار عند التعامل مع الماء الساخن.
- يرجى تفريغ مجمع الماء بانتظام.

التنظيف والصيانة

- قبل التنظيف، يرجى التأكد من أن مفاتيح الطاقة في الوضع "إيقاف التشغيل" وأن سلك الطاقة تم تزع من مخرج الطاقة الموجود في الخلف.
- اترك النموذج لمدة ساعة واحدة قبل تنظيفه للسماح للحزان الساخن أن يبرد.
- لا تستخدم أبداً المنظفات أو المواد الكيميائية القاسية بوضحة لتنظيف حزمات الماء.
- لا تقم برش الماء مباشرة على سطح المنتج.
- تم تصميم الحجاب الأمامي والخلفي للتمتع بقطعة قماش رطبة ناعمة.
- في حالة تراكم الأتربة أي مواد أخرى خارجية على مخرجك، قم بمسحه بقطعة قماش رطبة ناعمة. لا تستخدم أبداً اللوف الحشن أو الألياف السليكية أو مساحيق التنظيف القوية. يجب أن يتم إفراغ أبواب المكثف من الهواء وهي موجودة في الحجاب الخلفي من النموذج.
- تم إفراغ قارورة الماء (أو بقلب الأمثل)، ثم تم طراؤها من النموذج.
- تم تصريف الماء البارد من الخزان عن طريق طفق الصائير والتبريد وإزالة السدادة المصنوعة من السيليكون بالخارج والخلفي من النموذج. قم بتصريف الماء في دلو أو حاوية ما يقرب من 0.5 جالون. أعد تركيب السدادة المصنوعة من السيليكون وغطاء التصريف.
- تم إزالة الرواسب المعدنية وحلط مواد التنظيف الكهوية من نصف جالون من الماء مع نصف جالون من الخل أو واحد جالون من الماء مع كوبين من بيورات حمض الستريك.
- تم تركيب قارورة ماء كاملة وإخراج على الأقل لتر ماء لتصريف جميع بقايا المحلول المقيم. قم بتصريف حزان الماء الساخن مرة أخرى.
- بعد ذلك يمكنك البدء في استخدام الجهاز مرة أخرى. يجب أن يتم تنظيف وتعميم الجهاز كل ثلاثة أشهر.

الضمان

- يحمل هذا المنتج ضمان لمدة 24 شهر. يعتبر هذا الضمان ساريًا طالما تم استخدام المنتج حسب التعليمات والأغراض التي صُنع من أجلها الجهاز. إضافة إلى ذلك، يجب إرسال إثبات الشراء الأصلي (فاتورة أو ورقة بيع أو إيصال) مع تاريخ الشراء واسم بائع الترخية ورقم المنتج.



ويجب العرض الثابت والظيق، يجب ألا يتم وضع هذا الجهاز في سلة النفايات المنزلية في نهاية عمره الافتراضي، ولكن يجب تقديمه إلى نقطة الترخية لإعادة تدوير الأجهزة المنزلية الكهربائية والإلكترونية. إن كلاً من بائع المنتج والمستهلك مسؤولان عن التخلص من هذه السلة الممتلئة. يمكن إعادة تدوير المواد المستخدمة في هذا الجهاز. من خلال إعادة تدوير الأجهزة المنزلية، فإنك تقدم إسهام هام للحفاظ على البيئة التي نعيش فيها. استفسر من السلطات المحلية عن نقطة التجميع.

## SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments.
  - By clients in hotels, motels and other residential type environments.
  - Bed and breakfast type environments.
  - Farm houses.
- Children shall not play with the appliance.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Surface are liable to get hot during use.
- Only use the appliance with the appropriate connector.
- This appliance can be used by children aged from 3 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 3 years.

- Never turn the machine upside down, and never tilt it for more than 45 degrees.
- When the machine is blocked by ice, please turn off the cooling switch and wait approximately 4 hours before turning it on again.
- To tap water from the device, place a glass or cup under one of the taps and push and hold the corresponding button.
- When using the hot water function, please slide the red switch on the button before pressing and holding the button. Please be careful when handling hot water.
- Please empty the water collector regularly.

- Before cleaning, please make sure the power switches are in the "off" position, and that the power cord is unplugged from the wall outlet.
- Let dispenser stand for one hour before cleaning to allow hot tank to cool.
- Never use detergent or chemicals harmful to health to clean the water tanks.
- Do not directly spray water on the surface of the product.
- Wipe the front and back of the product with water-soaked soft cloth.
- If dust or another exterior substance has accumulated on the condenser, wipe it off with water-soaked soft cloth. Never use scouring pads, steel wool or scouring powder. Condenser tubes located on back of dispenser should be vacuumed.
- Empty water bottle (if applicable) and then remove it from the dispenser.
- Drain the cold water reservoir by dispensing water through the cold water faucet.
- Drain hot tank by unscrewing drain cap and removing silicone plug at rear of the dispenser. Drain water into a bucket or container (approx. 0.5 gallon). Reinstall silicone plug and drain cap.
- Remove the bottle supporter. Thoroughly clean reservoir with a mild chlorine sanitizing solution. To make the sanitizing solution, simply add 1/8 teaspoon of ordinary 6.0% maximum unscented household bleach to a 2-quart pitcher filled with tap or bottled water. Do not add concentrated bleach to the dispenser as this could damage the unit. Wipe upper reservoir support with a clean rag. Using a bottle brush and the sanitizing solution.
- To remove mineral deposits, mix a cleaning solution of 2 quarts of water with 2 quarts of vinegar or mix 1 gallon of water with 2 cups of citric acid crystals.
- Install a full water bottle and dispense at least a liter of water to completely drain any remains of the sanitizing solution. Drain the hot tank again.
- After this you can start using the device again. The device should be cleaned and sanitized every three months.

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.

ENVIRONMENT

- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

- Before cleaning, please make sure the power switches are in the "off" position, and that the power cord is unplugged from the wall outlet.
- Let dispenser stand for one hour before cleaning to allow hot tank to cool.
- Never use detergent or chemicals harmful to health to clean the water tanks.
- Do not directly spray water on the surface of the product.
- Wipe the front and back of the product with water-soaked soft cloth.
- If dust or another exterior substance has accumulated on the condenser, wipe it off with water-soaked soft cloth. Never use scouring pads, steel wool or scouring powder. Condenser tubes located on back of dispenser should be vacuumed.
- Empty water bottle (if applicable) and then remove it from the dispenser.
- Drain the cold water reservoir by dispensing water through the cold water faucet.
- Drain hot tank by unscrewing drain cap and removing silicone plug at rear of the dispenser. Drain water into a bucket or container (approx. 0.5 gallon). Reinstall silicone plug and drain cap.
- Remove the bottle supporter. Thoroughly clean reservoir with a mild chlorine sanitizing solution. To make the sanitizing solution, simply add 1/8 teaspoon of ordinary 6.0% maximum unscented household bleach to a 2-quart pitcher filled with tap or bottled water. Do not add concentrated bleach to the dispenser as this could damage the unit. Wipe upper reservoir support with a clean rag. Using a bottle brush and the sanitizing solution.
- To remove mineral deposits, mix a cleaning solution of 2 quarts of water with 2 quarts of vinegar or mix 1 gallon of water with 2 cups of citric acid crystals.
- Install a full water bottle and dispense at least a liter of water to completely drain any remains of the sanitizing solution. Drain the hot tank again.
- After this you can start using the device again. The device should be cleaned and sanitized every three months.

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.

ENVIRONMENT

- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

- Before cleaning, please make sure the power switches are in the "off" position, and that the power cord is unplugged from the wall outlet.
- Let dispenser stand for one hour before cleaning to allow hot tank to cool.
- Never use detergent or chemicals harmful to health to clean the water tanks.
- Do not directly spray water on the surface of the product.
- Wipe the front and back of the product with water-soaked soft cloth.
- If dust or another exterior substance has accumulated on the condenser, wipe it off with water-soaked soft cloth. Never use scouring pads, steel wool or scouring powder. Condenser tubes located on back of dispenser should be vacuumed.
- Empty water bottle (if applicable) and then remove it from the dispenser.
- Drain the cold water reservoir by dispensing water through the cold water faucet.
- Drain hot tank by unscrewing drain cap and removing silicone plug at rear of the dispenser. Drain water into a bucket or container (approx. 0.5 gallon). Reinstall silicone plug and drain cap.
- Remove the bottle supporter. Thoroughly clean reservoir with a mild chlorine sanitizing solution. To make the sanitizing solution, simply add 1/8 teaspoon of ordinary 6.0% maximum unscented household bleach to a 2-quart pitcher filled with tap or bottled water. Do not add concentrated bleach to the dispenser as this could damage the unit. Wipe upper reservoir support with a clean rag. Using a bottle brush and the sanitizing solution.
- To remove mineral deposits, mix a cleaning solution of 2 quarts of water with 2 quarts of vinegar or mix 1 gallon of water with 2 cups of citric acid crystals.
- Install a full water bottle and dispense at least a liter of water to completely drain any remains of the sanitizing solution. Drain the hot tank again.
- After this you can start using the device again. The device should be cleaned and sanitized every three months.

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.

ENVIRONMENT

- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

- Before cleaning, please make sure the power switches are in the "off" position, and that the power cord is unplugged from the wall outlet.
- Let dispenser stand for one hour before cleaning to allow hot tank to cool.
- Never use detergent or chemicals harmful to health to clean the water tanks.
- Do not directly spray water on the surface of the product.
- Wipe the front and back of the product with water-soaked soft cloth.
- If dust or another exterior substance has accumulated on the condenser, wipe it off with water-soaked soft cloth. Never use scouring pads, steel wool or scouring powder. Condenser tubes located on back of dispenser should be vacuumed.
- Empty water bottle (if applicable) and then remove it from the dispenser.
- Drain the cold water reservoir by dispensing water through the cold water faucet.
- Drain hot tank by unscrewing drain cap and removing silicone plug at rear of the dispenser. Drain water into a bucket or container (approx. 0.5 gallon). Reinstall silicone plug and drain cap.
- Remove the bottle supporter. Thoroughly clean reservoir with a mild chlorine sanitizing solution. To make the sanitizing solution, simply add 1/8 teaspoon of ordinary 6.0% maximum unscented household bleach to a 2-quart pitcher filled with tap or bottled water. Do not add concentrated bleach to the dispenser as this could damage the unit. Wipe upper reservoir support with a clean rag. Using a bottle brush and the sanitizing solution.
- To remove mineral deposits, mix a cleaning solution of 2 quarts of water with 2 quarts of vinegar or mix 1 gallon of water with 2 cups of citric acid crystals.
- Install a full water bottle and dispense at least a liter of water to completely drain any remains of the sanitizing solution. Drain the hot tank again.
- After this you can start using the device again. The device should be cleaned and sanitized every three months.

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.

- Before cleaning, please make sure the power switches are in the "off" position, and that the power cord is unplugged from the wall outlet.
- Let dispenser stand for one hour before cleaning to allow hot tank to cool.
- Never use detergent or chemicals harmful to health to clean the water tanks.
- Do not directly spray water on the surface of the product.
- Wipe the front and back of the product with water-soaked soft cloth.
- If dust or another exterior substance has accumulated on the condenser, wipe it off with water-soaked soft cloth. Never use scouring pads, steel wool or scouring powder. Condenser tubes located on back of dispenser should be vacuumed.
- Empty water bottle (if applicable) and then remove it from the dispenser.
- Drain the cold water reservoir by dispensing water through the cold water faucet.
- Drain hot tank by unscrewing drain cap and removing silicone plug at rear of the dispenser. Drain water into a bucket or container (approx. 0.5 gallon). Reinstall silicone plug and drain cap.
- Remove the bottle supporter. Thoroughly clean reservoir with a mild chlorine sanitizing solution. To make the sanitizing solution, simply add 1/8 teaspoon of ordinary 6.0% maximum unscented household bleach to a 2-quart pitcher filled with tap or bottled water. Do not add concentrated bleach to the dispenser as this could damage the unit. Wipe upper reservoir support with a clean rag. Using a bottle brush and the sanitizing solution.
- To remove mineral deposits, mix a cleaning solution of 2 quarts of water with 2 quarts of vinegar or mix 1 gallon of water with 2 cups of citric acid crystals.
- Install a full water bottle and dispense at least a liter of water to completely drain any remains of the sanitizing solution. Drain the hot tank again.
- After this you can start using the device again. The device should be cleaned and sanitized every three months.

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.

- Before cleaning, please make sure the power switches are in the "off" position, and that the power cord is unplugged from the wall outlet.
- Let dispenser stand for one hour before cleaning to allow hot tank to cool.
- Never use detergent or chemicals harmful to health to clean the water tanks.
- Do not directly spray water on the surface of the product.
- Wipe the front and back of the product with water-soaked soft cloth.
- If dust or another exterior substance has accumulated on the condenser, wipe it off with water-soaked soft cloth. Never use scouring pads, steel wool or scouring powder. Condenser tubes located on back of dispenser should be vacuumed.
- Empty water bottle (if applicable) and then remove it from the dispenser.
- Drain the cold water reservoir by dispensing water through the cold water faucet.
- Drain hot tank by unscrewing drain cap and removing silicone plug at rear of the dispenser. Drain water into a bucket or container (approx. 0.5 gallon). Reinstall silicone plug and drain cap.
- Remove the bottle supporter. Thoroughly clean reservoir with a mild chlorine sanitizing solution. To make the sanitizing solution, simply add 1/8 teaspoon of ordinary 6.0% maximum unscented household bleach to a 2-quart pitcher filled with tap or bottled water. Do not add concentrated bleach to the dispenser as this could damage the unit. Wipe upper reservoir support with a clean rag. Using a bottle brush and the sanitizing solution.
- To remove mineral deposits, mix a cleaning solution of 2 quarts of water with 2 quarts of vinegar or mix 1 gallon of water with 2 cups of citric acid crystals.
- Install a full water bottle and dispense at least a liter of water to completely drain any remains of the sanitizing solution. Drain the hot tank again.
- After this you can start using the device again. The device should be cleaned and sanitized every three months.

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.

- Before cleaning, please make sure the power switches are in the "off" position, and that the power cord is unplugged from the wall outlet.
- Let dispenser stand for one hour before cleaning to allow hot tank to cool.
- Never use detergent or chemicals harmful to health to clean the water tanks.
- Do not directly spray water on the surface of the product.
- Wipe the front and back of the product with water-soaked soft cloth.
- If dust or another exterior substance has accumulated on the condenser, wipe it off with water-soaked soft cloth. Never use scouring pads, steel wool or scouring powder. Condenser tubes located on back of dispenser should be vacuumed.
- Empty water bottle (if applicable) and then remove it from the dispenser.
- Drain the cold water reservoir by dispensing water through the cold water faucet.
- Drain hot tank by unscrewing drain cap and removing silicone plug at rear of the dispenser. Drain water into a bucket or container (approx. 0.5 gallon). Reinstall silicone plug and drain cap.
- Remove the bottle supporter. Thoroughly clean reservoir with a mild chlorine sanitizing solution. To make the sanitizing solution, simply add 1/8 teaspoon of ordinary 6.0% maximum unscented household bleach to a 2-quart pitcher filled with tap or bottled water. Do not add concentrated bleach to the dispenser as this could damage the unit. Wipe upper reservoir support with a clean rag. Using a bottle brush and the sanitizing solution.
- To remove mineral deposits, mix a cleaning solution of 2 quarts of water with 2 quarts of vinegar or mix 1 gallon of water with 2 cups of citric acid crystals.
- Install a full water bottle and dispense at least a liter of water to completely drain any remains of the sanitizing solution. Drain the hot tank again.
- After this you can start using the device again. The device should be cleaned and sanitized every three months.

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.

- Before cleaning, please make sure the power switches are in the "off" position, and that the power cord is unplugged from the wall outlet.
- Let dispenser stand for one hour before cleaning to allow hot tank to cool.
- Never use detergent or chemicals harmful to health to clean the water tanks.
- Do not directly spray water on the surface of the product.
- Wipe the front and back of the product with water-soaked soft cloth.
- If dust or another exterior substance has accumulated on the condenser, wipe it off with water-soaked soft cloth. Never use scouring pads, steel wool or scouring powder. Condenser tubes located on back of dispenser should be vacuumed.
- Empty water bottle (if applicable) and then remove it from the dispenser.
- Drain the cold water reservoir by dispensing water through the cold water faucet.
- Drain hot tank by unscrewing drain cap and removing silicone plug at rear of the dispenser. Drain water into a bucket or container (approx. 0.5 gallon). Reinstall silicone plug and drain cap.
- Remove the bottle supporter. Thoroughly clean reservoir with a mild chlorine sanitizing solution. To make the sanitizing solution, simply add 1/8 teaspoon of ordinary 6.0% maximum unscented household bleach to a 2-quart pitcher filled with tap or bottled water. Do not add concentrated bleach to the dispenser as this could damage the unit. Wipe upper reservoir support with a clean rag. Using a bottle brush and the sanitizing solution.
- To remove mineral deposits, mix a cleaning solution of 2 quarts of water with 2 quarts of vinegar or mix 1 gallon of water with 2 cups of citric acid crystals.
- Install a full water bottle and dispense at least a liter of water to completely drain any remains of the sanitizing solution. Drain the hot tank again.
- After this you can start using the device again. The device should be cleaned and sanitized every three months.

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.

- Before cleaning, please make sure the power switches are in the "off" position, and that the power cord is unplugged from the wall outlet.
- Let dispenser stand for one hour before cleaning to allow hot tank to cool.
- Never use detergent or chemicals harmful to health to clean the water tanks.
- Do not directly spray water on the surface of the product.
- Wipe the front and back of the product with water-soaked soft cloth.
- If dust or another exterior substance has accumulated on the condenser, wipe it off with water-soaked soft cloth. Never use scouring pads, steel wool or scouring powder. Condenser tubes located on back of dispenser should be vacuumed.
- Empty water bottle (if applicable) and then remove it from the dispenser.
- Drain the cold water reservoir by dispensing water through the cold water faucet.
- Drain hot tank by unscrewing drain cap and removing silicone plug at rear of the dispenser. Drain water into a bucket or container (approx. 0.5 gallon). Reinstall silicone plug and drain cap.
- Remove the bottle supporter. Thoroughly clean reservoir with a mild chlorine sanitizing solution. To make the sanitizing solution, simply add 1/8 teaspoon of ordinary 6.0% maximum unscented household bleach to a 2-quart pitcher filled with tap or bottled water. Do not add concentrated bleach to the dispenser as this could damage the unit. Wipe upper reservoir support with a clean rag. Using a bottle brush and the sanitizing solution.
- To remove mineral deposits, mix a cleaning solution of 2 quarts of water with 2 quarts of vinegar or mix 1 gallon of water with 2 cups of citric acid crystals.
- Install a full water bottle and dispense at least a liter of water to completely drain any remains of the sanitizing solution. Drain the hot tank again.
- After this you can start using the device again. The device should be cleaned and sanitized every three months.

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.