



EN Instruction manual
CN 說明書



Ice Cube Maker
01.283079.16.001

PARTS DESCRIPTION / 零部件說明



[WEEE Logo]



EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING: fill with potable water only.
- WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

PARTS DESCRIPTION

- Ice full indicator
- Add water indicator
- Work indicator
- On/off button
- Water reservoir
- Ice storage box
- Water outlet

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 20 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use
- Before connecting the appliance to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Be sure the appliance stays in the upright position during transportation.
- Do not use the appliance in ambient temperatures lower than 5 °C.

USE

- Pour the desired volume of water into water reservoir, make sure the water level will not exceed te max. sign.
- Turn on the appliance by using the on/off button, the compressor will start working and the operation indicator will illuminate.

CLEANING AND MAINTENANCE

- Always remove the plug from the socket when the device will be cleaned.
- Never immerse the base in water or any other liquid. The device is not dishwasher proof.
- Clean the base with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Pour clean water into the water reservoir, use a clean cloth to wipe water reservoir around, open the water outlet to drain off the water.

GUARANTEE

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.
- For the detailed warranty conditions, please refer to our service website: service.princess.info

ENVIRONMENT

♻️ This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Support

You can find all available information and spare parts at <http://www.service.princess.info/>

ZH-CHT 說明手冊

安全

- 若忽視安全指示，製造商恕不負損壞責任。
- 若電源線受損，須由製造商、其服務代理商或相似的合格人員更換受損的電源線，避免危險。
- 切勿以拉扯電源線的方式搬運電器，並確定電源線未纏繞在一起。
- 電器須放置於穩固、平坦的表面上。
- 使用者不可在裝置已接上電源時離去，讓裝置無人看管。
- 本電器只可供家庭用途使用，並僅限用於原本的製造用途。

- 8 歲以上兒童以及生理、感官或心智不健全之人，或缺乏經驗知識之人，須有人在旁監督，或已指示如何安全使用本電器，且瞭解涉及的危險後，才可使用電器。兒童不可玩耍電器。除非是 8 歲以上的兒童，且有人在旁監督，否則兒童不應進行清潔與使用保養工作。
- 若要保護自己避免觸電，請勿將電源線、插頭或電器浸泡在水中或任何液體中。
- 警告：除了製造商建議的方式之外，請勿使用機械裝置或其他方式加速除霜過程。
- 警告：僅能添加飲用水。
- 警告：請勿堵住電器外殼或內部結構中的通風孔。

零件說明

- 冰塊已滿指示燈
- 加水指示燈
- 運轉指示燈
- On/Off 按鈕
- 裝水容器
- 儲冰盒
- 出水口

首次使用前

- 請將電器及配件自紙箱中取出，撕下裝置的貼紙、保護膜或塑膠膜。
- 請將裝置放置於平坦、穩固的表面上，並確保裝置周圍至少保留 20 公分的間距。本裝置不適合安裝於櫥櫃或戶外之用。
- 將電器接上電源之前，請直放靜置電器約 2 小時。此可減少在運送時因搬運而造成冷卻系統故障的可能性。
- 請確定電器在運送時直立固定。
- 請勿在周遭溫度低於 5 °C 下使用電器。

使用

- 請將所需的水量倒入裝水容器中，請確定水位未超過上限記號。
- 使用 On/Off 按鈕開啟電器電源，壓縮機將開始運轉，且指示燈亦將亮起。

清潔與保養

- 清潔裝置時，請務必從插座拔下插頭。
- 切勿將底座浸泡在水中或任何其他液體中。本裝置不適合使用洗碗機清洗。
- 使用濕布清潔底座。切勿使用刺激性與磨蝕性清潔劑、菜瓜布或鋼絲刷，以免使裝置受損。
- 將乾淨的水倒入裝水容器中、使用乾淨的布擦拭裝水容器，然後打開排水口排水。

保證

- 本產品享有 24 個月保固。只要產品依據指示使用，且用於原本的製造用途，您的保固仍然有效。此外，原始購買證明（發票、銷售單或收據）要附上購買日期、零售商名稱及產品項號號文。
- 如需詳盡的保固條件，請參閱本公司的服務網站：service.princess.info

環境

♻️ 本電器不可在使用壽命結束時以家庭廢棄物處理，而是要棄置於回收電器電子家用電器的集中回收處。電器、使用手冊及包裝上的符號主要用於引起您對於重要議題的注意。本電器採用可回收的材質。您可回收一手家用電器，對環境保護盡一份心力。請向當地主管機關詢問相關的回收處資訊。

支援

您可在 <http://www.service.princess.info/> 網站中找到所有可用資訊與備用零件！



service.princess.info

© Princess 2014