



EN Instruction manual

CN 說明書



Multicooker

01.172668.02.001 / 01.172669.02.001

PARTS DESCRIPTION / 零部件說明



[WEEE Logo]



## EN Instruction manual

### SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Only use the appliance with the appropriate connector.
- The connector must be removed before the appliance will be cleaned, please make sure the inlet is completely dry before the unit will be used again.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments.
  - Bed and breakfast type environments.
  - Farm houses.
- Disconnect the mains plug from the mains when the appliance is not in use, before assembly or disassembly and before cleaning and maintenance.
- Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- Children shall not play with the appliance.



Surface are liable to get hot during use.

### PARTS DESCRIPTION

- Switch
- Handle
- Indication light
- Lid
- Lid handle
- Pot body
- Rack
- Basket
- Detachable power cord

### BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- CAUTION: hot surface
  - Make sure the temperature is at "OFF" before you plug in connector to the main body.
- The indicator light will light up intermittently indicated the appliance is adjusting the temperature which is normal.
- In order to cook food thoroughly, recommend to cover the lid when cook.
- Use wooden or silicone spatula to flip or stir the food.

### USE

The multi cooker can be used with the following settings:

Function	Setting
Keep warm	Low
Boil	Med
Steam/Slow cook	Med
Grill/Stir-fry	High
Roast	High
Deep Fry	High
Hot pot	High

Keep warm function

- This setting will keep any previously cooked food warm. Please ensure that all food is fully cooked before using the keep warm function.
- Turn the settings knob to low to warm the food.

### Boil function

- With this function you can boil any type of food.
- Place the items to be boiled inside the pot and fill the device with the right amount of water. Place the lid on the bowl.
- Turn the settings knob to the med position to allow the food to be boiled until fully cooked.
- When finished cooking turn the knob to the off position and let the multi cooker cool down before cleaning.

### Steam/Slow Cook function

- This function is ideal for steaming food.
- Put the right amount of water in the cooking pot.
- Place the food to be steamed on the steaming rack.
- Place the lid on the bowl and turn the knob to med.
- Ensure that the multi cooker is not left unattended when steaming food to check that the unit doesn't boil dry.
- When finished cooking turn the knob to the off position and let the multi cooker cool down before cleaning.

### Slow Cook

- The slow cook function is ideal for simmering food.
- Place the ingredients inside the pot and fill with some water, place the lid on the bowl.
- Turn the setting knob to the high position first until the water reaches boiling point, after that turn the knob to med position to allow the ingredients to be simmered until fully cooked.
- When finished cooking turn the knob to the off position and let the multi cooker cool down before cleaning.

### Grill/Stir-fry function

- Use this setting to grill/frying food.
- Place the food to be grilled in the multi cooker along with the required amount of cooking oil or butter.
- Turn the knob to the high position and let it grill until the food is fully cooked.
- When finished cooking turn the knob to the off position and let the multi cooker cool down before cleaning.

### Stir-fry

- Place the required amount of cooking oil or butter in the multi cooker and turn the knob to the high position.
- Add the ingredients to the very hot oil / butter while stirring.
- When finished cooking turn the knob to the off position and let the multi cooker cool down before cleaning.

### Roast function

- Oil the food to be roasted and place it in the multi cooker.
- Turn the knob to high and prepare the food until it's fully cooked.
- When finished cooking turn the knob to the off position and let the multi cooker cool down before cleaning.

### Deep fry function

- To deep fry food place the right amount of cooking oil in the multi cooker.
- Turn the knob to the high position and place the food to be cooked in the basket.
- Once the oil has reached cooking temperature, carefully put the basket into the oil until the food is completely cooked.
- Caution: never let the multi cooker unattended because the oil will be very hot.
- When finished cooking turn the knob to the off position and let the multi cooker cool down before cleaning.

### Hot pot

- Fill the multi cooker with the right amount of water, turn the setting knob to high position until the water reaches boiling point.
- Put the meat you want to cook in the bowl and put the lid on top of the multi cooker
- Once the water reaches boiling point again and the meat is fully cooked you can add desired ingredients based on personal taste.
- When finished cooking turn the knob to the off position and let the multi cooker cool down before cleaning.

### CLEANING AND MAINTENANCE

- Before cleaning or maintenance, always switch off the appliance, remove the mains plug from the wall socket and wait until the appliance has cooled down.
- Do not immerse the appliance in water or any other liquids for cleaning.
- Clean the accessories in hot soapy water. Pour some warm water into the multi cooker and mix with detergent. Use soft cloth to clean, pour out the water and dry using a soft cloth. After that rinse the multi cooker and let it dry.
- Clean the base with a clean, dry cloth.

### GUARANTEE

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.
- For the detailed warranty conditions, please refer to our service website: service.princess.info

### ENVIRONMENT



- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

### Support

You can find all available information and spare parts at <http://www.service.princess.info/>!

## ZH-CHT 說明手冊

### 安全

- 若忽視安全指示，製造商恕不負損壞責任。
- 若電源線受損，須由製造商、其服務代理商或相似的合格人員更換受損的電源線，避免危險。
- 切勿以拉扯電源線的方式搬運電器，並確定電源線未纏繞在一起。
- 電器須放置於穩固、平坦的表面上。
- 使用者不可在裝置已接上電源時離去，讓裝置無人看管。
- 本電器只可供家庭用途使用，並僅限用於原本的製造用途。
- 請勿讓 0 歲至 8 歲的兒童使用此設備。8 歲以上的兒童可在持續受到監督的情況下使用此設備。生理、感官或心智不健全之人，或缺乏經驗知識之人，須有人在旁監督，或已指示如何安全使用本電器，且瞭解涉及的危險後，才可使用電器。兒童不可玩耍電器。請讓 8 歲以下兒童遠離本電器及其電源線。8 歲以上的兒童且有成人在旁監督，才可進行清潔與保養工作。
- 若要保護自己避免觸電，請勿將電源線、插頭或電器浸泡在水中或任何液體中。

- 本設備不適合透過外部定時器或個別遙控系統的方式操作。
- 務必透過適當接頭使用本電器。
- 清潔本電器之前，務必先拔下接頭；請先確定入口徹底乾燥，再繼續使用本電器。
- 本電器旨在在家中與相似的應用中使用，例如：
  - 商店、辦公室及其他工作環境中的員工廚房區。
  - 由飯店、汽車旅館及其他住宅式環境中的客戶使用。
  - 民宿。
  - 農家。
- 不使用本設備時、組裝或拆卸前，以及清潔與保養前請拔除電源插頭。
- 烹飪設備應透過固定握把（若有）維持平穩姿勢，以避免高溫湯汁濺出。
- 兒童不可玩耍電器。



使用中本產品表面可能很燙。

### 零件說明

- 開關
- 握把
- 指示燈
- 外蓋
- 外蓋握把
- 鍋體
- 金屬架
- 金屬籃
- 可拆卸電源線

### 首次使用前

- 請將電器及配件自紙箱中取出。撕下裝置的貼紙、保護膜或塑膠膜。
- 首次使用電器前，請先用濕布擦拭所有可拆卸的零件。切勿使用磨蝕性產品。
- 請將裝置放置於平坦、穩固的表面上，並確保裝置周圍至少保留 10 公分的間距。本裝置不適合安裝於櫥櫃或戶外之用。
- 將電源線插入插座。（備註：連接裝置前，請確定裝置上指示的電壓與當地電壓相符。電壓 220V-240V 50/60Hz）
- 小心：表面高溫
- 在插上電源線前，確認撥鈕調至 "OFF" 位置。
- 指示燈會亮時亮時熄滅，顯示溫控器在發揮作用調節溫度，是正常狀態。
- 建議烹調過程中，把蓋子蓋上，以達到更佳煮食效果。
- 建議使用木製或砂膠鏟子去翻動食材。

### 使用

萬用烹調設備可搭配下列設定使用：

功能	設定
保溫	低
煮熟	中
蒸/慢燉	中
烤/翻炒	高
烘烤	高
油炸	高
火鍋	高

### 保溫功能

- 此設定可將任何已烹調過的食物保溫。請確定所有食物已煮熟再使用保溫功能。
- 轉動設定旋鈕至低以保溫食物。

### 煮熟功能

- 您可利用此功能煮熟所有食物。
- 將要煮熟的食材放入鍋中，然後加入適量的水。將外蓋蓋在湯鍋上。
- 將設定旋鈕轉至中的位置，讓食物煮至熟透。
- 調理完畢後，轉動旋鈕至關的位置，待萬用烹調設備冷卻後再清潔。

### 蒸/慢燉功能

#### 蒸

- 此功能適用於蒸煮食物。
- 在鍋中倒入適量的水。
- 在蒸架上擺放要蒸的食物。
- 蓋上鍋蓋並轉動旋鈕至中的位置。
- 在蒸食物時需隨時注意萬用烹調設備，以確保鍋中的水不會燒乾。
- 調理完畢後，轉動旋鈕至關的位置，待萬用烹調設備冷卻後再清潔。

#### 慢燉

- 慢燉功能適用於燉燉食物。
- 將食材放入鍋內，並添加少許水，然後蓋上鍋蓋。
- 先轉動設定旋鈕至高的位置，直到水煮沸，再轉動旋鈕至中的位置，讓食材燉煮一陣子直到熟透為止。
- 調理完畢後，轉動旋鈕至關的位置，待萬用烹調設備冷卻後再清潔。

### 烤/翻炒功能

#### 烤

- 使用此設定可烤/炒食物。
- 在萬用烹調設備中放入要烤的食物，並添加必要數量的食用油或奶油。
- 轉動旋鈕至高的位置，並讓食物烤至熟透為止。
- 調理完畢後，轉動旋鈕至關的位置，待萬用烹調設備冷卻後再清潔。

#### 翻炒

- 在萬用烹調設備中放入必要數量的食用油或奶油，然後將旋鈕轉至高的位置。
- 翻炒時將食材加入高溫的油 / 奶油上。
- 調理完畢後，轉動旋鈕至關的位置，待萬用烹調設備冷卻後再清潔。

### 烘烤功能

- 在要烘烤的食物上塗抹食用油，並放入萬用烹調設備中。
- 轉動旋鈕至高的位置，並調理食物直到熟透為止。
- 調理完畢後，轉動旋鈕至關的位置，待萬用烹調設備冷卻後再清潔。

### 油炸功能

- 若要油炸食物，請在萬用烹調設備中添加適當數量的食用油。
- 轉動旋鈕至高的位置，並將待烹調的食物放入金屬籃中。
- 當食用油到達烹調溫度後，小心的將金屬籃放入油中直到食物完全熟透。
- 小心：因為油溫極高，因此必須要有人看顧萬用烹調設備。
- 調理完畢後，轉動旋鈕至關的位置，待萬用烹調設備冷卻後再清潔。

### 火鍋

- 在萬用烹調設備中添加適當數量的水，然後轉動設定旋鈕至高的位置，直到水煮沸為止。
- 在湯鍋中放入您要烹調的肉類，然後蓋上鍋蓋。
- 待水再次煮沸且肉類徹底煮熟後，您即可依各人喜好添加所需的食材。
- 調理完畢後，轉動旋鈕至關的位置，待萬用烹調設備冷卻後再清潔。

### 清潔與保養

- 在清潔或保養前，請務必關閉設備電源、拔除壁式電源插頭並等候設備冷卻。
- 請勿將設備浸泡在水中或任何其他液體進行清潔。
- 請將配件浸泡在熱肥皂水中清潔。在萬用烹調設備中倒入一些溫水並與清潔劑混合。使用軟布清潔、將水倒出並使用軟布擦乾。之後用水沖洗萬用烹調設備並晾乾。
- 用乾淨的乾布清潔底座。

### 保證

- 本產品享有 24 個月保固。只要產品依據指示使用，且用於原本的製造用途，您的保固仍然有效。此外，原始購買證明（發票、銷貨單或收據）要附上購買日期、零售商名稱及產品型號提交。
- 如需詳盡的保固條件，請參閱本公司的服務網站：service.princess.info