



EN Instruction manual  
CN 說明書



Blender  
01.212074.10.001

PARTS DESCRIPTION / 零部件說明



## EN Instruction manual

### SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Do not allow children to use the device without supervision.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Always disconnect the device from the supply if it is left unattended and before assembling, disassembling or cleaning.
- It is absolutely necessary to keep this appliance clean at all times, because it comes into direct contact with food.
- NOTE: The chopping blades are very sharp, avoid physical contact during emptying and cleaning the device, you can seriously injure.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments.
  - By clients in hotels, motels and other residential type environments.
  - Bed and breakfast type environments.
  - Farm houses.

### PARTS DESCRIPTION

- Lid with feeding shaft
- Glass can
- Blades
- Speed selector
- Base

### BEFORE THE FIRST USE

- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Caution! Run the blender no longer than 1 minute continuous, after that always cool the blender for 1 minute.

### Assembly

- The blades of the slicing and chopping disk and the blade chopping are very sharp, avoid physical contact, you can seriously injure.
- Place the seal ring onto the blade unit
- Mount the blade unit to the bottom of the jar. Lock the blade unit by turning it clockwise.
- Mount the jar onto the appliance. Lock the jar by turning it clockwise.

### USE

- NOTE: This appliance contains a safety switch, place the jar on the base and turn it clockwise until it clicks otherwise the device will not function.
- Cut the fruit and/or vegetables into pieces that fit in the jar. Do not cut into pieces that are too large, since they will need to be small enough to fall to the base of the jar. put the ingredients in the jar and place the jar lid onto the jar.
- Set the speed selector to the desired speed setting, use the pulse function for short and fast chopping for all kind of food.

### CLEANING AND MAINTENANCE

- Always remove the plug from the socket when the device will be cleaned.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.
- Components that have come into contact with food can be cleaned in soapy water.

### GUARANTEE

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.

### ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

## ZH-CHT 說明手冊

### 安全

- 若忽視安全指示，製造商恕不負損壞責任。
- 若電源線受損，須由製造商、其服務代理商或相似的合格人員更換受損的電源線，避免危險。
- 切勿以拉扯電源線的方式搬運電器，並確定電源線未纏繞在一起。
- 電器須放置於穩固、平坦的表面上。
- 使用者不可在裝置已接上電源時離去，讓裝置無人看管。
- 本電器只可供家庭用途使用，並僅限用於原本的製造用途。
- 請勿讓未滿 8 歲的兒童使用本電器。8 歲以上兒童以及生理、感官或心智不健全之人，或缺乏經驗知識之人，須有人在旁監督，或已指示如何安全使用本電器，且瞭解涉及的危險後，才可使用電器。兒童不可玩耍電器。請讓 8 歲以下兒童遠離本電器及其電源線。8 歲以上的兒童且有大人在旁監督，才可進行清潔與保養工作。
- 若要保護自己避免觸電，請勿將電源線、插頭或電器浸泡在水中或任何液體中。
- 請勿讓兒童獨自使用裝置，必須有人在旁看管。
- 請在更換配件或接近使用中活動的零件之前，關閉電器並切斷電源。
- 若無人看管，以及在組裝、拆解或清潔之前，請務必切斷裝置的電源。
- 必須需要隨時保持此電器清潔無虞，因為此電器會直接接觸食物。
- 注意：切碎刀非常銳利，因此請在清空與清潔裝置時，避免身體接觸，以免受到重傷。
- 本電器旨在在家中與相似的應用中使用，例如：
  - 商店、辦公室及其他工作環境中的員工廚房區。
  - 由飯店、汽車旅館及其他住宅式環境中的客戶使用。
  - 民宿。
  - 農家。

### 零件說明

- 有進料軸的外蓋
- 玻璃罐
- 刀片
- 速度選擇器
- 底座

### 首次使用前

- 請將裝置放置於平坦、穩固的表面上，並確保裝置周圍至少保留 10 公分的間距。本裝置不適合安裝於櫥櫃或戶外之用。
- 請將電器及配件自紙箱中取出。撕下裝置的貼紙、保護膜或塑膠膜。
- 首次使用電器前，請先用濕布擦拭所有可拆卸的零件。切勿使用磨蝕性產品。
- 小心！請讓攪拌器持續運轉不超過 1 分鐘。在這之後請務必讓攪拌器冷卻 1 分鐘。

### 組裝

- 切片刀、切碎刀盤及切碎刀非常銳利，因此請避免身體接觸，以免受到重傷。
- 請將密封環放置於刀片裝置上。
- 將刀片裝置安裝於罐體底部。順時針旋轉刀片裝置，將此裝置鎖定。
- 將罐體裝上電器。順時針旋轉罐體，將此罐體鎖定。

### 使用

- 注意：此電器包含安全開關。請將罐體置於底座上，並順時針旋轉罐體，直到卡入定位為止，否則裝置將不會作用。
- 請將蔬果切片後再裝入罐中。蔬果切片時，切勿切得過大，因為蔬果片必須能夠小到可掉落到罐體底座。請將材料裝入罐中，然後將罐體外蓋蓋上罐體。
- 請將速度選擇器設為所需的速率設定，使用瞬動功能，對各種食物進行快速的切碎作業。

### 清潔與保養

- 清潔裝置時，請務必從插座拔下插頭。
- 使用濕布清潔電器。切勿使用刺激性與磨蝕性清潔劑、菜瓜布或鋼絲刷，以免使裝置受損。
- 切勿電子裝置浸泡在水中或任何其他液體中。本裝置不適合使用洗碗機清洗。
- 已接觸食物的組件可用肥皂水清潔。

### 保證

- 本產品享有 24 個月保固。只要產品依據指示使用，且用於原本的製造用途，您的保固仍然有效。此外，原始購買證明（發票、銷售單或收據）要附上購買日期、零售商名稱及產品項號提交。

### 環境



本電器不可在使用壽命結束時以家庭廢棄物處理，而是要棄置於回收電機電子家用電器的集中回收處。電器、使用手冊及包裝上的符號主要用於引起您對於重要議題的注意。本電器採用可回收的材質。您可回收一手家用電器，對環境保護盡一份心力。請向當地主管機關詢問相關的回收處資訊。