



Travelling cooking pot  
01.302300.02.001

PARTS DESCRIPTION



EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments.
  - By clients in hotels, motels and other residential type environments.
  - Bed and breakfast type environments.
  - Farm houses.

- Children shall not play with the appliance.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Do not heat the food for too long.
- The heating element surface is subject to residual heat after use.
- Only use the appliance with the appropriate connector.


- Surface are liable to get hot during use.
- Make sure that the machine's power plug and supply header are not touching water.
- Unplug the power cord from the power outlet before machine installing, removing, cleaning, and servicing when it is idle.
- This product is only for home use.
- Do not use it in outdoor or humid environments.
- Do not turn on the product for a long time.
- Before use, make sure your hands are dry.

PARTS DESCRIPTION

- Lid
- Dedicated stainless steel cooker
- Stainless steel heating plate
- Host
- Power indicator
- Heating indicator
- Switch / function switch
- Rotate the pot handle
- Power cord / plug
- Voltage conversion button

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Place the appliance on a flat stable surface and hold at least 30 cm. free space around it. Make sure the unit is placed in a upright position.
- Before using the appliance for the first time, please wipe all removable parts with a damp cloth.
- Clean the stainless steel pot with white vinegar, neutral detergent or flour water. Do not use corrosive cleaning tool.
- When the product is used for the first time, the heating plate may be wax residue in the manufacturing process, please make the machine burn for 10 minutes until wax evaporates completely. (There may be slight white smoke therefrom, which is normal phenomenon) Before powering on the product, be sure to check that the supply voltage is consistent with the bottom voltage setting.
- Wrong voltage will cause product damage!
- If this product is preset to 110V / 60Hz, please check the local voltage. If you need to adjust the voltage setting, turn the voltage switch button at the base of the machine and turn it to the correct voltage with mini screwdriver.

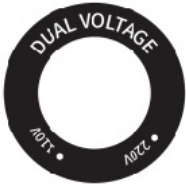

USE

- Turn the power cord around and place the product on a smooth, reliable surface.
- Wash the dedicated cooking pot and ingredients, serve it with food, add right amount of water, and place the dedicated pan on the heating plate, then cover the lid.
- Be careful not to pack more than 600ml of food, or it will extend the cooking time or failure of cook.
- Turn the power on and the indicator will light. Heating after some time, and wait the food to be cooked, then you can eat it.
- Power the machine off, switch the function selector button to "Power", and unplug it.
- Be careful not to use corrosive cleaning solvents when you unplug it before cleaning.
- After use, please wait until the heating plate is fully cooled, and then wind up the power cord, placing the plug into the base of the product for storage.
- Do not open the product for a long time; this product is for cooking small amount of materials, please power it off upon completion of cook.
- When the surface of the product is heated, the power cord and other nearby equipments can not touch the heated part of the product. Do not touch the heated part, otherwise there will be risk of burns.
- Please avoid the danger of a child touching the product in use.
- The base of the pot is specially designed. The heating function can not be replaced with an ordinary container. Other heating equipment is not recommended, either.

COMMON FAULTS AND HANDLING

If your product does not work properly or if the heating is dysfunctional, please unplug it immediately and refer to the following table. If the failure remains, please contact your local dealer or call center.

Common faults	Possible causes	Handling Method
The host is failed	The product is not in power connection	Check the power supply and whether it is plugged.
	The product is not activated	Please check if the switch is in the "heating" position.
	Product fuse pipe blown	Please contact customer service center for service.
Indicator light is not on, but the host heating is normal	Indicator light is burned out or the connection line is in open circuit.	Please contact customer service center for service.
The indicator light is on, but the host heating is failed.	The heat pipe is shorted	Please contact customer service center for service.
Heating is slow.	Cook too much food.	Reduce the weight of food.
	Pot has too much water.	Make sure that the water level does not exceed the maximum level.
	The pot is not covered or uncovered.	See if the pot is covered with a lid.

CLEANING AND MAINTENANCE

- Warning: Before cleaning the appliance, always switch it off, unplug it from the electricity supply and allow it to cool down completely.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Dedicated pan can be washed with water, but avoid collision and deformation; wipe it with a cloth thoroughly.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.
- If the power cord is damaged, it must be replaced by the manufacturer or its service or a qualified person to avoid danger

STORAGE

- After use, wind up the power cord upon the heating plate is cooled completely and put the plug back to the base of the product for storage.
- Store the device in a cool, dry place out of the reach of children and animals.

ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Support

You can find all available information and spare parts at [www.princesshome.eu!](http://www.princesshome.eu!)