



EN Instruction manual



Jug Kettle Retro

01.236028.02.001

PARTS DESCRIPTION



IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using your Princess product. By ignoring the safety instructions Princess cannot be held responsible for the damage. When using an electrical appliance, basic safety precautions should always be observed, including the following:

IMPORTANT: This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children shall not use or play with this appliance. Close supervision is necessary to keep appliance and cord out of reach of children during use.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Never move the appliance by pulling the cord and make sure the cord does not become entangled. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.

- This appliance is only to be used for household purposes and only for the purpose it is made for.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- **CAUTION:** In order to avoid hazard, this appliance is not intended to be operated by means of an external timer or separate remote control system.
- To prevent fire or shock hazard do not expose this appliance to rain or moisture.
- Do not allow children to use the device without supervision.
- Always switch off and remove the power cord from the electrical outlet before changing accessories or approaching parts that move in use.
- Always remove the power cord from the electrical outlet if it is left unattended and before assembling, disassembling or cleaning.
- **DO NOT** overfill.
- If the kettle is overfilled, boiling water may be ejected.
- Do not remove the lid while the water is boiling.

EN

- Please use the kettle only with the stand provided.
- Caution: Insure that the kettle is switched off before removing it from its stand.
- Only use the appliance with the appropriate connector.
- **WARNING:** The filling aperture must not be opened during use.



- Surface are liable to get hot during use.
- **THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.

FOR HOUSEHOLD USE ONLY
www.princesshome.eu

PARTS DESCRIPTION

1. Lid
2. Handle
3. Water window with level indicator
4. On/Off switch
5. Water temperature gauge

6. Main body
7. Base
8. Filter

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Before the first use boil a full kettle of water to clean the kettle and discard this water.
- Connect the power cable to the socket. (Note: Make sure the indicated voltage on the device matches the local voltage before connecting the device. Voltage 220V-240V 50-60Hz.

USE

- Fill the jug with the required quantity of water (at least 0.6L and a maximum of 1.7L).
- If insufficient water is used, the kettle will switch off, with too much water it may boil over.
- To boil water push down the On/Off button. The indicator lamp will be illuminated.
- If the appliance is accidentally switched on when empty, the boil-dry protection will automatically switch it off. Adding cool water will cool the boil-dry protection mechanism which enables you to use the kettle as normal.
- The water temperature gauge constantly shows you the temperature of the water inside the kettle.

- The gauge will not work if there is insufficient water in the kettle (less than the minimum level).

CLEANING AND MAINTENANCE

- Before cleaning, unplug the appliance and wait for the appliance to cool down.
- Use a soft damp cloth to clean the housing of the device.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the kettle and base in water or any other liquids.
- The device should be regularly decalcified. Use a descaling product which is suitable for household appliances.
- Rinse the kettle several times with clean water after descaling.

ENVIRONMENT



■ This appliance should not be put into the domestic garbage at the end of its life, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recycling.

FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

Support

www.princesshome.eu

smartwares Europe Jules Vermeirweg 87 5015 BH Tilburg The Netherlands service.smartwares.eu	NL - 088 7340201 Lokaal tarief BE - 078 481094(NL) Lokaal tarief BE - 078 481540(FR) Tarief local DE - 0825 500 600 18ct/min DE - +49 (0) 1805 010762 14Ct/Min, ab. Festnetz Mobil max. 40Ct/Min GB - +44 (0) 345 730 7337 ES - +34 938427509
	CUSTOMER SERVICE 24/7

EN

[WEEE Logo]



www.princesshome.eu

© Princess 2018