



Citrus juicer  
01.201857.02.001

PARTS DESCRIPTION



## EN Instruction manual

### SAFETY

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Do not allow children to use the device without supervision.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Always disconnect the device from the supply if it is left unattended and before assembling, disassembling or cleaning.
- It is absolutely necessary to keep this appliance clean at all times, because it comes into direct contact with food.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments.
  - By clients in hotels, motels and other residential type environments.
  - Bed and breakfast type environments.
  - Farm houses.

### CLEANING AND MAINTENANCE

- Unplug the appliance. Use a soft, slightly damp cloth to wipe appliance surfaces. Do not allow water or any other liquid to get into the unit.
- Components that have come into contact with food can be cleaned in soapy water.
- Do not use any abrasive detergent or steel wool to clean the appliance, as it may scratch the surfaces.
- The components are suitable for cleaning in a dishwasher.
- The pressure section of the handle can be easily assembled for cleaning.

### ENVIRONMENT

- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

### Support

You can find all available information and spare parts at [www.princesshome.eu](http://www.princesshome.eu)



This product complies with conformity requirements of the applicable European Regulations or Directives.



This product complies with conformity requirements of the applicable UK Regulations.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.

### PARTS DESCRIPTION

1. Press handle
2. Fruit dome
3. Large press cone
4. Small press cone
5. Pulp sieve
6. Reservoir
7. Juice spout
8. Motor Axis

### BEFORE THE FIRST USE

- Take the appliance and accessories out of the box. Remove the stickers, protective foil or plastic from the device.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Connect the power cable to the socket. (Note: Make sure the indicated voltage on the device matches the local voltage before connecting the device. Voltage 220V-240V 50-60Hz.)

### USE

- As soon as the half citrus fruit is pressed onto the juice cone, the motor will be activated.
- Place a suitable glass under the spout of the reservoir. The spout can be pushed down to the juice to anticipate, and be folded up for the anti-drip feature. Do not exert too much pressure on the juice cone. If the sound of the motor increases significantly or the motor itself slows down dramatically, this means too much pressure has been exerted.
- Please do not run the juicer for longer than 15 seconds without interruption, please take a break for 10 minutes after pressing 10 pieces of oranges.
- Note that this appliance is equipped with an overheat protection which will turn off the device when the temperature gets too high. Once the appliance is cooled down, the thermostat will automatically be reset



EU Address:  
Smartwares Europe  
Jules Verneweg 87  
5015BH Tilburg  
Netherlands



UK Address:  
Smartwares Safety and Lighting Ltd.  
Meriden House, 6 Great Cornbow  
Halesowen, West Midlands, B63 3AB  
United Kingdom