



EN Instruction manual

CN 說明書



Wet and Dry Chopper
01.221030.16.001

PARTS DESCRIPTION / 零部件說明



[WEEE Logo]



EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Do not allow children to use the device without supervision.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Always disconnect the device from the supply if it is left unattended and before assembling, disassembling or cleaning.
- It is absolutely necessary to keep this appliance clean at all times, because it comes into direct contact with food.
- NOTE: The chopping blades are very sharp, avoid physical contact during emptying and cleaning the device, you can seriously injure.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - By clients in hotels, motels and other residential type environments.
 - Bed and breakfast type environments.
 - Farm houses.

PARTS DESCRIPTION

- Base
- Chopper cup
- Grinder cup
- Transparent lid

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)

NOTE: The chopping blades are very sharp, avoid physical contact during emptying and cleaning the device, you can seriously injure.

NOTE: make sure you'll never exceed the maximum filling mark.

NOTE: after 30 seconds of operation let it cool down for at least 1 minute to avoid overheating.

USE

- Do not use very hard food as frozen food, old bread or uneatable parts of food like gristle or stones. Such misuse will damage your appliance.
- Please note that big pieces of food must be cut into small pieces (size around 1,5 cm).
- The appliance is not intended for liquid food, or food which contains liquid. Liquid could overflow and cause damage to the appliance. The appliance is not suited for hot food or hot liquid.
- To grind coffee beans, spices, or dry herbs into powder, use the grinder cup.
- To chop or mix food like carrot, mushroom, pieces of dry vegetables, parsley leaves or other, use the chopper cup.
- Put the food in the designated cup, place the cup onto the base and turn it clockwise until it locks.
- Place the transparent lid over the cup and press, by pressing the lid the appliance will activate, to stop the appliance just release the lid.

CLEANING AND MAINTENANCE

- Warning: Before cleaning the appliance, always switch it off, unplug it from the electricity supply and allow it to cool down completely.
- Never immerse the housing with motor in water!
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Only a damp rinsing cloth should be used to clean the outside of the housing.
- Don't give bacteria any change to enter the device. Make sure the appliance is cleaned well before storage.
- Components that have come into contact with food can be cleaned in soapy water.
- Allow the parts to dry thoroughly before reassembling the device.

ENVIRONMENT

This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

ZH-CHT 說明手冊

安全

- 若忽視安全指示，製造商恕不負損壞責任。
- 若電源線受損，須由製造商、其服務代理商或相似的合格人員更換受損的電源線，避免危險。
- 切勿以拉扯電源線的方式搬運電器，並確定電源線未纏繞在一起。
- 電器須放置於穩固、平坦的表面上。
- 使用者不可在裝置已接上電源時離去，讓裝置無人看管。
- 本電器只可供家庭用途使用，並僅限用於原本的製造用途。
- 8 歲以上兒童以及生理、感官或心智不健全之人，或缺乏經驗知識之人，須有人在旁監督，或已指示如何安全使用本電器，且瞭解涉及的危險後，才可使用電器。兒童不可玩弄電器。除非是 8 歲以上的兒童，且有人在旁監督，否則兒童不應進行清潔與使用保養工作。
- 若要保護自己避免觸電，請勿將電源線、插頭或電器浸泡在水中或任何液體中。
- 請勿讓兒童獨自使用裝置，必須有人在旁看管。
- 請在更換配件或接近使用中活動的零件之前，關閉電器並切斷電源。
- 若無人看管，以及在組裝、拆解或清潔之前，請務必切斷裝置的電源。
- 必須需要隨時保持此電器清潔無虞，因為此電器會直接接觸食物。
- 注意：切碎刀非常銳利，因此請在清空與清潔裝置時，避免身體接觸，以免受到重傷。
- 本電器旨在在家中與相似的應用中使用，例如：
 - 商店、辦公室及其他工作環境中的員工廚房區。
 - 由飯店、汽車旅館及其他住宅式環境中的客戶使用。
 - 民宿。
 - 農家。

零件說明

- 底座
- 切碎杯
- 研磨杯
- 透明蓋

首次使用前

- 請將電器及配件自紙箱中取出。撕下裝置的貼紙、保護膜或塑膠膜。
 - 請將裝置放置於平坦、穩固的表面上，並確保裝置周圍至少保留 10 公分的間距，本裝置不適合安裝於櫥櫃或戶外之用。
 - 將電源線插入插座。(備註：連接裝置前，請確定裝置上指示的電壓與當地電壓相符，電壓 220V-240V 50/60Hz)
- 注意：切碎刀非常銳利，因此請在清空與清潔裝置時，避免身體接觸，以免受到重傷。
- 注意：請確定絕不會超過最高裝水高度。
- 注意：操作 30 秒後，請讓電器至少冷卻 1 分鐘，以防過熱。

使用

- 請勿使用非常硬的食物，例如冷凍食品、放了很久的麵包，或食物中不能吃的部分，像是軟骨或石子。諸如此類的誤用將使電器受損。
- 請注意，大片食材必須切成小片(約 1.5 公分的大小)。
- 電器的設計並非用於液狀食物，或富含水分的食物。液體可能會溢出，造成電器受損。電器不適合高溫食物或液體使用。
- 若要研磨咖啡豆、香料或乾藥草磨成粉，請使用研磨杯。
- 若要切碎或混合如紅蘿蔔、乾蔬菜、洋香菜或其他食材，請使用切碎杯。
- 請將食材放入指定的杯中、把杯子放在底座上，然後順時針旋轉，直至鎖至定位為止。
- 將透明蓋裝在背上，然後壓下；壓下透明蓋後，電器將會啟動。若要停止電器，放開透明蓋即可。

清潔與保養

- 警告：清潔電器前，請務必關閉電源、從電源插座拔下插頭，以及讓電器完全冷卻。
- 切勿連同馬達將外殼浸泡在水中！
- 使用濕布清潔電器。切勿使用刺激性與磨蝕性清潔劑、菜瓜布或鋼絲刷，以免使裝置受損。
- 僅應使用沾濕的清洗布清潔外觀的外觀。
- 請勿讓細菌有機會進入裝置。請確定在存放前已徹底清潔電器。
- 已接觸食物的組件可用肥皂水清潔。
- 請在重新組裝前讓零件徹底風乾。

環境

本電器不可在使用壽命結束時以家庭廢棄物處理，而是要棄置於回收電機電子家用電器的集中回收處。電器、使用手冊及包裝上的符號主要用於引起您對於重要議題的注意。本電器採用可回收的材質。您可回收二手家用電器，對環境保護盡一份心力。請向當地主管機關詢問相同的回收處資訊。