



PARTS DESCRIPTION / 零部件説明



## SAFETY

- By ignoring the safety instructions the manufacturer can not be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Do not allow children to use the device without supervision.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Always disconnect the device from the supply if it is left unattended and before assembling, disassembling or cleaning.
- It is absolutely necessary to keep this appliance clean at all times, because it comes into direct contact with food.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments.
  - By clients in hotels, motels and other residential type environments.
  - Bed and breakfast type environments.
  - Farm houses.

## PARTS DESCRIPTION

1. Eject button
  2. Speed selector
  3. Turbo switch
  4. Hand mixer
  5. Unlock button
  6. Mixing bowl
  7. Base
  8. Tilt button
  9. Spatula
- BEFORE THE FIRST USE**
- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
  - Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
  - Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
  - Plug the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
  - Never use the mixer for longer than 10 minutes continuously, after this allow the mixer to cool down for 15 minutes.

**USE**

### Use of the mixer without base

### Use of the dough hooks or beaters

- Make sure the speed selector (no. 2) is in "0" position before plugging in.
- The dough hook or beater with the ring fits only in the hole with the "gear sign" and the dough hook or beater without the ring fits in the other hole.
- Fit the dough hook of beater by pushing the shaft into the opening and then, if necessary, turning them slightly until they click into the place. Do not switch the dough hooks or beaters, as they each only fit one opening.

### Use of the mixer with base

- It is necessary to fit the dough hooks or beaters in to the handmixer before you attach the handmixer to the base. You can do so as described before.
- Place the hand mixer (no. 4) on the base
- Press the unlocking button (no. 5) and tilt the mixer with the other hand up.
- Make sure the speed selector (no. 2) is turned to 0 before plugging in.
- Select the speed with the speedselector (no. 2) which is suitable for the accessories you are using.
- After mixing, turn the speed selector to 0 and remove the plug from the electrical socket.
- Tilt the mixer by pushing the tilt button (8), hold the beaters or dough hooks and press the eject button (nr. 1) to remove them from the mixer.


## CLEANING AND MAINTENANCE

- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.
- Wash the beaters, dough hooks and bowl in a warm soapy water. Rinse and dry the parts thoroughly. Only these parts are dishwasher safe.

## GUARANTEE

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.
- For the detailed warranty conditions, please refer to our service website: [www.service.tristar.eu](http://www.service.tristar.eu)

## ENVIRONMENT

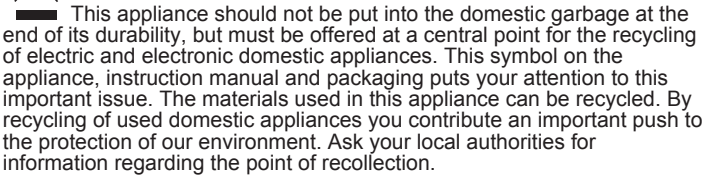

## Support

You can find all available information and spare parts at [service.tristar.eu](http://service.tristar.eu)!

ZH-CHT ☐ ☐ ☐ ☐

- □□□□□□□□□□□□□□□□
- □□□□□□□□□□□□□□□□  
□□□□□□□□□□
- □□□□□□□□□□□□□□□□  
□□
- □□□□□□□□□□□□□□□□
- □□□□□□□□□□□□□□□□
- □□□ 0 □□ 8 □□□□□□□□□□ 8 □□□□□□□□  
□□□□□□□□□□□□□□□□□□□□  
□□□□□□□□□□□□□□□□□□□□  
□□□□□□□□□□□□□□□□□□□□  
□□□□□□ 8 □□□□□□□□□□□□□□ 8 □□□  
□□□□□□□□□□□□□□□□□□□□
- □□□□□□□□□□□□□□□□□□□□  
□□□□□□
- □□□□□□□□□□□□□□□□□□□□
- □□□□□□□□□□□□□□□□□□□□□□  
□□
- □□□□□□□□□□□□□□□□□□□□□□  
□□□
- □□□□□□□□□□□□□□□□□□□□□□  
□□
- □□□□□□□□□□□□□□□□□□□□
  - □□□□□□□□□□□□□□□□□□
  - □□□□□□□□□□□□□□□□□□
- □□□
- □□□

1. Turbo

- 220V-240V 50/60Hz
- 10 15

- [illegible]

- 24
   
 www.service.tristar.eu



- service.tristar.eu