



PRINCESS®

Instructions for use

TYPE 201970
SILVER SUPER JUICER

Please read these instructions at your leisure and save them for future reference.

The PRINCESS SILVER SUPER JUICER with its extra powerful motor is ideal for rapidly squeezing all types of citrus fruits and is an attractive addition to any kitchen. Before using your new juicer for the first time, we suggest that you wash the separate components (not the base motor).

DESCRIPTION

- lid
- juice cone
- pulp compartment + reservoir with anti-drip
- base motor
- Cord storage system

TIPS FOR USE

As soon as the citrus fruit is pressed onto the juice cone, the motor will be activated.

Once all the fruit has been squeezed or the reservoir is full, the reservoir can be removed from the base motor for cleaning.

Do not exert too much pressure on the juice cone. If the sound of the motor increases significantly or the motor itself slows down dramatically, this means too much pressure has been exerted.

CLEANING

FIRST UNPLUG THE CORD FROM THE SOCKET

Clean the juicer after each use to prevent leftover food from sticking. Each component can be washed in hot soapy water, with the exception of the motor base. Do not use abrasive or strong detergents. Wipe the motor base with a damp cloth.

NEVER IMMERSE THE MOTOR BASE IN WATER OR OTHER LIQUID.

PRINCESS TIPS

- Do not run the juicer for more than 10 minutes at one time.
- This juicer is only suitable for household use.
- Make sure the cord or extension cord is carefully positioned to avoid people tripping over it.
- If the juicer or cord is damaged, we advise you not to use the appliance and to take it to the shop for repair. Damaged cords may only be replaced by the service department.
- Do not use this juicer outdoors.
- Ensure children do not use the juicer unsupervised.



U.K. WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

WARNING: ON NO ACCOUNT SHOULD EITHER THE LIVE OR NEUTRAL WIRES BE CONNECTED TO THE EARTH TERMINAL





Support:

You can find all available information and spare parts at www.princesshome.eu! ©PRINCESS 2018