



EN Instruction manual

CN 說明書



Long Slot Toaster Cool White

01.142330.10.001

PARTS DESCRIPTION / 零部件說明



EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- To prevent fire or shock hazard do not expose this appliance to rain or moisture.

- Surface are liable to get hot during use.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - By clients in hotels, motels and other residential type environments.
 - Bed and breakfast type environments.
 - Farm houses.

PARTS DESCRIPTION

- Bread groove
- Crumb tray
- Color controller
- Lift handle
- Defrost button
- Reheat button
- Cancel button

BEFORE THE FIRST USE

- Take the appliance and accessories out of the box. Remove the stickers, protective foil or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- When the device is turned on for the first time, a slight odor will occur. This is normal, ensure adequate ventilation. This fragrance is only temporary and will disappear soon.

USE

- The device is adjustable with the color controller of just crispy roasted to dark brown. To achieve the degree of browning desired, you can experiment with the setting. Also the quality and condition of the bread is also a factor. Dry and stale bread toasts more quickly, fresh and frozen bread take a little longer. Do not use a knife, cutlery or any other object to remove the bread from the device or to clean the device. If the bread becomes lodged in the toaster, unplug the appliance before attempting to remove it. Caution! Bread can burn.
- Put a slice of bread in one of the slots. You can place 2 slices in the device. Make sure the crumb tray is in place before use.
- Plug the power cord into a grounded outlet. Turn the color controller to your desired position. Press the handle completely down to start the toasting process.
- Once the bread has been toasted to the desired color, the handle will pop up automatically.
- During toasting, you can check the color of the bread. If it is to your satisfaction, you can press the cancel button to cancel the operation at any time.
- If the bread is frozen, perform the same operations and press the defrost button. The indicator will be illuminated. In this mode the bread will be toasted to your desired color.
- If you want to reheat cold toasted bread, press the reheat button and the indicator will be illuminated. This mode has a fixed time setting.
- The carriage handle will automatically spring up and end up the reheating process.

CLEANING AND MAINTENANCE

- Before cleaning, unplug the appliance and wait for the appliance to cool down.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.

- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.
- Pull out the crumb tray and remove the crumbs. By using the device frequently, repeat this every week.
- Do not use a metal object (fork, knife, ...) to clean the inside of the appliance as this may damage the heating elements.

GUARANTEE

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.

ENVIRONMENT

- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

ZH-CHT 說明手冊

安全

- 若忽視安全指示，製造商恕不負損壞責任。
- 若電源線受損，須由製造商、其服務代理商或相似的合格人員更換受損的電源線，避免危險。
- 切勿以拉扯電源線的方式搬運電器，並確定電源線未纏繞在一起。
- 電器須放置於穩固、平坦的表面上。
- 使用者不可在裝置已接上電源時離去，讓裝置無人看管。
- 本電器只可供家庭用途使用，並僅限用於原本的製造用途。
- 請勿讓未滿 8 歲的兒童使用本電器。8 歲以上兒童以及生理、感官或心智不健全之人，或缺乏經驗知識之人，須有人在旁監督，或已指示如何安全使用本電器，且瞭解涉及的危險後，才可使用電器。兒童不可玩耍電器。請讓 8 歲以下兒童遠離本電器及其電源線。8 歲以上的兒童且有成人在旁監督，才可進行清潔與保養工作。
- 若要保護自己避免觸電，請勿將電源線、插頭或電器浸泡在水中或任何液體中。
- 請確保 8 歲以下兒童無法接觸本電器及其電源線。
- 設備在運轉時，可接觸之表面的溫度可能非常高。
- 麵包可能燒焦，因此請勿在靠近可燃材料（如窗簾）處或底下使用烤麵包機。
- 本設備不適合使用外接定時器或個別遙控系統進行操作。
- 為防止火災或撞擊危害，請勿讓此電器淋雨或受潮。

- 使用中本產品表面可能很燙。
- 本電器旨在在家中與相似的應用中使用，例如：
 - 商店、辦公室及其他工作環境中的員工廚房區。
 - 由飯店、汽車旅館及其他住宅式環境中的客戶使用。
 - 民宿。
 - 農家。

零件說明

- 麵包槽
- 麵包屑托盤
- 顏色控制器
- 升降手柄
- 解凍按鈕
- 重新加熱按鈕
- 取消按鈕

首次使用前

- 請將電器及配件自紙箱中取出。撕下裝置的貼紙、保護膜或塑膠膜。
- 請將裝置放置於平坦、穩固的表面上，並確保裝置周圍至少保留 10 公分的間距。本裝置不適合安裝於櫥櫃或戶外之用。
- 將電源線插入插座。（備註：連接裝置前，請確定裝置上指示的電壓與當地電壓相符。電壓 220V-240V 50/60Hz。）
- 首次開啟裝置時，將會散發出些許臭味。此為正常現象，請確保通風。此氣味僅會暫時出現，不久之後將會消失。

使用

- 裝置可用顏色控制器調整至正好脆皮烤焦或深咖啡色。為達到所需的烤焦程度，您可使用設定實驗。麵包的品質及狀況也是因素所在。乾燥、放較多天的麵包可以更快烤好，而新鮮、冷凍的麵包則需要更久一點時間。請勿使用小刀、利器或任何其他工具將麵包從裝置取下，或清潔裝置。若麵包停留在麵包機內過久，請在嘗試取出麵包之前按下電器的電源。小心！麵包可能會烤焦。
- 請將一片麵包放入一個槽內。您可將兩片麵包放入裝置內。請在使用前確定麵包屑托盤已放置定位。
- 請將電源線插入接地插座中。將顏色控制器轉到您所需的位置。完全壓下把手，以啟動烤麵包流程。
- 麵包烤到所需的顏色後，把手將會自動彈起。
- 烤麵包時，您可檢查麵包的顏色。若您滿意烤焦的程度，您可按下取消按鈕，隨時取消操作。
- 若麵包冷凍，請進行相同的操作，並按下解凍按鈕。指示燈將會亮起。在此模式下，麵包將會烤到您所需的顏色。
- 若您想要重新加熱已經烤好但涼掉的麵包，請按下重新加熱按鈕，指示燈將會亮起。此模式有固定的時間設定。
- 滑動把手將會自動彈起並結束重新加熱流程。

清潔與保養

- 清潔前，請按下電器插頭，並等候電器冷卻。
- 使用濕布清潔電器。切勿使用刺激性與磨蝕性清潔劑、菜瓜布或鋼絲刷，以免使裝置受損。
- 切勿電子裝置浸泡在水中或任何其他液體中。本裝置不適合使用洗碗機清洗。
- 拉出麵包屑托盤，並取出麵包屑。經常使用裝置時，請重複此動作。
- 請勿使用金屬物品（刀叉、...）清潔電器內部，以免損壞加熱元件。

保證

- 本產品享有 24 個月保固。只要產品依據指示使用，且用於原本的製造用途，您的保固仍然有效。此外，原始購買證明（發票、銷貨單或收據）要附上購買日期、零售商名稱及產品項號提交。

環境

- 本電器不可在使用壽命結束時以家庭廢棄物處理，而是要棄置於回收電機電子家用電器的集中回收處。電器、使用手冊及包裝上的符號主要用於引起您對於重要議題的注意。本電器採用可回收的材質，您可回收二手家用電器，對環境保護盡一份心力。請向當地主管機關詢問相關的回收處資訊。