



EN Instruction manual

الاستخدام AR



220-240V / 50-60Hz / 2100W
Oven with pizza carousel


فرن مع آلة دائرية لصنع البيتزا

Made in China

صنع في الصين

01.112395.09.001

PARTS DESCRIPTION / وصف الأجزاء

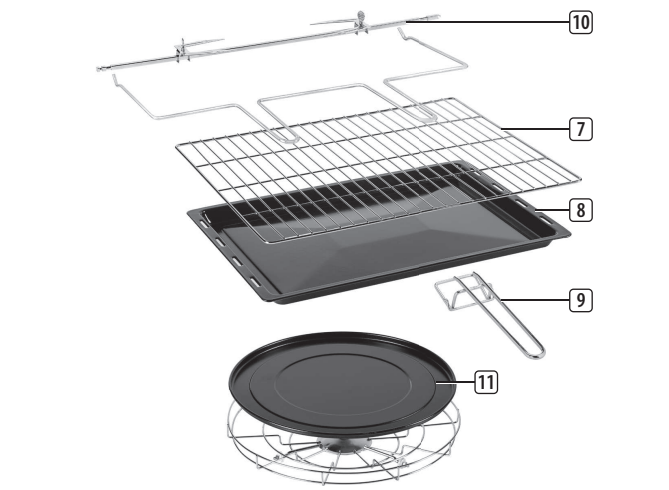

[WEEE Logo]



EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.

- Surface are liable to get hot during use.

PARTS DESCRIPTION

- Glass door
- Temperature control button
- Heating position button 1
- Heating position button 2
- Time control button
- Indicator light
- Grid
- Baking tray
- Handle
- Rotisserie
- Pizza tray set

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- Wash before using the device for the first time all loose parts in warm soapy water. Rinse and dry thoroughly below. These parts are also dishwasher safe.
- Always place the unit on a flat stable surface and ensure at least 30 cm. free space around the unit. This device is not suitable for outdoor installation or use. Place the device on a safe place. Not too close to a wall, the wall can burn or discolour. Please make sure that curtains or something like that, not make contact with the device. Put nothing between the bottom of the device and the surface on which you place the device in order to prevent this will burn.
- Food, like bread, pizza and meat which is baked too long in the oven can burn; this can be prevented by checking the food in the oven regularly and not to stay too long in an enabled oven. Never heat food in jars or cans directly in the oven, the heat could explode and cause injury. Always use oven-proof bowls and plates.
- The oven may at first use spread some smell and smoke, this is normal, so use the device in a well ventilated area.
- CAUTION: the exterior of the device will get hot also. Avoid any physical contact, you can seriously injure. Always use the handle to the glass door to open the oven.

Use of accessories

- Use the grid to prepare dry foods such as bread.
- The baking tray is suitable for cooking food which fat is released, such as meat and chicken dishes. The baking tray can also be placed under the grid for any release of fat.
- The pizza tray can be placed in the middle of the oven, when you select the pizza function the pizza tray will rotate during baking.

USE

- Place the grid, the baking tray, rotisserie or pizza tray in the oven.
- Use the temperature control knob to set the desired temperature according to the dish to prepared. Use the heating position control knobs to select the desired heating mode. Use the time setting control knob on to select the desired heating time, if you set the desired settings the indicator light will illuminate, this light will go out when the device had reached the setting time.

Heating position control button 1

Heating position	Explanation
off	OFF
	Upper heating
	Lower heating

	Upper and lower heating
--	-------------------------

Heating position control button 2

Heating position	Explanation
OFF	OFF
	Convection and rotisserie
	Convection
	Convection and pizza

CLEANING AND MAINTENANCE

- Remove the plug from the outlet and let the device cool down. Wash all parts in warm soapy water. Rinse and dry thoroughly. These parts are also dishwasher safe. Clean the exterior with a damp cloth. Clean the inside of the device with a mild detergent or dedicated oven cleaner.
- Never immerse the device in water or other liquid. Do not place the device in the dishwasher to clean. If the inside of the oven is contaminated, boil and bake process can take longer time than normal.

WARRANTY

- This product is warranted for 2 Years, for detailed terms, please refer to the Warranty Card.
- Following parts are not covered by warranty:
 - Knobs.
 - Any broken body parts.

Approximate life of this appliance under normal conditions is 3 Years.

For service and repairs, please call the following numbers:
United Electronics Co.
Saudi Arabia (Toll-free) 800 124 0900

ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

AR دليل الإرشادات

السلامة

- عند إهمال تعليمات السلامة لا تتحمل الشركة المصنّعة أية مسؤولية عن وقوع تلفيات.
- في حالة تلف سلك الإمداد بالطاقة، يجب استبداله بواسطة الشركة المصنعة أو وكيل الصيانة أو أي فني مؤهل لتجنب التعرض إلى المخاطر.
- لا تحرك الجهاز مطلقاً عن طريق سحب السلك، وتأكد من أن السلك لن يصبح متشابكاً.
- يجب وضع الجهاز على سطح ثابت ومستو.
- يجب ألا يغفل المستخدم عن الجهاز أثناء توصيله بالكهرباء
- تم تصميم هذا الجهاز للاستخدام المنزلي فقط وللأغراض التي صُنع من أجلها.
- ينبغي عدم استخدام هذا الجهاز بواسطة أطفال أصغر من 8 سنوات. يمكن استخدام هذا الجهاز بواسطة الأطفال من سن 8 سنوات وما فوق والأشخاص ذوي القدرات الجسدية أو الحسية أو العقلية المحدودة أو الذين يفتقرون إلى الخبرة والمعرفة إذا تم الإشراف عليهم أو إرشادهم بشأن كيفية استخدام الجهاز بطريقة آمنة وفهمهم للمخاطر المحتملة. يجب على الأطفال عدم اللعب بهذا الجهاز. احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 8 سنوات. يجب على الأطفال عدم القيام بعملية التنظيف وصيانة للمستخدم إلا إذا كانوا أكبر من 8 سنوات وفي وجود من يشرف عليهم.
- حماية نفسك من التعرض إلى صدمة كهربائية، لا تمس السلك أو القابس أو الجهاز في الماء أو في أية سوائل أخرى.
- احرص على وضع الجهاز والسلك بعيداً عن متناول الأطفال الأقل من 8 سنوات. قد تكون درجة حرارة الأسطح الظاهرة مرتفعة عند تشغيل الجهاز.
- هذا الجهاز غير مخصص للتشغيل من خلال مؤقت خارجي أو نظام تحكم عن بعد منفصل.

- قد يسخن السطح أثناء الاستخدام.

وصف الأجزاء

- باب زجاجي
- زر التحكم في درجة الحرارة
- زر 1 وضع السخّن
- زر 2 الوضع السخّن
- زر التحكم في الموقت
- لمبة المؤشر
- الشبكة
- صينية الخبز
- مقبض
- دوّارة
- مجموعة صواني البيتزا

قبل الاستخدام الأول

- قم بإخراج الجهاز والملحقات خارج العلبة. قم بإزالة الملصقات، أو البلاستيك أو ورق الألوมิเนียม الواقع على الجهاز.
- ضع كبل الطاقة في مقبس (ملاحظة: تأكد من أن الجهد الذي يشار إليه على الجهاز يتطابق مع الجهد المحلي قبل توصيل الجهاز. الجهد 220 فولت - 240 فولت 50/60 هرتز)
- اغسل قبل استخدام الجهاز للمرة الأولى جميع الأجزاء الملموسة بما في ذلك وصابون. اشطف وجفف بشكل كامل أولاً. تعتبر هذه الأجزاء آمنة للاستخدام في غسالة الأطباق.
- ضع الوحدو دائماً على سطح ثابت مستو وتأكد من وجود مساحة خالية جوفاء تبلغ 30 سم على الأقل حول الوحدة. بعد هذا الجهاز غير مناسب للتركيب أو الاستخدام في الخارج. ضع الجهاز في مكان آمن. حيث لا يكون قريب للغاية من الحائط؛ لأن الحائط قد يتعرض للاحتراق أو تغير لونه. يرجى التأكد من عدم ملاصقة الشبائر أو ما شابهها للجهاز. تجنب وضع أي شيء بين أسطح الجهاز والسطح الذي وضعت عليه الجهاز لتجنب التعرض للحروق.
- إن الأضواء مثل الخبز والبيتزا واللحم التي تستغرق وقتاً طويلاً في الخبز داخل الفرن قد تعرض للحرق، ولذلك يمكن تجنب هذا من خلال التأكد بانتظام من الطعام داخل الفرن وعدم تركه فترة طويلة في فرن قيد التشغيل. تجنب تسخين الأطعمة في وعاء زجاجي أو علب قصديرية مباشرة في الفرن، لأن الحرارة قد تتسبب في الانفجار والإصابة بخروج. استخدم دائماً أوعية وأطباق صالحة للاستخدام مع الفرن.
- قد يفسد الفرن عند استخدامه للمرة الأولى رائحة ودخان، وهذا أمر طبيعي، لذلك استخدم الجهاز في منطقة جيدة التهوية.
- تحذير: يصيب الجزء الخارجي من الجهاز ساخناً أيضاً. تجنب أي ملامسة للتسبب، لأنك يمكن أن تعرض لإصابات خطيرة.

استخدام الملحقات

- استخدم الشبكة لإعداد الأطعمة الحارقة مثل الخبز.
- تعد صينية الخبز مناسبة لطهي الطعام الذي يخرج منه دهون مثل أطباق اللحوم والدجاج. يمكن وضع صينية الخبز تحت الشبكة لتجميع الدهون.
- يمكن وضع صينية البيتزا في منتصف الفرن، وعندما تقوم بتحديد وظيفة البيتزا، سوف تقوم الصينية بالدوران أثناء الخبز.

الاستخدام

- ضع الشبكة أو صينية الخبز أو الشواية أو صينية البيتزا داخل الفرن.

- استخدم مقبض التحكم في درجة الحرارة لضبط درجة الحرارة المطلوبة وفقاً للطبق المراد تحضيره. استخدم مقابض التحكم في وضع السخّن لتحديد وضع السخّن المطلوب. استخدم مقبض التحكم في إعداد الوقت لتحديد وقت السخّن المرغوب فيه. إذا قُسمت بتحديد الإعدادات المطلوبة، سوف يضيء ضوء المؤشر ويطلق عندما يصل الجهاز إلى وقت الإعداد.

زر التحكم 1 في وضع السخّن

وضع السخّن	الشرح
off	OFF
	السخّن العلوي
	السخّن السفلي
	السخّن العلوي والسفلي

زر التحكم 2 في وضع السخّن

وضع السخّن	الشرح
OFF	OFF
	القلل الحراري والشواية
	القلل الحراري
	القلل الحراري والبيتزا

التنظيف والصيانة

- أزل القابس من مخرج الطاقة ثم اترك الجهاز ليبرد. اغسل جميع الأجزاء بما في ذلك وصابون. اشطف وجفف بشكل كامل. تعتبر هذه الأجزاء آمنة للاستخدام في غسالة الأطباق. نظف الجزء الخارجي بقطعة قماش رطبة. نظف الجزء الداخلي من الجهاز بمنظف معتدل أو منظف جاف بالفرش.
- تجنب غمس الجهاز مطلقاً في ماء أو أي سائل آخر. تجنب وضع الجهاز في غسالة الأطباق لتنظيفه. إذا كان الجزء الداخلي من الفرن ملوثاً، فإن عملية الطهي والخبز قد تستغرق وقت أطول من المعتاد.

ضمان

- هذا الجهاز مضمون لمدة عامين. لمعرفة أحكام الضمان يرجى قراءة كرت ضمان المنتج.
- المكونات أدناه غير مشمولة بالضمان:
 - المقابض.

— أجزاء البند القابلة للتكرس.

العمر الافتراضي للجهاز يعتمد على ظروف التشغيل العادية. العمر الافتراضي 3 سنوات تقريباً.

بريمي الاتصال على أرقام خدمة العملاء والتسليم الآتية:

الشركة المتحدة للإلكترونيات

المملكة العربية السعودية (الهاتف المجاني) 800 124 0900

البيئة



ولتجنب العرض الثالث والتسويق، يجب ألا يتم وضع هذا الجهاز في سلة النفايات المنزلية في نهاية عمره الافتراضي، ولكن يجب نقله إلى نقطة المركزية لإعادة تدوير الأجهزة المنزلية الكهربائية والإلكترونية. إن كلاً من المورد الموجود على الجهاز، ودليل التعليمات والتعليق يحدرك من هذه المسألة العامة. يمكن إعادة تدوير المواد المستخدمة في هذا الجهاز. من خلال إعادة تدوير الأجهزة المنزلية، فإنك تقدم إسهام هام للحفاظ على البيئة التي نعيش فيها. استفسر من السلطات المحلية عن نقطة التجميع.

Made in China

صنع في الصين

© Princess 2019