



EN Instruction manual

الاستخدام



220-240V / 50/60Hz / 2400W


Oven with 3 pizza layers

فرن مع آلة دائرية لصنع البيزا

01.112396.09.001

Made in China
صنع في الصين

PARTS DESCRIPTION / وصف الأجزاء

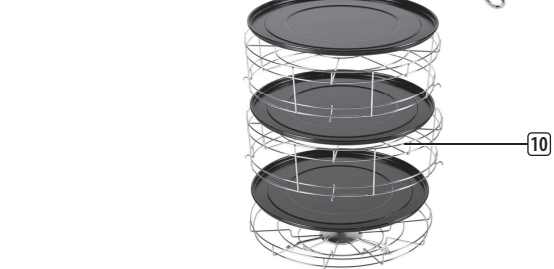

[WEEE Logo]



EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.

- Surface are liable to get hot during use.

PARTS DESCRIPTION

- Glass door
- Temperature control button
- Heating position button 1
- Time control button
- Indicator light
- Grid
- Baking tray
- Handle
- Rotisserie
- Pizza tray set

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- Wash before using the device for the first time all loose parts in warm soapy water. Rinse and dry thoroughly below. These parts are also dishwasher safe.
- Always place the unit on a flat stable surface and ensure at least 30 cm. free space around the unit. This device is not suitable for outdoor installation or use. Place the device on a safe place. Not too close to a wall, the wall can burn or discolour. Please make sure that curtains or something like that, not make contact with the device. Put nothing between the bottom of the device and the surface on which you place the device in order to prevent this will burn.
- Food, like bread, pizza and meat which is baked too long in the oven can burn; this can be prevented by checking the food in the oven regularly and not to stay too long in an enabled oven. Never heat food in jars or cans directly in the oven, the heat could explode and cause injury. Always use oven-proof bowls and plates.
- The oven may at first use spread some smell and smoke, this is normal, so use the device in a well ventilated area.
- CAUTION: the exterior of the device will get hot also. Avoid any physical contact, you can seriously injure. Always use the handle to the glass door to open the oven.


Use of accessories

- Use the grid to prepare dry foods such as bread.
- The baking tray is suitable for cooking food which fat is released, such as meat and chicken dishes. The baking tray can also be placed under the grid for any release of fat.
- The pizza tray can be placed in the middle of the oven, when you select the pizza function the pizza tray will rotate during baking.

USE

- Place the grid, the baking tray, rotisserie or pizza tray in the oven.
- Use the temperature control knob to set the desired temperature according to the dish to prepared. Use the heating position control knob to select the desired heating mode. Use the time setting control knob on to select the desired heating time, if you set the desired settings the indicator light will illuminate, this light will go out when the device had reached the setting time.

Heating position control button

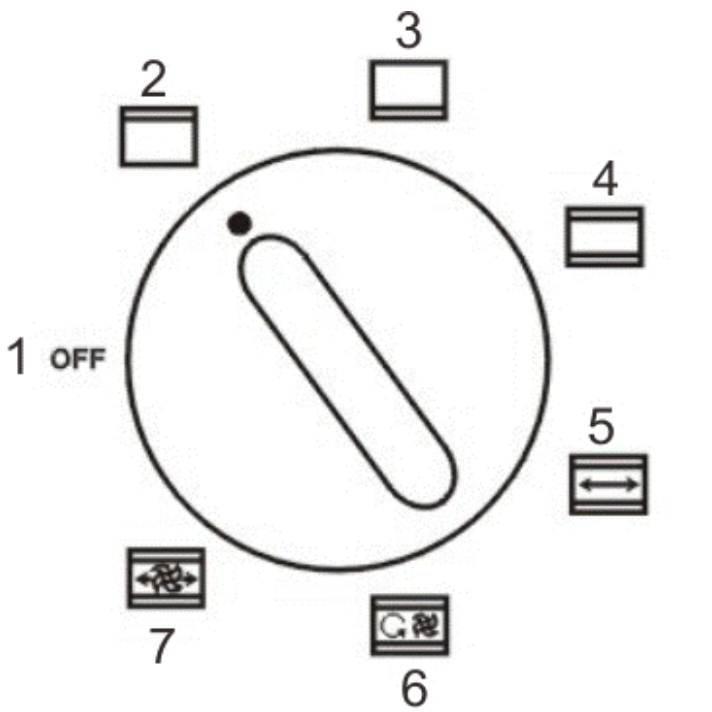

Heating position	Explanation
1	OFF
2	Upper heating
3	Lower heating
4	Upper and lower heating
5	Upper and lower heating with rotisserie
6	Upper and lower heating with convection and pizza
7	Upper and lower heating with convection and rotisserie

CLEANING AND MAINTENANCE

- Remove the plug from the outlet and let the device cool down. Wash all parts in warm soapy water. Rinse and dry thoroughly. These parts are also dishwasher safe. Clean the exterior with a damp cloth. Clean the inside of the device with a mild detergent or dedicated oven cleaner.
- Never immerse the device in water or other liquid. Do not place the device in the dishwasher to clean. If the inside of the oven is contaminated, boil and bake process can take longer time than normal.

WARRANTY

- This product is warrantied for 2 Years, for detailed terms, please refer to the Warranty Card.
- Following parts are not covered by warranty:
 - Knobs.
 - Any broken body parts.

Approximate life of this appliance under normal conditions is 3 Years.

For service and repairs, please call the following numbers:

United Electronics Co.
Saudi Arabia (Toll-free) 800 124 0900

ENVIRONMENT



- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

AR دليل الإرشادات

السلامة

- عند إهمال تعليمات السلامة لا تتحمل الشركة المصنعة أية مسؤولية عن وقوع تلفيات.
- في حالة تلف سلك الإمداد بالطاقة، يجب استبداله بواسطة الشركة المصنعة أو وكيل الصيانة أو أي فني مؤهل لتجنب التعرض إلى المخاطر.
- لا تحرك الجهاز مطلقاً عن طريق سحب السلك، وتأكد من أن السلك لن يصبح متشابكاً.
- يجب وضع الجهاز على سطح ثابت ومستو.
- يجب ألا يغلق المستخدم عن الجهاز أثناء توصيله بالكهرباء
- تم تصميم هذا الجهاز للاستخدام المنزلي فقط وللأغراض التي صُنع من أجلها.
- يُنهي عدم استخدام هذا الجهاز بواسطة أطفال أصغر من 8 سنوات، يمكن استخدام هذا الجهاز بواسطة الأطفال من سن 8 سنوات وما فوق والأشخاص ذوي القدرات الجسدية أو الحسية أو العقلية المحدودة أو الذين يفتقرون إلى الخبرة والمعرفة إذا تم الإشراف عليهم أو إرشادهم بشأن كيفية استخدام الجهاز بطريقة آمنة وفهمهم للمخاطر المحتملة. يجب على الأطفال عدم اللعب بهذا الجهاز. احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 8 سنوات. يجب على الأطفال عدم القيام بعملية التنظيف وصيانة المستخدم إلا إذا كانوا أكبر من 8 سنوات وفي وجود من يشرف عليهم.
- حماية نفسك من التعرض إلى صدمة كهربائية، لا تغمس السلك أو القابس أو الجهاز في الماء أو في أية سوائل أخرى.
- احرص على وضع الجهاز والسلك بعيداً عن متناول الأطفال الأقل من 8 سنوات.
- قد تكون درجة حرارة الأسطح الظاهرة مرتفعة عند تشغيل الجهاز.
- هذا الجهاز غير مخصص للتشغيل من خلال مؤقت خارجي أو نظام تحكم عن بعد منفصل.



- قد يسخن السطح أثناء الاستخدام.

وصف الأجزاء

- باب زجاجي
- زر التحكم في درجة الحرارة
- زر الوضع التشغيل
- زر التحكم في الوقت
- لمبة المؤشر
- الشبكة
- صينية الخبز
- مقبض
- شواية
- مجموعة صواني البيزا

قبل الاستخدام الأول

- قم بإخراج الجهاز والملحقات خارج العبوة. قم بإزالة الملصقات أو ورق الأومنيوم الواقعي عن الجهاز.

- ضع كبل الطاقة في المنقبس. (ملاحظة: تأكد من أن الجهد الذي يشار إليه على الجهاز يتطابق مع الجهد المحلي قبل توصيل الجهاز. الجهد 220 فولت - 240 فولت 50/60 هرتز)
- اغسل قبل استخدام الجهاز للمرة الأولى جميع الأجزاء المفككة كآلة بماء دافئ وصابون. اغسل وجفف بشكل كامل آداة. تجدر هذه الأجزاء آداة للاستخدام في غسالة الأطباق.
- ضع الوحدو دائماً على سطح ثابت ومستو وتأكد من وجود مساحة حالية تبلغ 30 سم على الأقل حول الوحدو. بعد هذا الجهاز غير مناسب للتوكيب أو الاستخدام في الخارج. ضع الجهاز في مكان آمن. يجب ألا يكون قريب للغاية من الحائط، لن الحائط قد يتعرض للاحتراق أو تغير لونه. يرجى التأكد من عدم ملامسة الستائر أو ما شابهها للجهاز. تجنب وضع أي شيء بين أسفل الجهاز والسطح الذي وضعت عليه الجهاز لتجنب التعرض للحروق.
- إن الأضعة مثل الخبز والبيتزا واللحم التي تستغرق وقتاً طويلاً في الخبز داخل الفرن قد تعرض للحرق، ولذلك يمكن تجنب هذا من خلال التأكد بأنظام من الطعام داخل الفرن وعدم تركه فترة طويلة في فرن عند التشغيل. تجنب تسخين الأضعة في وعاء زجاجي أو علب قصديرية مباشرة في الفرن، لأن الحرارة قد تسبب في الانفجار والإصابة بجروح. استخدم دائماً أوعية وأطباق صالحة للاستخدام مع الفرن.
- قد يفسد الفرن عند استخدامه للمرة الأولى رائحة ودخان، وهذا أمر طبيعي، لذلك استخدم الجهاز في منطقة جيدة التهوية.
- تحذير: يصبح الجزء الخارجي من الجهاز ساخناً أيضاً. تجنب أي ملامسة للتجنب، لأنك يمكن أن تعرض لإصابات خطيرة.
- استخدم دائماً مقبض الباب الزجاجي لفتح الفرن.


استخدام الملحقات

- استخدم الشبكة لإعداد الأطعمة الحليقة مثل الخبز.
- تعد صينية الخبز مناسبة لطهي الطعام الذي يخرج منه دودن مثل أطباق اللحم والدجاج. يمكن وضع صينية الخبز تحت الشبكة لتجميع الدودن.
- يمكن وضع صينية البيزا في منتصف الفرن، وعندما تقوم بتجديد البيزا، سوف تقوم الصينية بالدوران أثناء الخبز.

الاستخدام

- ضع الشبكة أو صينية الخبز أو الشواية أو صينية البيزا داخل الفرن.
- استخدم مقبض التحكم في درجة الحرارة لضبط درجة الحرارة المطلوبة وفقاً للطبق المراد تحضيره. استخدم مقبض التحكم في وضع التسخين لتجديد وضع التسخين المطلوب. استخدم مقبض التحكم في إعداد الوقت لتحديد وقت التسخين المرغوب فيه. إذا قمت بتحديد الإعدادات المطلوبة، سوف يضيئ ضوء المؤشر ويتطفيئ عندما يغلق الجهاز إلى وقت الإعداد.

زر التحكم في وضع السخين

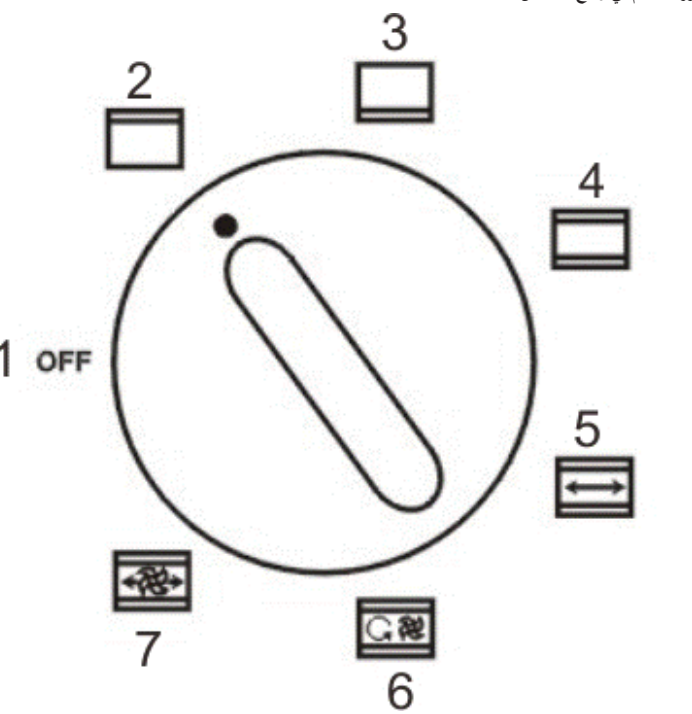

وضع السخين	الشرح
1	OFF
2	التسخين العلوي
3	التسخين السفلي
4	التسخين العلوي والسفلي
5	التسخين العلوي والسفلي باستخدام الشواية
6	التسخين العلوي والسفلي مع الشغل الحراري والبيتزا
7	التسخين العلوي والسفلي مع الشغل الحراري والشواية

التنظيف والصيانة

- أزّل القابس من مخرج الطاقة ثم اترك الجهاز ليبرد. اغسل جميع الأجزاء بماء دافئ وصابون. اغسل وجفف بشكل كامل. تجدر هذه الأجزاء آلة للاستخدام في غسالة الأطباق. نظف الجزء الخارجي بقطعة قماش رطبة. نظف الجزء الداخلي من الجهاز بمنظف معتدل أو منظف جاف بالفرن.
- تجنب غمس الجهاز جافاً في ماء أو أي سائل آخر. تجنب وضع الجهاز في غسالة الأطباق لتنظيفه. إذا كان الجزء الداخلي من الفرن ملوثاً، فإن عملية الغلي والخبز قد تستغرق وقتاً أطول من المعتاد.

ضمان

- هذا الجهاز مضمون لمدة عامين. لمعرفة أحكام الضمان يرجى قراءة كرت ضمان المنتج.
- المكونات أداة غير مشمولة بالضمان:

– المقابض.

– أجزاء البدن القابلة للكسر.

العمر الافتراضي للجهاز يعتمد على ظروف التشغيل العادية. العمر الافتراضي 3 سنوات تقريبا.

الشركة المستهداة للإلكترونيات

المملكة العربية السعودية (الهاتف المجاني) 800 124 0900

البيئة



- ومسبب العرض الثابت والقصير، يجب ألا يتم وضع هذا الجهاز في سلة النفايات المنزلية في نهاية عمره الافتراضي، ولكن يجب تقديمه إلى نقطة المراجعة لإعادة تدوير الأجهزة المنزلية الكهربائية والإلكترونية. إن كلاً من المرء الموجود على الجهاز، ودليل التعليمات، والبطارية، والبطارية، يمكن إعادة تدويرها في غسالة التجهيزات في هذا الجهاز. من خلال إعادة تدوير الأجهزة المنزلية، فإنك تقدم إسهام هام للحفاظ على البيئة التي نعيش فيها. استفسر من السلطات المحلية عن نقطة التجميع.

Made in China
صنع في الصين

© Princess 2019