




EN Instruction manual

AR دليل الاستخدام



Cake pop maker
01.132403.09.001

وصف الأجزاء / PARTS DESCRIPTION

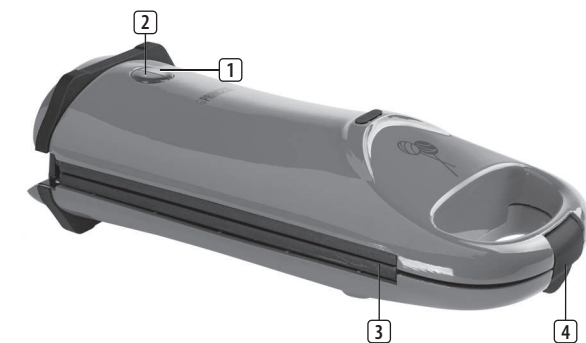

EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.

PARTS DESCRIPTION

- Heat up indicator
- Power indicator
- Baking plates
- Lock clip

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- When the device is turned on for the first time, a slight odor will occur. This is normal, ensure adequate ventilation. This fragrance is only temporary and will disappear soon.
- Place the device in a well ventilated space.

USE

- Slightly grease the non-stick coating of the baking plates with oil or butter.
 - Close the device and plug it into the wall outlet. Both indication lights will illuminate, indicating that the device is now preheating.
 - It will take approximately 3 minutes to reach the recommended baking temperature. The green power indication light will go off once the device is ready to use.
 - Fill each mold with batter. Make sure the batter is spread evenly in the molds.
 - Please visit our website for recipes: www.service.tristar.eu.
 - Gently close the lid, ensuring it is locked well. Do not slam the lid down, as it may cause the mixture to run off the molds.
 - The appliance is designed to flip over, this allows you to spread the batter evenly.
 - The actual preparation time will vary depending on the type of batter you use. A general guide line is 2 to 3 minutes preparation time.
- Always use a plastic or wooden spatula. Never use a sharp or metal object, as this will damage the non-stick coating of the baking plates.

CLEANING AND MAINTENANCE

- Remove the plug from the wall outlet and allow the device to cool both halves open.
- Clean the baking plates with a damp cloth or soft brush.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.

WARRANTY

- his product is warranted for 2 Years, for detailed terms, please refer to the Warranty Card.
- Following parts are not covered by warranty:
 - Knobs.
 - Any broken body parts.

Approximate life of this appliance under normal conditions is 3 Years.

For service and repairs, please call the following numbers:

United Electronics Co.
Saudi Arabia (Toll-free) 800 124 0900

ENVIRONMENT

This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

AR

السلامة

- عند إهمال تعليمات السلامة لا تتحمل الشركة المُصنِّعة أية مسؤولية عن وقوع تلفيات.
- في حالة تلف سلك الإمداد بالطاقة، يجب استبداله بواسطة الشركة المصنعة أو وكيل الصيانة أو أي فني مؤهل لتجنب التعرض إلى المخاطر.
- لا تحرك الجهاز مطلقاً عن طريق سحب السلك، وتأكد من أن السلك لن يصبح متشابكاً.
- يجب وضع الجهاز على سطح ثابت ومستو.
- يجب ألا يغفل المستخدم عن الجهاز أثناء توصيله بالكهرباء.
- تم تصميم هذا الجهاز للاستخدام المنزلي فقط ولأغراض التي صُنع من أجلها.
- ينبغي عدم استخدام هذا الجهاز بواسطة أطفال حتى عمر 8 سنوات. يمكن استخدام هذا الجهاز بواسطة الأطفال من سن 8 سنوات وما فوق والأشخاص ذوي القدرات الجسدية أو الحسية أو العقلية المحدودة أو الذين يقتفرون إلى الخبرة والمعرفة إذا تم الإشراف عليهم أو إرشادهم بشأن كيفية استخدام الجهاز بطريقة آمنة وفهمهم للمخاطر المحتملة. يجب على الأطفال عدم اللعب بهذا الجهاز.
- احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 8 سنوات.
- يجب على الأطفال عدم القيام بعملية التنظيف وصيانة المستخدم إلا إذا كانوا أكبر من 8 سنوات وفي وجود من يشرف عليهم.
- لحماية نفسك من التعرض إلى صدمة كهربائية، لا تغمس السلك أو القابض أو الجهاز في الماء أو في أية سوائل أخرى.
- احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 8 سنوات.
- قد تكون درجة حرارة الأسطح الظاهرة مرتفعة عند تشغيل الجهاز.
- هذا الجهاز غير مخصص للتشغيل من خلال مؤقت خارجي أو نظام تحكم عن بعد منفصل.

وصف الأجزاء

- مؤشر الإحماء
- مؤشر الطاقة
- أدوات الخبز
- مشبك القفل

قبل الاستخدام الأول

- قم بإخراج الجهاز والملحقات خارج العلبة. قم بإزالة للملفقات، أو البلاستيك أو ورق الألوومنيوم الورقي عن الجهاز.
- ضع الجهاز على سطح ثابت ومستو وتأكد من وجود حد أدنى من المساحة الخالية حول الجهاز قدرها 10 سم. هذا الجهاز غير مناسب للتركيب في خزانة أو للاستخدام الخارجي.
- ضع كابل الطاقة في المقبس (ملاحظة: تأكد أن الجهد الكهربائي المشار إليه على الجهاز مطابق للجهد المحلي قبل توصيل الجهاز. الجهد الكهربائي 220V-240V وفولت 50/60 هرتز).
- عند تشغيل الجهاز للمرة الأولى، ستصدر رائحة خفيفة. هذا أمر طبيعي، تأكد من وجود قوة كافية. هذه الرائحة ما هي إلا رائحة مؤقتة وستختفي سريعاً.
- ضع الجهاز في مكان معرض للهوية جيدة

الاستخدام

- يضيء الشقة غير اللاصقة لأدوات الخبز بقدر قليل من الزيت أو الزيت.
- أغلق الجهاز ثم وصل القابض بخرج الطاقة الموجود بالجهاز. سيضيئ كل من ضوءي المؤشر بما يعني أن الجهاز الآن في مرحلة التسخين المسبق.
- سيستغرق الأمر حوالي 3 دقائق ليصل إلى درجة حرارة الخبز الموصى بها. سينظم ضوء مؤشر الطاقة الأخضر بمجرد أن يصبح الجهاز جاهزاً للاستخدام.
- قم بملء كل قالب بالخليط. تأكد أن الخليط موزع بالتساوي في القوالب.
- تفضل بزيارة موقعنا الإلكتروني للحصول على وصفات: www.service.tristar.eu.
- إفعل العطاء برفق حتى تأكد من أنه غطى القفل. لا تفلق العطاء بقوة، لأن ذلك قد يسبب لتسكاب الخليط من القوالب.
- تم تصميم هذا الجهاز للقلب، مما يسمح لك بتوزيع الخليط بشكل متساو.
- تختلف زمن التحضير الفعلي وفقاً لنوع الخليط المستخدم. يستغرق زمن الإعداد وفقاً للإرشادات العامة من 2 إلى 3 دقائق.
- استخدم دالمة معلقة بلاستيكية أو خشبية. لا تستخدم معلقة أداة حادة أو معدنية؛ لأن هذا قد يتلف الطبقة غير اللاصقة لأدوات الخبز.

التنظيف والصيانة

- إزل القابض من مخرج الطاقة الموجود بالجهاز ثم اترك الجهاز ليبرد تاركاً نصفه مفتوح.
- قم بتنظيف ألواح الخبز باستخدام قطعة قماش رطبة أو بفرشاة ناعمة.
- نظف الجهاز بقطعة قماش رطبة. لا تستخدم مطلقاً مواد تنظيف قوية أو كاشطة، أو اللوف الخشن أو الألياف السلكية الذي قد يتسبب في تلف الجهاز.
- احرص ألا تغمس الجهاز الكهربائي أبداً في الماء أو أي سائل آخر. لا يمكن تنظيف الجهاز في غسالة الأطباق.

الضمان

- يتم توفير ضمان لمدة عامان لهذا المنتج، لقراءة شروط الضمان التفصيلية يرجى الرجوع إلى بطاقة الضمان.
- لا يغطي الضمان الأجزاء التالية:

– المقبض

– أي أجزاء مكشورة

عمر حياة هذا الجهاز 3 سنوات في ظل ظروف التشغيل العادية.

للمساعدة والحلمة يرجى الاتصال بالرقم التالي:

United Electronics Co

المسجلة رقم محلي 0900 124 800

البيئة

وبسبب العرض الثابت والصديق، يجب ألا يتم وضع هذا الجهاز في سلة النفايات المنزلية في نهاية عمره الافتراضي، ولكن يجب تقديمه إلى نقطة المركزية لإعادة تدوير الأجهزة المنزلية الكهربائية والإلكترونية. إن كلاً من الرمز الموجود على الجهاز، ورمز التعليمات والتنظيف عبارة عن هذه الشارة العامة. يمكن إعادة تدوير المواد المستخدمة في هذا الجهاز. من خلال إعادة تدوير الأجهزة المنزلية، فإنك تقدم إسهام هام للحفاظ على البيئة التي نعيش فيها. استفسر من السلطات المحلية عن نقطة التجميع.