




220-240V / 50-60Hz / 600W
Stick Vacuum cleaner
المكنسة الكهربائية العمودية
01.331925.09.001

Made in China
صنع في الصين

PARTS DESCRIPTION / وصف الأجزاء

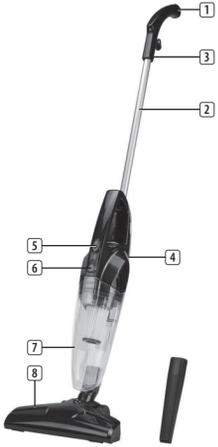

EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

PARTS DESCRIPTION

- Extension tube handle
- Extension tube
- Release button
- Main body
- On/off power switch
- Dust container release button
- Dust container
- Floor brush

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Press the locking clip and slide the extension tube into the device until it clicks.
- Only use the device if all the filters included the dust compartment are placed properly, a damaged or improperly installed filter or dust compartment may damage the unit.
- The opening of the suction hole must always be open and free from obstruction, otherwise the engine may overheat and be damaged.
- Unwind the power cord and insert the plug into the socket.

USE

- You should regularly check that the nozzle cushions and the brush roller are clean in order to avoid scratching sensitive floors.
- Start the device by pushing the on/off button
- For tables, furniture and car seats you can remove the hand unit by pressing in the release button. The hand unit will now come free and can easily be removed.
- The crevice nozzle can be fitted in order to reach awkward places.

CLEANING AND MAINTENANCE

Emptying and cleaning the dust compartment/filter

- Release the hand unit out of the handle.
- Remove the whole dust container by pressing the release button and turn the dust container.
- Pulling out the filters and emptying the contents of the dust container into a suitable vessel or bag.
- The dust container and the filter can be cleaned and rinsed with warm water. Make sure the parts are dry before they are assembled.
- Assembling the parts by following up the opposite procedures when detaching the dust container.

WARRANTY

- This product is warranted for 2 Years, for detailed terms, please refer to the Warranty Card.
- Following parts are not covered by warranty:
 - Knobs.
 - Any broken body parts.

Approximate life of this appliance under normal conditions is 3 Years.

For service and repairs, please call the following numbers:

United Electronics Co.
Saudi Arabia (Toll-free) 800 124 0900

ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

AR دليل الإرشادات

السلامة

- عند إهمال تعليمات السلامة لا تتحمل الشركة المصنعة أية مسؤولية عن وقوع تلفيات.
- في حالة تلف سلك الإمداد بالطاقة، يجب استبداله بواسطة الشركة المصنعة أو وكيل الصيانة أو أي فني مؤهل لتجنب التعرض إلى المخاطر.
- لا تحرك الجهاز مطلقاً عن طريق سحب السلك، وتأكد من أن السلك لن يصبح متشابكاً.
- يجب وضع الجهاز على سطح ثابت ومستو.
- تم تصميم هذا الجهاز للاستخدام المنزلي فقط وللأغراض التي صُنع من أجلها.

- يتبني عدم استخدام هذا الجهاز بواسطة أطفال أصغر من 8 سنوات. يمكن استخدام هذا الجهاز بواسطة الأطفال من سن 8 سنوات وما فوق والأشخاص ذوي القدرات الجسدية أو الحسية أو العقلية المحدودة أو الذين يفقدون إلى الخبرة والمعرفة إذا تم الإشراف عليهم أو إرشادهم بشأن كيفية استخدام الجهاز بطريقة آمنة وفهمهم للمخاطر المحتملة. يجب على الأطفال عدم اللعب بهذا الجهاز. احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 8 سنوات. يجب على الأطفال عدم القيام بعملية التنظيف وصيانة المستخدم إلا إذا كانوا أكبر من 8 سنوات وفي وجود من يشرف عليهم.
- لحماية نفسك من التعرض إلى صدمة كهربائية، لا تغمس السلك أو القابس أو الجهاز في الماء أو في أية سوائل أخرى.
- يجب فصل القابس عن مقبس مخرج الطاقة قبل تنظيف الجهاز أو صيانتة.

وصف الأجزاء

- مقبض أنبوب الإطالة
- أنبوب الإطالة
- زر القابس
- جسم الجهاز
- مفتاح تشغيل/إيقاف تشغيل الطاقة
- زر تحرير وعاء الغبار
- وعاء الغبار
- فرشاة الأرضية

قبل الاستخدام الأول

- قم بإخراج الجهاز والملحقات خارج العلبة. قم بإزالة الملصقات أو البلاستيك أو ورق الأوميوم الواقعي عن الجهاز.
- انضغط على مشبك القفل وحرك أنبوب الإطالة في الجهاز إلى أن تسمع صوت استقرار.
- يجب ألا تستخدم الجهاز إلا إذا كانت جميع القلائع مغلقة فيها صندوق الغبار موضحة بشكل صحيح، لأن استخدام صندوق الغبار أو فلاة تالف أو غير مرتب بصورة صحيحة قد يؤدي إلى تلف الوحدة.
- يجب أن تكون فتحة فوهة الشفط مفتوحة دائماً وحالية من العوائق، وإلا قد يسخن المحرك بشكل زائد وتلف.
- قم بسط سلك الطاقة وأدخل القابس في المقبس.

الاستخدام

- يجب أن تأكد بانتظام أن بطانات الفوهة وبكرة الفرشاة نظيفين لتجنب حشش الأرضيات الحساسة.
- ابدأ تشغيل الجهاز عن طريق الضغط على زر التشغيل/إيقاف التشغيل.
- بالنسبة للطاولات والأثاث ومقاعد السيارة يمكنك إزالة وحدة اليد عن طريق الضغط على زر القابس. ستصبح وحدة اليد الآن منفصلة ويمكن إزالتها بسهولة.
- يمكن تركيب فوهة الشفط للوصول إلى الأماكن صعبة الوصول.

التنظيف والصيانة

تفريغ وتنظيف المكان المخصص للجهاز/غبار الغبار

- فك وحدة اليد من المقبض.
- قم بإزالة وعاء الغبار بالكامل عن طريق الضغط على زر القابس وقم بتدوير وعاء الغبار.
- أخرج القلائع وقم بتفريغ محتويات وعاء الغبار في وعاء مناسب أو كيس.
- يمكن تنظيف وعاء الغبار والقفل وغطاهما معاً دافئ. تأكد من أن الأجزاء جافة قبل تجميعها.
- قم بتجميع الأجزاء باتباع إجراءات فك وعاء الغبار لكن بطريقة معكوسة.

ضمان

- هذا الجهاز مضمون لمدة عامين ، لمعرفة أحكام الضمان يرجى قراءة كرت ضمان المنتج.
- المنتجات أدياه غير مشمولة بالضمان:

– المقابض.

– أجزاء البدن القابلة للكسر.

العمر الافتراضي للجهاز يعتمد على ظروف التشغيل العادية . العمر الافتراضي 3 سنوات تقريبا.

يرجى الاتصال على أرقام خدمة الصيانة والتفصيل الآتية:

الشركة المنحدة للإلكترونيات

المسئلة العربية السعودية (الهاتف المجاني) 800 124 0900

البيئة



وسبب العرض الثالث والضيق يجب ألا يتم وضع هذا الجهاز في سلة النفايات المنزلية في نهاية عمره الافتراضي، ولكن يجب نقله إلى نقطة المركبة لإعادة تدوير الأجهزة المنزلية الكهربائية والإلكترونية. إن كلاً من الرمز الموجود على الجهاز، ودليل التعليمات والتعليق بجدارك من هذه السلسلة الهامة. يمكن إعادة تدوير المواد المستخدمة في هذا الجهاز. من خلال إعادة تدوير الأجهزة المنزلية، فإنك تقدم إسهام هام للحفاظ على البيئة التي نعيش فيها. استفسر من السلطات المحلية عن نقطة التجميع.