




EN Instruction manual  
AR الاستخدام

Made in China  
صنع في الصين



Handheld Garment Steamer  
01.332842.04.001

وصف الأجزاء / PARTS DESCRIPTION

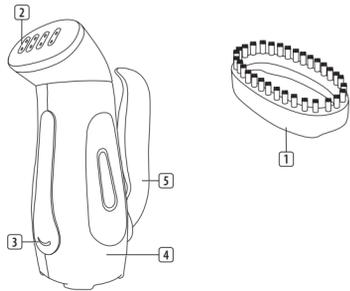

EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children from children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Keep the appliance and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- Do not left the iron unattended while it is connected to the mains supply.
- Do not open the waterreservoir during use.
- Remove the plug from the socket before the water reservoir will be filled with water.
- Surface are liable to get hot during use.

PARTS DESCRIPTION

- Fabric brush
- Steam nozzle
- Indication light
- Main body/water tank
- Handle

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Please make sure the appliance is not plugged in, please pull out the plug before adding water and cleaning the steamer
- Rotate the travel steam nozzle counterclockwise, take the steam nozzle out.
- Fill water to the water tank until the water level reaches the mark "Max" on the water gauge.
- Then insert the steam nozzle into the main body, rotate it 90 degree clockwise to lock the steam nozzle.
- Using tap water in your garment steamer may cause lime scale in the water tank. We recommend distilled water in order to prevent lime scale and prolong the life of your steamer.

USE

- Add water into the tank before use an rotate the steam nozzle until it's locked.
- When using the steamer for the first time, it is recommended that you let it operate for about 5 minutes in advance and then pull out the plug. When the steamer is gradually cooled down, clean the container, and then re-add water to steam.
- Place the steamer up-right on a flat surface, plug it in, and the indicator light will light up.
- Within 150 seconds, the steamer will be ready for use.
- For the best results, hold clothes taut and steam lightly in a vertical motion. Do not move the steamer too quickly and do not lean or tilt the steamer over 85°, doing so may result in spillage of hot water.
- To prolong its lifespan, do not use your steamer without water. When there is a little steam, please pull out the plug and re-add water to the maximum water level.
- Before re-add water, unplug the appliance, and let it cool down.
- When using the steamer make sure the water level does not exceed the maximum water level. Excess water may result in water leakage and water spraying.
- Before disassembling the appliance, be sure the steamer is completely cooled down.
- CAUTION:** the high temperature can reach 180 °C, please confirm whether the material is high-temperature resist or not before steaming. Do not leave the spraying panel on the same spot for a long time to avoid damage to the garment.
- CAUTION:** when not using the appliance and before storage, continue steaming until the water tank runs out of water, then turn off and unplug the appliance and wait until the appliance is cooled down completely.

CLEANING AND MAINTENANCE

- When not using the appliance and before storage, continue steaming until the water tank runs out of water, then turn off and unplug the appliance and wait until the appliance is cooled down completely.
- Do not put the appliance in water. use a dry clean cloth to dry the appliance, no special cleaning agent is needed.
- Make sure the main body is dry before storage or packing.

GUARANTEE

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.

ENVIRONMENT

- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on

the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

AR دليل الإرشادات

- السلاطة
- عند إهمال تعليمات السلامة لا تتحمل الشركة المصنعة أية مسؤولية عن وقوع تلفيات.
- في حالة تلف الإمداد بالطاقة، يجب استبداله بواسطة الشركة المصنعة أو وكيل الصيانة أو أي فني مؤهل لتجنب التعرض إلى المخاطر.
- لا تحرك الجهاز مطلقاً عن طريق سحب السلك، وتأكد من أن السلك لن يصبح متشابكاً.
- يجب ألا يعقل المستخدم عن الجهاز أثناء توصيله بالكهرباء
- تم تصميم هذا الجهاز للاستخدام المنزلي فقط وللأغراض التي صُنع من أجلها. ينبغي عدم استخدام هذا الجهاز بواسطة أطفال أصغر من 8 سنوات. يمكن استخدام هذا الجهاز بواسطة الأطفال من سن 8 سنوات وما فوق والأشخاص ذوي القدرات الجسدية أو الحسية أو العقلية المحدودة أو الذين يفتقرون إلى الخبرة والمعرفة إذا تم الإشراف عليهم أو إرشادهم بشأن كيفية استخدام الجهاز بطريقة آمنة وفهمهم للمخاطر المحتملة. يجب على الأطفال عدم اللعب بهذا الجهاز. احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 8 سنوات. يجب على الأطفال عدم القيام بعملية التنظيف وصيانة المستخدم إلا إذا كانوا أكبر من 8 سنوات وفي وجود من يشرف عليهم.
- لحماية نفسك من التعرض إلى صدمة كهربائية، لا تعمس السلك أو القابس أو الجهاز في الماء أو في أية سوائل أخرى.
- احرص على إبقاء الجهاز والسلك بعيدان عن متناول الأطفال أقل من 8 سنوات عندما يكونان متصلان بالكهرباء أو حتى يبردا.
- لا تترك المكواة دون إشراف عندما تكون متصلة بمأخذ التيار الرئيسي.
- لا تفتح خزان الماء أثناء الاستخدام.
- قم بإزالة القابس من المقبس قبل ملء خزان الماء.

- قد يسخن السطح أثناء الاستخدام.

وصف الأجزاء

- فرشاة السج
- فوهة البخار
- لمبة مؤشر
- جسم الجهاز/خزان الماء
- مقبض

قبل الاستخدام الأول

- قم بإخراج الجهاز والملحقات خارج العلبة. قم بإزالة الملصقات أو البلاستيك أو ورق الأوميميد الورقي عن الجهاز.
- يرجى التأكد من أن الجهاز غير متصل بالكهرباء، ويرجى سحب القابس قبل إضافة الماء وتنظيف الباردة
- أزور فوهة البخار مكنى مغزلات السادة، وافصل فوهة البخار.
- املا خزان المياه بالماء حتى يصل منسوب المياه إلى العلامة "Max" على مقياس الماء.
- لم أدخل فوهة البخار في جسم الجهاز، وأدوره 90 درجة في اتجاه مغزلات الساعة لتركيب فوهة البخار.
- استخدم مياه الصنبور في مكواة الملابس البخار الخاصة بك قد يؤدي إلى تكوين رواسب كلسية في خزان المياه. نوصي باستخدام الماء المقطر لمنع الرواسب الكلسية وإفالة عمر مكواة الملابس البخار الخاصة بك.

الاستخدام

- أضف الماء إلى الخزان قبل الاستخدام وقم بتدوير فوهة البخار حتى يثبت في مكانه.
- عند استخدام مكواة البخار للمرة الأولى، يوصى بتشغيلها لمدة 5 دقائق تقريباً مقدماً ثم افصل المقبس. عندما تبرد مكواة البخار تدريجياً، نظف الحماوية ثم أعد إضافة الماء.
- ضع مكواة البخار في وضع مستقيم على سطح مستو، وأوصلها بالكهرباء، وتنظيف فوهة البخار.
- في غضون 150 ثانية، ستكون مكواة البخار جاهزة للاستخدام.
- للمصنوع على أفضل النتائج، اسحب الملابس مندودة وكنها البخار بشكل خفيف في حركة عمودية. لا تحرك مكواة البخار بسرعة كبيرة ولا تلمسها بأطراف أكثر من 85 درجة، كي لا يؤدي ذلك إلى انسكاب الماء الساخن.
- للإطالة من عمر مكواة البخار فلا تستخدمها دون ماء، عندما يكون هناك القليل من البخار، يُرجى سحب القابس وإعادة إضافة الماء حتى يصل إلى الحد الأقصى.
- قبل إعادة إضافة الماء، افصل الجهاز عن الكهرباء، ودعه يبرد.
- عند استخدام مكواة البخار تأكد أن منسوب الماء لم يتجاوز علامة الحد الأقصى. قد تؤدي المياه الزائدة إلى تسرب المياه وخيش.
- قبل تفكيك الجهاز، تأكد أن مكواة البخار قد بردت تمامًا.
- تنبيه: درجة الحرارة العالية قد تصل إلى 180 درجة مئوية، الرجاء التأكد من أن الأقمشة مقاومة للحرارة العالية قبل البدء في الكي بالبخار. لا تترك لوح الرش في المكان نفسه لفترة طويلة لتجنب إلحاق الملابس.
- تنبيه: عند عدم استخدام الجهاز وقبل تحريكه، استمر في إخراج البخار حتى يبرد الماء من خزان الماء ثم أوقف تشغيل الجهاز وقفله عن الكهرباء وانظر حتى يبرد تمامًا.

التنظيف والصيانة

- عند عدم استخدام الجهاز وقبل تحريكه، استمر في إخراج البخار حتى يبرد الماء من خزان الماء ثم أوقف تشغيل الجهاز وقفله عن الكهرباء وانظر حتى يبرد تمامًا.
- لا تعمر الجهاز في الماء، استخدم قطعة قماش نظيفة وجافة لتنظيف الجهاز. لا يحتاج إلى منظفات خاصة.
- تأكد من جفاف جسم الجهاز قبل تحريكه أو تعبته.

الضمان

- يحمل هذا المنتج ضمان لمدة 24 شهر. يخضع هذا الضمان سارياً طالما تم استخدام المنتج حسب التعليمات والأغراض التي صنع من أجلها الجهاز. إضافة إلى ذلك، يجب إرسال إثبات الشراء الأصلي (فاتورة أو ورقة بيع أو إيصال) مع تاريخ الشراء واسم بائع البضاعة ورقم المنتج.

البيئة

- ويصعب العرض الثالث والاضيق، يجب ألا يتم وضع هذا الجهاز في سلة النفايات المنزلية في نهاية عمره الافتراضي، ولكن يجب نقله إلى نقطة المركزية لإعادة تدوير الأجهزة الكهربائية والإلكترونية. إن كلاً من الرمز الموجود على الجهاز ودليل التعليمات والتعليق يشاركون من هذه المسألة الهامة. يمكن إعادة تدوير المواد المستخدمة في هذا الجهاز. من خلال إعادة تدوير الأجهزة المنزلية، فإنك تقدم إسهام هام للحفاظ على البيئة التي نعيش فيها. استفسر من السلطات المحلية عن نقطة التجميع.