




EN Instruction manual

AR دليل الاستخدام



وصف الأجزاء / PARTS DESCRIPTION

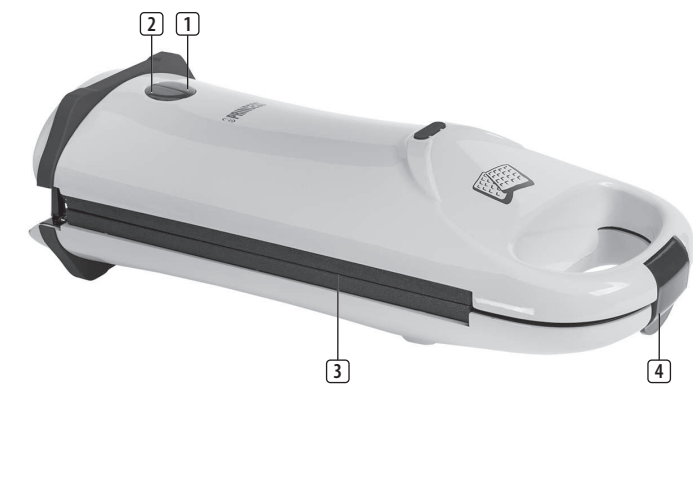

## EN Instruction manual

### SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.

### PARTS DESCRIPTION

- Heat up indicator
- Power indicator
- Baking plates
- Lock clip

### BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- When the device is turned on for the first time, a slight odor will occur. This is normal, ensure adequate ventilation. This fragrance is only temporary and will disappear soon.
- Place the device in a well ventilated space.

### USE

- Slightly grease the non-stick coating of the baking plates with oil or butter.
- Close the device and plug it into the wall outlet. Both indication lights will illuminate, indicating that the device is now preheating.
- It will take approximately 3 minutes to reach the recommended baking temperature. The green power indication light will go off once the device is ready to use.
- Fill each mold with batter. Make sure the batter is spread evenly in the molds.
- Please visit our website for recipes: <http://service.princess.info>
- Gently close the lid, ensuring it is locked well. Do not slam the lid down, as it may cause the mixture to run off the molds.
- The appliance is designed to flip over, this allows you to spread the batter evenly.
- The actual preparation time will vary depending on the type of batter you use. A general guide line is 2 to 3 minutes preparation time.
- Always use a plastic or wooden spatula. Never use a sharp or metal object, as this will damage the non-stick coating of the baking plates.

### CLEANING AND MAINTENANCE

- Remove the plug from the wall outlet and allow the device to cool both halves open.
- Clean the baking plates with a damp cloth or soft brush.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.

### GUARANTEE

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.
- For the detailed warranty conditions, please refer to our service website: [service.princess.info](http://service.princess.info)

### WARRANTY

- this product is warrantied for 2 Years, for detailed terms, please refer to the Warranty Card.
- Following parts are not covered by warranty:
  - Knobs.
  - Any broken body parts.

Approximate life of this appliance under normal conditions is 3 Years.

For service and repairs, please call the following numbers:

United Electronics Co.

Saudi Arabia (Toll-free) 800 124 0900

### ENVIRONMENT

- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this

important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

## AR

### السلامة

- عند إهمال تعليمات السلامة لا تتحمل الشركة المُصنِّعة أية مسئولية عن وقوع تلفيات.
- في حالة تلف سلك الإمداد بالطاقة، يجب استبداله بواسطة الشركة المصنعة أو وكيل الصيانة أو أي فني مؤهل لتجنب التعرض إلى المخاطر.
- لا تحرك الجهاز مطلقاً عن طريق سحب السلك، وتأكد من أن السلك لن يصبح متشابكاً.
- يجب وضع الجهاز على سطح ثابت ومستو.
- يجب ألا يغفل المستخدم عن الجهاز أثناء توصيله بالكهرباء.
- تم تصميم هذا الجهاز للاستخدام المنزلي فقط وللاغراض التي صُنع من أجلها.
- ينبغي عدم استخدام هذا الجهاز بواسطة أطفال حتى عمر 8 سنوات. يمكن استخدام هذا الجهاز بواسطة الأطفال من سن 8 سنوات وما فوق والأشخاص ذوي القدرات الجسدية أو الحسية أو العقلية المحدودة أو الذين يفتقرون إلى الخبرة والمعرفة إذا تم الإشراف عليهم أو إرشادهم بشأن كيفية استخدام الجهاز بطريقة آمنة وفيهمهم للمخاطر المحتملة. يجب على الأطفال عدم اللعب بهذا الجهاز.
- احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 8 سنوات.
- يجب على الأطفال عدم القيام بعملية التنظيف وصيانة المستخدم إلا إذا كانوا أكثر من 8 سنوات وفي وجود من يشرف عليهم.
- لحماية نفسك من التعرض إلى صدمة كهربائية، لا تغمس السلك أو القابض أو الجهاز في الماء أو في أية سوائل أخرى.
- احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 8 سنوات.
- قد تكون درجة حرارة الأسطح الظاهرة مرتفعة عند تشغيل الجهاز.
- هذا الجهاز غير مخصص للتشغيل من خلال مؤقت خارجي أو نظام تحكم عن بعد منفصل.

### وصف الأجزاء

- مؤشر الإحماء
- مؤشر الطاقة
- ألواح الخبز
- مشبك القفل

### قبل الاستخدام الأول

- قم بإخراج الجهاز والملحقات خارج العلبة. قم بإزالة الملصقات، أو البلاستيك أو ورق الأوكسيوم الواقي عن الجهاز.
- ضع الجهاز على سطح ثابت ومستو وتأكد من وجود حد أدنى من المساحة الحرة حول الجهاز قدرها 10 سم. هذا الجهاز غير مناسب للتثبيت في حزانة أو للاستخدام الخارجي.
- ضع كابل الطاقة في المنفذ وصلاً؛ وتأكد أن الجهد الكهربائي المشار إليه على الجهاز مطابق للجهد المحلي قبل توصيل الجهاز. الجهد الكهربائي 220-240 فولت. 50/60 هرتز.
- عند تشغيل الجهاز للمرة الأولى، ستصدر رائحة خفيفة. هذا أمر طبيعي، وتأكد من وجود قوة كافية. هذه الرائحة ما هي إلا رائحة مؤقتة وستختفي سريعاً.
- ضع الجهاز في مكان معرض للهوية جيدة

### الاستخدام

- بعد الطاقة غير اللازمة لألواح الخبز بقدر قليل من الزيت أو الزبدة.
- أغلق الجهاز ثم وصل القابض بخرج الطاقة الموجود بالخلف. سيضيئ كل من ضوءي المؤشر بما يعين أن الجهاز الآن في مرحلة التسخين المسبق.
- سيستغرق الأمر حوالي 3 دقائق ليصل إلى درجة حرارة الخبز الموصى بها. سيظهر ضوء مؤشر الطاقة الأحمر بمجرد أن يصبح الجهاز جاهزاً للاستخدام.
- قم بتدوير كل قلب بالخليط. تأكد أن الخليط موزع بالتساوي في القالب.
- تضبط دوائر مؤقتنا الإلكتروني للخبز على وصفات: [www.service.tristar.eu](http://www.service.tristar.eu).
- أغلق الغطاء برفق حتى تأكد من أنه محكم القفل. لا تعلق الغطاء بقوة، لأن ذلك قد يسبب انسكاب الخليط من القالب.
- تم تصميم هذا الجهاز للقلب، مما يسمح لك بتوزيع الخليط بشكل متساو.
- تختلف زمن التجهيز الفعلي وفقاً لنوع الخليط المستخدم. يستغرق زمن الإعداد وفقاً للإرشادات العامة من 2 إلى 3 دقائق.
- استخدم دالماً ملفعة بلاستيكية أو خشبية. لا تستخدم مطقة أداة حادة أو معدنية؛ لأن هذا قد يلفظ الطبقة غير اللاصقة لألواح الخبز.

### التنظيف والصيانة

- إزل القابض من مخرج الطاقة الموجود بالخلف ثم اترك الجهاز ليبرد تاركاً نصفه مفتوحاً.
- قم بتنظيف ألواح الخبز باستخدام قطعة قماش رطبة أو بفرشاة ناعمة.
- يُظفّر الجهاز بقطعة قماش رطبة. لا تستخدم مطقة مواد تنظيف قوية أو كاشطة، أو اللوف الخشن أو الألياف السلكية الذي قد يتسبب في تلف الجهاز.
- احرص ألا تغمس الجهاز الكهربائي أبداً في الماء أو أي سائل آخر. لا يمكن تنظيف الجهاز في غسالة الأطباق.

### الضمان

- يُعمل هذا المنتج ضمان لمدة 24 شهر. يحد هذا الضمان سارراً؛ طالما تم استخدام المنتج حسب التعليمات وللاغراض التي صنع من أجلها الجهاز. إضافة إلى ذلك، يجب إرسال إثبات الشراء الأصلي (فاتورة أو ورقة بيع أو إيصال) مع تاريخ الشراء واسم بائع التجزئة ورقم المنتج.
- لقراءة شروط الضمان بالتفصيل، يرجى الرجوع إلى الموقع الإلكتروني الخاص بالصيانة: [service.princess.info](http://service.princess.info).

### الضمان

- يتم توفير ضمان لمدة عامين لهذا المنتج، لقراءة شروط الضمان التفصيلية يرجى الرجوع إلى بطاقة الضمان.
- لا يغطي الضمان الأجزاء التالية:
  - القبض
  - أي أجزاء مكشورة.

عمر حياه هذا الجهاز 3 سنوات في ظل ظروف التشغيل العادية.

للصيانة والخدمة يرجى الاتصال بالأرقام التالية:

United Electronics Co

السعودية (رقم مجاني) 800 124 800

### البيئة

- وبسبب العرض الثابت والضيئ، يجب ألا يتم وضع هذا الجهاز في سلة القمامات الدولية في نهاية عمره الافتراضي، ولكن يجب تقديمه إلى نقطة المركزية لإعادة تدوير الأجهزة الكهربائية والإلكترونية إن كان من طراز المرحوم على الجهاز، ودليل التعليمات والتلفظ غامرك من هذه المسألة العامة. يمكن إعادة تدوير المواد المستخدمة في هذا الجهاز. من خلال إعادة تدوير الأجهزة الدولية، فإنك تقدم إسهام هام للحفاظ على البيئة التي نعيش فيها. استفسر من السلطات المحلية عن نقطة التجميع.