



EN Instruction manual

الاستخدام AR



Adapter Input: 100-240V~ / 50/60Hz / 0.8A max
Adapter Output: 35V DC 0.5A
Vacuum Cleaner: 29.6V DC 250W


Cordless Vacuum Cleaner

مكنسة كهربائية لاسلكية

01.339491.09.001

Made in China
صنع في الصين

PARTS DESCRIPTION / وصف الأجزاء

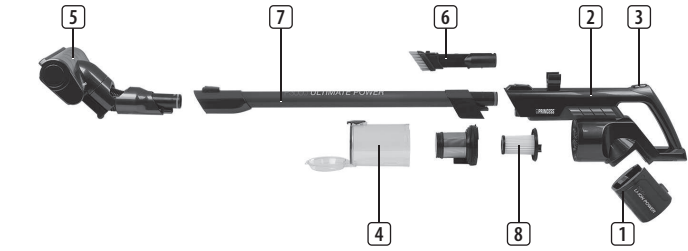

EN Instruction manual

SAFETY DIRECTIONS

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- Children shall not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

SAFETY INSTRUCTIONS

- Risk of suffocation! Keep the packaging material away from children and animals.
- Keep the device, cord and plug away from water or other liquids in order to avoid the risk of an electrical shock. Never touch the mains plug, cord or device with wet or damp hands.
- Keep animals, hair, jewelry, loose clothing, fingers and all other parts of the body away from the moving parts or openings of the appliance when it is in operation. They can be caught in the vacuum cleaner. If something gets stuck in the vacuum cleaner, switch the appliance off immediately.
- Take special care to avoid falling when cleaning stairs.
- Wear firm footwear during use.
- Use and store the device only out of the reach of children. Improper use can result in injury and electric shock. The power cord may also be not be accessible to children.

PROPER USE

- The appliance must only be used domestically, it is not suitable for industrial or commercial use.
- Only use it on normally soiled hard floors, short pile carpets or upholstered furniture, all other use is considered improper use and is prohibited.
- The appliance must not be used to clean:
 - People, animals, plants or items of clothing on the body, always keep the appliance away from body parts and hair.
 - Glowing or burning objects like ash, charcoal, burning cigarettes, matches or highly flammable substances.
 - Water and all other liquids
 - Pointed objects like broken glass or nails.
 - Fine dust, construction dust.

- Only use and store the device in enclosed areas. Do not use the device outdoors, in rooms with high humidity or on hot surfaces.
- Check the devices and accessories for damage before each use. Do not use the appliance if the appliance, the cord, the plug or the filter are visibly damaged, do not attempt to repair the appliance yourself or replace the parts yourself. In case of damage, contact a qualified repair center or the helpdesk of the supplier.
- Do not use the device if it malfunctions, has vacuumed up liquids or objects or has fallen down. Have the device repaired by a qualified repair center.
- Only use the device if it has been completely and correctly assembled.

- Do not expose the device to extreme temperatures, severe changes in temperature, open flames, direct sunlight, moisture or wetness.
- Never place heavy objects on the device.
- Empty the dust bin after every use. The filters must also be cleaned regularly.
- Only use original spare parts provided by the supplier.
- Store the device in a cool, dry area that is not accessible to children and animals when not in use.
- Never fill the dust bin with liquids.



- CAUTION:** This hose contains electrical connections:
 - do not use to suck up water (for vacuum cleaners only);
 - do not immerse in water for cleaning;
 - the hose should be checked regularly and must not be used if damaged.

CLEANING AND MAINTENANCE SAFETY



- WARNING:** The battery must be removed from the vacuum cleaner before any maintenance, cleaning or replacement of parts.
- DO NOT clean the vacuum cleaner, components or accessories using petrol or any other flammable liquid or solvents.
- Clean only the outside of the vacuum cleaner.
- NOTE: Never use the vacuum cleaner with a wet or damp filter or without the filter fitted.
- DO NOT use a hair drier to dry.
- DO NOT place accessories / components in a dishwasher.
- If the filter is broken or worn, replace it before continuing to use the vacuum.
- NOTE: The filters must be cleaned regularly for the best suction performance and to prevent over-heating and damage to your vacuum cleaner.

BATTERY WARNING

- Rechargeable battery is only to be charged under adult supervision.
- Do not attempt to open the rechargeable battery or battery pack as there are no serviceable parts inside.
- Do not disassemble, incinerate or short-circuit the battery or the battery pack. Only replace the battery with an original battery, the use of another battery can cause a fire or explosion.
- The battery is a sealed unit and under normal circumstances it does not constitute a safety hazard. If in any case liquid does leak out of the battery don't touch it and consult a doctor immediately in case of inhalation, skin or eye contact.
- Should a battery leak, the device may become damaged. Clean the battery compartment immediately, avoiding touching your skin.
- Avoid storing the battery in extremely hot or cold environment. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- Do not dispose battery in a fire as it may explode. Battery may also explode if damaged. Please dispose it according to local regulation. Do not dispose it as household waste.

PARTS DESCRIPTION

- Battery
- Base
- On/Off switch
- Dirt container
- Floor head (electric brush)
- Crevice tool
- Tube
- HEPA filter (inside dust filter)

BEFORE THE FIRST USE


Assembly

Please Note: Always remove the Battery Charger from the power socket before assembly.


Charging / Storage Stand

The vacuum cleaner is supplied with a Charging / Storage stand and will need to be assembled before use.

- Place the base on a flat surface and take the stand post and insert one end into the hole in the base as shown.
- NOTE: The end of the tube has a slot cut-out in it which needs to align with the tab inside the base hole.

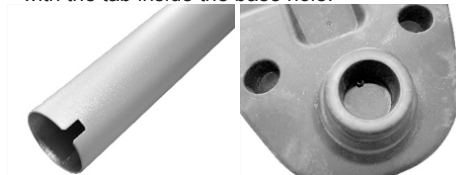

- Once the slot is aligned, firmly push the tube inside the base hole until it is fully inserted.

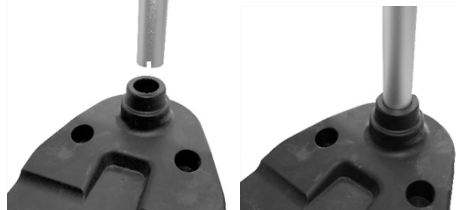

- Next, take the stand head unit (with the battery charger attached) and place it over the top of the tube.
- NOTE: The end of the tube has a slot cut-out in it which needs to align with the tab inside the head unit hole. (with the charger cable towards the front as shown below)



- Once the slot is aligned, firmly push the head unit down onto the tube until it is fully inserted.
- The Charging / Storage Stand is now ready.

Charge

- Plug the charge adapter in the vacuum cleaner battery and the power outlet.
- Fully charge the battery of the vacuum cleaner before first use.
- It will take about 5 hours to fully charge the battery.
- During charging, the indicator lights on the back of the battery will light up in a rolling way to indicate that the battery is being charged.
- All bars are illuminated when the battery is fully charged.
- When the battery is fully charged, switch off and unplug the battery charger from the power supply.
- The adapter may become warm during charging, this is normal.

USE

- You should regularly check that the nozzle cushions and the brush roller are clean in order to avoid scratching sensitive floors.
- The device cannot be started when on charging stand.
- To switch on, press the top button on the handle once. The vacuum cleaner will start in low power mode.
- While the vacuum cleaner is running, press the lower button on the handle once. The vacuum cleaner will change to high power mode.
- Press the same button again and it will change back to low power mode. Press the On/Off button to turn the device off.
- The crevice nozzle can be fitted in order to reach awkward places.

CLEANING AND MAINTENANCE

- Make sure you regularly empty the dust container and clean the filter
- To empty the dust container, first remove the dust container from the vacuum cleaner.



- Grasp the dust container, and while holding the vacuum cleaner housing, turn the dust container clockwise and pull it down to remove it.
- Keep the dust container over a bin and press the release button to open the lid of the dust container.
- Throw the waste from the dust container into a dustbin.
- Empty the dust container every time after use for optimum performance.
- To refill the dust Container into the vacuum cleaner, close the lid, ensure that the release button is facing to the outside.
- Align the open icon arrow on the side of the dust container with the arrow on the vacuum cleaner body and then rotate the dust container anticlockwise until it locks into place.

How to maintain the filter

- The Filters must be cleaned regularly for the best suction performance and to prevent over-heating and damage to your vacuum cleaner.
- Never use the vacuum cleaner with a wet or damp filter or without the filter fitted.
- Only wash the white filter if it is very dirty, otherwise just tap the edge of the filter on a hard surface to dislodge any dust and debris.
- To access the filters, first remove the dust container from the vacuum cleaner body.
- Grasp the handles of the filter and pull up and out to remove.
- Next, disassemble the filters into their separate components for cleaning. Grasp the two handles of the filter and rotate anticlockwise to unlock. Pull up and out to separate.



- Wash the filters in warm mild soapy water, rinse in clean fresh cold water and let completely dry.
- DO NOT scrub the filters or place in a dishwasher.
- DO NOT use a hair drier to dry the filters.

- Refit the Filters (or replace the white one with a new one).
- There are three tabs on the edge of the filter which align with three slots in the dust container.

- Rotate the filter assembly until the tabs align with the correct slots and then drop in.
- Put the dust container back it the vacuum cleaner body.

Cleaning dust container

- Remove the dust container as described previously and remove the filter assembly as described previously.
- Wash the dust container in warm mild soapy water, rinse in clean fresh cold water and let completely dry.
- DO NOT scrub the dust container or place it in a dishwasher.
- DO NOT use a hair drier to dry the dust container.
- Reassemble and refit the filters and dust container back to the vacuum cleaner body.

Cleaning motorized floor head

- The rotary brush in the floor head can be removed for easy cleaning.
- Ensure the Floor Head is removed from the extension tube or vacuum cleaner.

- Turn over so that the bottom is facing up.
- Open the lock and slide the rotating brush out to the side.
- Clean the brush, put it back into the floor head and secure the lock.

WARRANTY

- This product is warranted for 2 Years, for detailed terms, please refer to the Warranty Card.

- Following parts are not covered by warranty:

- Knobs.

- Any broken body parts.

Approximate life of this appliance under normal conditions is 3 Years.

For service and repairs, please call the following numbers:
United Electronics Co.
Saudi Arabia (Toll-free) 800 124 0900

ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

AR دليل الإرشادات

توجيهات السلامة

- عند إهمال تعليمات السلامة لا تتحمل الشركة المصنعة أية مسؤولية عن وقوع تلفات.

- في حالة تلف سلك الإمداد بالطاقة، يجب استبداله بواسطة الشركة المصنعة أو وكيل الصيانة أو أي فني مؤهل لتجنب التعرض إلى المخاطر.

- لا تحرك الجهاز مطلقًا عن طريق سحب السلك، وتأكد من أن السلك لن يصبح متشابكًا.
- يجب وضع الجهاز على سطح ثابت ومستو.
- يجب ألا يغفل المستخدم عن الجهاز أثناء توصيله بالكهرباء
- تم تصميم هذا الجهاز للاستخدام المنزلي فقط وللأغراض التي صنع من أجلها. لحماية نفسك من التعرض إلى صدمة كهربائية، لا تغمس السلك أو القابس أو الجهاز في الماء أو في أية سوائل أخرى.
- يجب فصل القابس عن مقبس خرج الطاقة قبل تنظيف الجهاز أو صيانته.
- يجب على الأطفال عدم اللعب بهذا الجهاز.

يمكن استخدام هذا الجهاز بواسطة الأطفال من سن 8 سنوات وما فوق والأشخاص ذوي القدرات الجسدية أو الحسية أو العقلية المحدودة أو الذين يفتقرون إلى الخبرة والمعرفة إذا تم الإشراف عليهم أو إرشادهم بشأن كيفية استخدام الجهاز بطريقة آمنة وفهمهم للمخاطر المحتملة. يجب على الأطفال عدم اللعب بهذا الجهاز. يجب على الأطفال عدم القيام بعملية التنظيف وصيانة المستخدم بدون الإشراف عليهم.

- تحذير احتياقي: حافظ على مواد التعتبة بعيدًا عن متناول الأطفال والحيوانات.
- حافظ على الجهاز والسلك والقابس بعيدًا عن الماء أو السوائل الأخرى لتجنب خطر التعرض لصدمة كهربائية. لا تلمس أبدًا القابس أو السلك أو الجهاز بيديك.

- مبيلتين أو رطبتين.
- حافظ على بقاء الحيوانات والشعر والمواد اللصقة والفضفاضة والأصابع وجميع أجزاء الجسم الأخرى بعيدة عن أجزاء الجهاز المتحركة أو الفتحات عندما يكون الجهاز قيد التشغيل. حيث يمكن أن يتم سحبها داخل المكنسة الكهربائية. إذا علق شيء في المكنسة الكهربائية، فأوقف تشغيل الجهاز على الفور.
- احرص على تجنب السقوط أثناء تنظيف السلاام.
- ارتد حذاءً ثابتًا أثناء الاستخدام.

استخدم الجهاز واحتفظ به بعيدًا عن متناول الأطفال. يمكن أن يؤدي الاستخدام غير السليم إلى حدوث إصابة وصدمة كهربائية. يجب ألا يكون من السهل أيضًا الوصول إلى سلك الطاقة من قبل الأطفال.

الاستخدام السليم

- يجب استخدام الجهاز داخل المنزل فقط، فهو غير مناسب للاستخدام الصناعي أو التجاري.

استخدمه فقط على الأرضيات الصلبة المسطحة أو السجاد قصير الكتلة أو الأثاث المنجد، وتعتبر جميع الاستخدامات الأخرى غير سليمة ومخطورة.

- يجب عدم استخدام الجهاز لتنظيف:

- الأشخاص والحيوانات أو النباتات أو بعض أجزاء الملابس الموجودة على الجسم، وأبداً دالتا على الجهاز بعيدًا عن أجزاء الجسم والشعر.

- الأثاث المصنوع أو المخرقة مثل الرماد أو الفحم أو السجائر المحترقة أو الكبريت أو المواد شديدة الاشتعال.

- الماء وجميع السوائل الأخرى

- الغبار الدقيق مثل الزجاج المكسور أو المسامير.

- الغبار الناعم وغبار البناء.

لا تستخدم الجهاز واحتفظ به داخل الأماكن المغلقة فقط. لا تستخدم الجهاز في الأماكن المتوتحة أو الغرف ذات الرطوبة العالية أو على الأسطح الساخنة.

تحقق من الأجهزة الملحقات بحثًا عن أي تلف قبل كل استخدام. لا تستخدم الجهاز إذا كان الجهاز أو السلك أو المرشح تالفاً بشكل واضح، ولا تحاول إصلاح الجهاز أو استبدال الأجزاء بنفسك. في حالة وجود أي تلف، اتصل بمركز إصلاح معتمد أو مكتب المساعدة التابع للمورد.

- لا تستخدم الجهاز في حالة تغطله أو شطفه للسوائل أو الأشياء أو في حالة سقوطه. قم بإصلاح الجهاز لدى مركز إصلاح معتمد.

- لا تستخدم الجهاز إلا إذا تم تجميمه بشكل كامل وصحيح.
- لتفحص من الجهاز لدرجات الحرارة الشديدة أو التغيرات الحادة في درجة الحرارة أو الهلب المكشوف أو أشعة الشمس المباشرة أو الرطوبة أو البلل.

لا تضع أبدًا الأشياء الثقيلة على الجهاز.

- أفرغ صندوق الغبار بعد كل استخدام. يجب أيضًا تنظيف المرشحات بانتظام.

- لا تستخدم سوى قطع الغيار الأصلية التي يوفرها المورد.
- احتفظ بالجهاز في مكان بارد وحاف لا يمكن للأطفال والحيوانات الوصول إليه في حالة عدم الاستخدام.

لا تملأ صندوق الغبار بالسوائل مطلقًا.



- تنبيه:** يحتوي هذا الخرطوم على توصيلات كهربائية:
- أ. لا تستخدمه لشطف الماء (للمكنسات الكهربائية فقط)؛

- ب. لا تعمره في الماء لتنظيفه؛

- ج. يجب فحص الخرطوم بانتظام وعدم استخدامه في حالة تعرضه للتلف.

سلطة التنظيف والصيانة



- تحذير:** يجب إزالة البطارية من المكنسة الكهربائية قبل إجراء أي أعمال صيانة أو تنظيف أو استبدال للأجزاء.

- لا تقم بتنظيف المرشحات أو المكونات أو الملحقات باستخدام البنزين أو أي سوائل أخرى أو مذيبات قابلة للاشتعال.

نظف الجسم الخارجي للمكنسة الكهربائية فقط.

- ملاحظة: لا تقم أبدًا بتنظيف المكنسة الكهربائية في وجود مرشح مبتل أو رطب أو دون تركيب المرشح.

- لا تستخدم مجفف شعر لتجفيف المرشح.
- لا تضع الملحقات / المكونات في غسالة الأطباق.

لا تعرض المرشح للتلف أو التآكل، فاستبدله قبل متابعته استخدام المكنسة. ملاحظة: يجب تنظيف المرشحات بانتظام للحصول على أفضل أداء شطف ومنع الارتفاع الزائد في الحرارة وتلف المكنسة الكهربائية.

تحذير خاص بالبطارية

- يجب شحن البطارية القابلة للشحن فقط تحت إشراف الأشخاص البالغين.
- لا تقم بفتح البطارية القابلة للشحن أو هدمها بالطائرات أو محاولة تحريكها أو إحداث دائرة قصر بها. استبدل البطارية بتقليها الأصلية فقط، فقد يؤدي استخدامها بطريقة أخرى إلى حدوث حريق أو انفجار.

تحذير: البطارية وحيدة تصميمًا للإغلاق ولا تشكل أي خطر على السلامة في ظل ظروف الاستخدام العادية. إن تسرب أي سائل من البطارية، فلا تلمسه واستشر الطبيب على الفور في حالة اشتعاله أو ملامسته للجلد أو العين.

في حالة حدوث تسرب للبطارية، قد يتلف الجهاز. نظف حجرة البطارية على الفور وغبب ملامسة السائل للجلد.

تحذير: تجنب البطارية في بيئة شديدة الحرارة أو البرودة. قد لا يعمل الجهاز المزدود ببطارية ذات درجة حرارة مرتفعة أو باردة لفترة مؤقتة، حتى عندما تكون البطارية مشحونة بالكامل.

لا تتخلص من البطارية في النار لأنها قد تنفجر. قد تنفجر البطارية أيضًا إذا تعرضت للتلف. يرجى التخلص منها وفقًا للوائح المحلية. لا تتخلص منها على أيًا نقابات منزلية.

وصف الأجزاء

- البطارية
- القاعدة
- مفتاح On/Off (التشغيل/إيقاف التشغيل)
- جهدية الأرضية
- رأس تنظيف الأرضية وفرشة كهربائية
- أداة الوصول للأماكن الضيقة
- أنبوب
- مرشح الأجسام متناهية الصغر (داخل مرشح الغبار)

قبل الاستخدام الأول

التجميع

يرجى ملاحظة: قم دائمًا بإزالة شاحن البطارية من مأخذ توصيل الطاقة قبل التجميع.

حامل الشحن / الشحن

يتم تزويد المكنسة الكهربائية بحامل شحن / تخزين ويلزم تركيبه قبل الاستخدام.

- ضع القاعدة على سطح مستو وحذّ عبود الحمل وأدخل إحدى النهايات في الفتحة الموجودة بالقاعدة كما هو موضح.
- ملاحظة: تحتوي غطاء الأنبوب على فتحة قطعية يلزم محاذاها مع العروة الموجودة داخل فتحة القاعدة.



- يجرد الانتهاء من محاذاة الفتحة، ادفع الأنبوب بقوة باتجاه القاعدة حتى يتم تثبيتته بالكامل.



- بعد ذلك، حذّ وحدة رأس الشحن بإمخبل (مع توصيل شاحن البطارية) وضعها في أعلى الأنبوب.
- ملاحظة: تحتوي غطاء الأنبوب على فتحة قطعية يلزم محاذاها مع العروة الموجودة داخل فتحة وحدة رأس الشحن. (مع توجيه كابل الشحن نحو الأمام كما هو موضح)



- يجرد محاذاة الفتحة، ادفع وحدة رأس الشحن بقوة داخل الأنبوب حتى تدخل بالكامل.
- حامل الشحن / الشحن جاهز للاستخدام الآن.

الشحن

- قم بتوصيل هول الشحن ببطارية المكنسة الكهربائية ومأخذ الطاقة.
- لتشغيل الجهاز، اضغط على الزر العلوي في القابس أثناء استخدامه لأول مرة.
- يستغرق العملية حوالي 5 ساعات للشحن البطارية بالكامل.
- أثناء الشحن، ستضيء مصابيح مؤشر الموجودة في الجزء الخلفي من البطارية بطريقة دائرية للإشارة إلى وجود البطارية قيد الشحن.
- تضيء جميع المصابيح عندما يتم شحن البطارية بالكامل.
- عندما يتكامل شحن البطارية، تظهر شاحن البطارية واصفد، من مصدر الطاقة.
- قد يصبح هول فقط أثناء الشحن، وهذا أمر طبيعي.

الاستخدام

- يجب التحقق بانتظام من نظافة وسائل الفتحة وأسطوانة الفرشاة لتجنب حدوث الأرضيات المسحاة.
- لا يمكن بدء تشغيل الجهاز أثناء تواجده على حامل الشحن.
- لتشغيل الجهاز، اضغط على الزر العلوي في القابس أثناء استخدامه لأول مرة.
- استغرق العملية حوالي 5 ساعات للشحن البطارية بالكامل.
- وضع القاعدة العادية.
- اضغط على الزر الدّارة مرة أخرى وسوف تنقل إلى وضع الطاقة المنخفضة مجددًا.
- اضغط على الزر On/Off (التشغيل/إيقاف التشغيل) لإيقاف تشغيل الجهاز.
- يمكن تركيب الفتوة الطويلة للوصول إلى الأماكن الضيقة.

التنظيف والصيانة

تأكد من تبريع المكان المجفف للغبار وتنظيف الفلتر بانتظام.

لتفريغ صندوق الغبار، قم أولاً بإزالة حاوية الغبار من المكنسة الكهربائية.



- أسفل حاوية الغبار، وأثناء تثبيت مبيت المكنسة الكهربائية، أدر حاوية الغبار في اتجاه عقارب الساعة واسحبها إلى أسفل لإزالتها.
- تثبيت حاوية الغبار على فوهة القمامة واضغط على زر التحرير لتفريغ فتحة حاوية الغبار.
- لتفريغ من فتحات حاوية الغبار، اضغط على زر التحرير.
- أفرغ صندوق الغبار في مكان آمن بعيدًا عن الأطفال والحيوانات.
- لإعادة تركيب حاوية الغبار في مكانها، اضغط على الفتحة الخاصة بها وتأكد من أن زر التحرير موجه للخارج.
- قم بمحاذاة سهم رمز وضع الفتحة الموجود على جانب حاوية الغبار مع السهم الموجود على هيكل المكنسة الكهربائية ثم أدر حاوية الغبار بحيث يمكن دوران عقارب الساعة حتى يتم تثبيتها في وضعها.

كيفية الحفاظ على المرشح

- يجب تنظيف المرشحات بانتظام للحصول على أفضل أداء شطف ومنع الارتفاع الزائد في الحرارة وتلف المكنسة الكهربائية.
- لا تقم أبدًا بتنظيف المكنسة الكهربائية في وجود مرشح مبتل أو رطب أو دون تركيب المرشح.
- لا تسيل المرشح الأبيض إلا إذا كان متسخًا للغاية، وجافًا مثل ذلك، ما عليك سوى طرق حافة المرشح بسطح صلب لإزالة أي غبار أو بقايا.
- للتوصل إلى المرشحات، قم أولاً بإزالة حاوية الغبار من هيكل المكنسة الكهربائية.
- استأط مقابض المرشح واسحب لأعلى وإلى الخارج لإزالته.
- بعد ذلك، قم بفتح الأجزاء التي يمكن إزالتها لتنظيفها. استأط مقابض المرشح وقم بإدراكه عن عقارب الساعة لتفريغ الفتحة.
- الفتل. اسحب لأعلى وإلى الخارج لفصل المرشح.



- اغسل المرشحات ماء دافئ وصابون معتدل، واشطفها ماء بارد نظيف وارتكها لتجف تمامًا.
- لا تقم بترك المرشحات أو وضعها في غسالة الأطباق.
- لا تستخدم هفف الشعر لتجفيف المرشحات.
- أعد تركيب المرشحات (أو استبدال المرشح الأبيض بآخر جديد).
- تأكد ثلاث عروات تثبيت على حافة المرشح والتي يتم محاذاها مع ثلاث فتحات في حاوية الغبار.
- أدر مجموعة المرشح حتى يتم محاذاة عروات التثبيت مع الفتحات الصحيحة ومن ثم تثبيتها.
- أعد تركيب حاوية الغبار في هيكل المكنسة الكهربائية.

- قم بإزالة حاوية الغبار وإزالة مجموعة المرشحات كما تم توجيهه مسبقًا.
- اغسل حاوية الغبار ماء دافئ وصابون معتدل، واشطفها ماء بارد نظيف وارتكها لتجف تمامًا.
- لا تقم بترك حاوية الغبار أو وضعها في غسالة الأطباق.

- لا تستخدم هفف الشعر لتجفيف المرشحات.
- أعد تركيب حاوية الغبار والمرشحات ومن ثم تركيبها في هيكل المكنسة الكهربائية.

تنظيف رأس شطف الأرضية الأمامية

- يمكن إزالة الفرشاة الدوارة الموجودة في رأس تنظيف الأرضية لتنظيفها بسهولة.
- تأكد من إزالة رأس تنظيف الأرضية من أيوب لإزالة أو الكسرة الكهربائية.
- ألقه بحيث يكون الجزء السفلي متجهًا إلى الأعلى.

افتح الحقل وحرك الفرشاة الدوارة إلى الخارج على الجانب.

قم بتنظيف الفرشاة ووضعها مجددًا في رأس تنظيف الأرضية وأمسك غفل الحقل.

ضمان

- الحا جهاز مضمون لمدة عامين، لمعرفة أحكام الضمان يرجى قراءة كرت ضمان المنتج.
- المكونات أدناه غير مشمولة بالضمان:

- المقابض.

— أجزاء البدن القابلة للكسر.

التعبير الإفريقي الجاهز يعيد على طرف التشغيل العادية. العمر الإفريقي 3 سنوات تقريبًا.

يرجى الإصان على أقسام خدمة العملاء والتسليم الإلكتروني.

الشركة المصنعة للإلكترونيات

المملكة العربية السعودية (الهاتف المجاني) 800 124 0900



Made in China
صنع في الصين

© Princess 2020