




PARTS DESCRIPTION / وصف الأجزاء

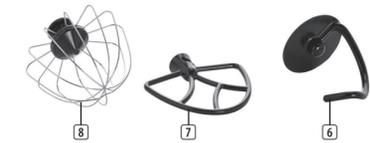

[WEEE Logo]



EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.

- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Do not allow children to use the device without supervision.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Always disconnect the device from the supply if it is left unattended and before assembling, disassembling or cleaning.
- It is absolutely necessary to keep this appliance clean at all times, because it comes into direct contact with food.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - By clients in hotels, motels and other residential type environments.
 - Bed and breakfast type environments.
 - Farm houses.
- Accessories, other than those supplied with the appliance cannot be used.

PARTS DESCRIPTION

- Release lever
- Speed controller
- Output shaft
- Mixing bowl cover
- Mixing bowl
- Dough hook
- Beater
- Whisk

BEFORE THE FIRST USE

- Take the appliance and accessories out of the box. Remove the stickers, protective foil or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- Never use the mixer for longer than 10 minutes continuously, after this allow the mixer to cool down for 30 minutes.

USE

- Revolve the release lever, then lift the machine arm.
- Place the mixing bowl on the device and turn the bowl clockwise until it locks into place.
- Fit the desired accessory in the shaft, and lock it by turning the accessory anticlockwise.
- Now fill the mixing bowl with your ingredients.
- Push the arm halfway down (not until the release lever will click back into place) so you can easily fix the mixing bowl cover and the removable feeding shaft.
- Push the arm down until the release lever will click back into place.
- Insert the mains plug into a properly installed safety power socket.
- Switch on the machine using the speed controller to the desired speed level.

CLEANING AND MAINTENANCE

- Make sure the appliance is unplugged before cleaning.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.
- The components are not suitable for cleaning in a dishwasher. If exposed to heat or caustic cleaners they might become misshapen or discoloured.
- We advise to clean components that have come into contact with food in soapy water.
- Allow the parts to dry thoroughly before reassembling the device.

WARRANTY

- This product is warranted for 2 Years, for detailed terms, please refer to the Warranty Card.
- Following parts are not covered by warranty:

- Knobs.
- Any broken body parts.

Approximate life of this appliance under normal conditions is 3 Years.
For service and repairs, please call the following numbers:
United Electronics Co.
Saudi Arabia (Toll-free) 800 124 0900

ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

AR دليل الإرشادات

- السلاطة
- عند إهمال تعليمات السلامة لا تتحمل الشركة المصنعة أية مسؤولية عن وقوع تلفيات.
- في حالة تلف سلك الإمداد بالطاقة، يجب استبداله بواسطة الشركة المصنعة أو وكيل الصيانة أو أي في موهل لتجنب التعرض إلى المخاطر.
- لا تحرك الجهاز مطلقاً عن طريق سحب السلك، وتأكد من أن السلك لن يصبح متشابكاً.
- يجب وضع الجهاز على سطح ثابت ومستو.
- يجب ألا يغفل المستخدم عن الجهاز أثناء توصيله بالكهرباء
- تم تصميم هذا الجهاز للاستخدام المنزلي فقط وللأغراض التي صنع من أجلها.
- ينبغي عدم استخدام هذا الجهاز بواسطة أطفال أصغر من 8 سنوات. يمكن استخدام هذا الجهاز بواسطة الأطفال من سن 8 سنوات وما فوق والأشخاص ذوي القدرات الجسدية أو الحسية أو العقلية المحدودة أو الذين يفتقرون إلى الخبرة والمعرفة إذا تم الإشراف عليهم أو إرشادهم بشأن كيفية استخدام الجهاز بطريقة آمنة وفهمهم للمخاطر المحتملة. يجب على الأطفال عدم اللعب بهذا الجهاز. احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 8 سنوات. يجب على الأطفال عدم القيام بعملية التنظيف وصيانة المستخدم إلا إذا كانوا أكبر من 8 سنوات وفي وجود من يشرف عليهم.
- لحماية نفسك من التعرض إلى صدمة كهربائية، لا تعمس السلك أو القابس أو الجهاز في الماء أو في أية سوائل أخرى.
- لا تسمح للأطفال باستخدام الجهاز بدون الإشراف عليهم.
- قم بإيقاف الجهاز وفضله عن مصدر الطاقة قبل تغيير الملحقات أو الاقتراب من الأجزاء المتحركة المستخدمة.
- قم دائماً بفصل الجهاز عن مصدر الطاقة في حالة تركه بدون مراقبة أو قبل التركيب أو الفك أو التنظيف.
- من الضروري للغاية للحفاظ على هذا الجهاز نظيف طوال الوقت، لأنه يلامس الطعام بشكل مباشر
- هذا الجهاز مخصص للاستخدام المنزلي وللإستخدام في الأماكن المشابهة مثل:
 - أماكن مطابخ الموظفين في الفنادق والمكاتب وأماكن العمل الأخرى.
 - أو من قبل نزلاء الفنادق والاسواق والأماكن السكنية الأخرى.
 - والأماكن التي تقدم مبيتاً ووجبة إفطار.
 - والشارع الريفيه.
- يجب عدم استخدام أي ملحقات أخرى غير المرفقة مع الجهاز.

وصف الأجزاء

- ذراع التحرير
- أداة التحكم في السرعة
- عمود الدوران النهائي
- غطاء وعاء الخلط
- وعاء الخلط
- مخالف العجين
- خافق
- المضرب

قبل الاستخدام الأول

- قم بإخراج الجهاز والملحقات خارج العلبة. قم بإزالة للستيكرات أو البلاستيك أو ورق الأومبيوم الواقى عن الجهاز.
- ضع الجهاز على سطح ثابت ومستو وتأكد من وجود حد أدنى من لتساحة الخالية حول الجهاز. فترصفاً 10 سم. هذا الجهاز غير مناسب للتركيب في خزانة أو للإستخدام الخارجي.
- قبل الإستخدام الأول، قم بتسح جميع الأجزاء القابلة للإزالة بقطعة قماش رطبة. لا تستخدم مطلقاً أية منتجات كاشطة.
- ضع كابل الطاقة في المقبس. (ملاحظة: تأكد أن الجهد الكهربى المشار إليه على الجهاز مطابق للجهد االمحلى قبل توصيل الجهاز. الجهد الكهربى 220-240 فولت. 50/60 هرتز)
- تجنب مطلقاً استخدام الخلاط لأكثر من 10 دقائق متواصلة، بعد ذلك اترك الخلاط ليهدأ لمدة 30 دقيقة.

الاستخدام

- لف ذراع التحرير ان ارفع ذراع الماكينة.
- ضع وعاء الخلط على الجهاز ثم ادر الوعاء في اتجاه عقارب الساعة حتى يستقر في مكانه.
- ثبت الملحقات في عمود الإدراج ثم أغلقها من خلال لف اللنجج على اتجاه عكس عقارب الساعة.
- قم بلاء وعاء الخلط بملحقات الخافقة مثلاً.
- ادفع الذراع جزئياً لأعلى (وليس حتى مصدر ذراع الرفع صوت مطلقاً لرجوعها في المكان) حتى يتسنى لك بسهولة تثبيت غطاء وعاء الخلط وغطاء العلبة التي يمكن إزالتها.
- ادفع الذراع إلى أسفل حتى يصدر ذراع التحرير صوت مطلقاً كتدليل على استقراره في المكان.
- أدخل قابس التيار الكهربائي في مقبس الطاقة آمن ثم تركيبه بشكل صحيح.
- قم بتشغيل الماكينة باستخدام أداة التحكم في السرعة لضبطها على مستوى السرعة المرغوب فيه.

التنظيف والصيانة

- تأكد فصل قابس الجهاز قبل التنظيف.
- نظف الجهاز بقطعة قماش رطبة. لا تستخدم مطلقاً مواد تنظيف قوية أو كاشطة، أو الوبف الخشن أو الألياف السلكية الذي قد يتسبب في تلف الجهاز.
- احرص ألا تعمس الجهاز الكهربائي أبداً في الماء أو أي سائل آخر. لا يمكن تنظيف الجهاز في غسالة الأطباق.
- إن الملحقات غير صالحة للتنظيف في غسالة الأطباق. إذا تعرض الجهاز لسخونة أو منقذات كوية، فقد يغير شكله أو لونه.
- نصح بتنظيف الملحقات التي لم يمسها الماء باماء وصابون.
- ارك جميع الأجزاء نجف تماماً قبل إعادة تجميع الجهاز.

ضمان

- هذا الجهاز مضمون لمدة عامين ، لغرفة أحكام الضمان يرجى قراءة كرت ضمان المنتج.
- الملحقات أداة غير مشمولة بالضمان:

أجزاء البدن القابلة للتكرس.

- العمر الافتراضي للجهاز يعتمد على ظروف التشغيل العادية . العمر الافتراضي 3 سنوات تقريبا.
- يرجى الإتصال على أرقام خدمة الصيانة والتصلح الآتية:

الشركة المتحدة للإلكترونيات
المملوكة العربية السعودية (اتفق الجاني) 800 124 0900

البيئة



وسبب العرض الثابت والجميل، يجب ألا يتم وضع هذا الجهاز في سلة النفايات المنزلية في غاية عمره الإفراسي، ولكن يجب تقعيه إلى النقطة المركزية لإعادة تدوير الأجهزة المنزلية الكهربائية والإلكترونية. إن كمالاً من الرمز الموجود على الجهاز، ودليل التعليمات والتعليق بمنرك من هذه السلسلة الهامة. يمكن إعادة تدوير المواد المستخدمة في هذا الجهاز. من خلال إعادة تدوير الأجهزة المنزلية، فإنك تقدم إسهام هام للحفاظ على البيئة التي نعيش فيها. استفسر من السلطات المحلية عن نقطة التجميع.