



EN Instruction manual

الاستخدام




220-240V / 50/60Hz / 120W

Made in China
صنع في الصين

Veggie Spiral Slicer
قطاعة خضار لولبية
01.221070.09.001

PARTS DESCRIPTION / وصف الأجزاء

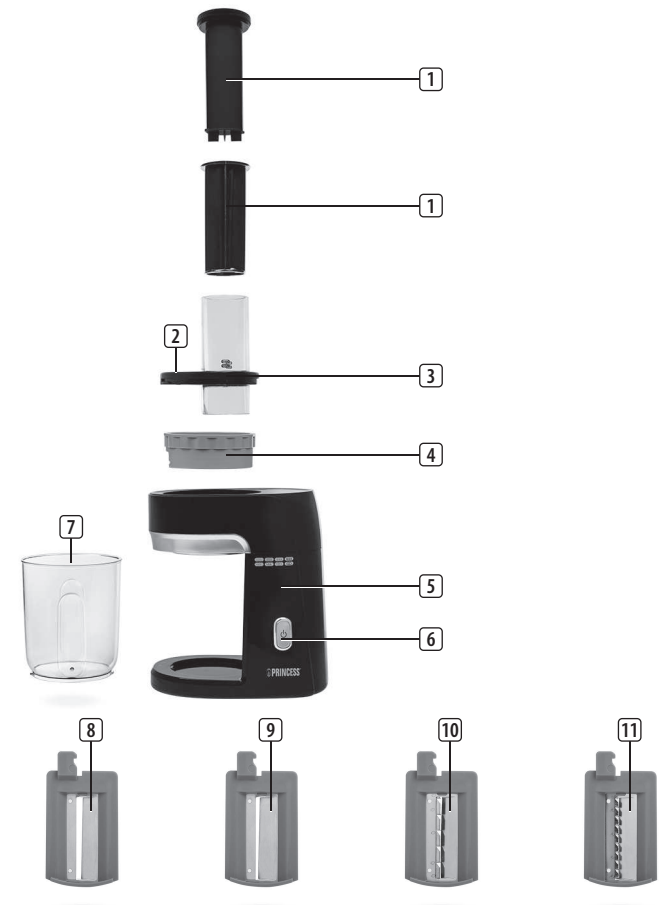

[WEEE Logo]



EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Do not allow children to use the device without supervision.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Always disconnect the device from the supply if it is left unattended and before assembling, disassembling or cleaning.
- It is absolutely necessary to keep this appliance clean at all times, because it comes into direct contact with food.
- NOTE: The chopping blades are very sharp, avoid physical contact during emptying and cleaning the device, you can seriously injure.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - By clients in hotels, motels and other residential type environments.
 - Bed and breakfast type environments.
 - Farm houses.
- Accessories, other than those supplied with the appliance cannot be used.

PARTS DESCRIPTION

- Feeder pusher
- Mode shift button
- Lid
- Blade disc
- Machine unit
- On/Off switch button
- Container
- Think slicing / Pappardelle spiral blade
- Thin slicing / Tagliatelle spiral blade
- Rough julienne / Linguini spiral blade
- Fine julienne / Spaghetti spiral blade

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- The blades are very sharp, beware of cleaning. Avoid any physical contact with the blades, which can seriously injure you.

USE

- There are 4 blades available for both spiraling and slicing function.
- For processing, especially sturdy vegetables in elongated form such as radish, carrot, cucumber and zucchini are suitable. Also suitable are onions, potatoes and apples and pears without a core. Soft fruit and vegetables such as asubergines, tomatoes, boiled beets or bananas are not or less suitable.
- Change the blade type into the blade disc**
- The blades of the cutting inserts are very sharp. Be careful when handling a cutting insert.
- Remove the blade disc from the device
- Push the lock button to the left side.
- At the same time pull the blade out of the disc.
- Insert one of the other blades that you need.
- Press it in until it make a click noise.

Spiraling or slicing function

- Press and hold the shift mode button, when turning te lid it can be released.
- Turn the lid clockwise to the desired position, choose between spiraling mode or slicing mode.

Operation

- The lid has to be locked well, else the machine will not work.
- Press the On/Off button to turn on the device.
- Do not use the device continuously for more than 1 minutes. Allow the motor to cool down before the next operation.

CLEANING AND MAINTENANCE

- Make sure the appliance is unplugged before cleaning.

- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.
- Clean the accessories with warm soapy water to avoid bacterial growth. The accessories are also dishwasher proof.
- Allow the parts to dry thoroughly before reassembling the device.

WARRANTY

- This product is warrantied for 2 Years, for detailed terms, please refer to the Warranty Card.
- Following parts are not covered by warranty:
 - Knobs.
 - Any broken body parts.

Approximate life of this appliance under normal conditions is 3 Years.

For service and repairs, please call the following numbers:

United Electronics Co.
Saudi Arabia (Toll-free) 800 124 0900

ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Support

You can find all available information and spare parts at www.princesshome.eu!

AR دليل الإرشادات

السلامة

- عند إهمال تعليمات السلامة لا تتحمل الشركة المصنّعة أية مسئولية عن وقوع تلفيات.
- في حالة تلف سلك الإمداد بالطاقة، يجب استبداله بواسطة الشركة المصنعة أو وكيل الصيانة أو أي فني مؤهل لتجنب التعرض إلى المخاطر.
- لا تحرك الجهاز مطلقاً عن طريق سحب السلك، وتأكد من أن السلك لن يصبح متشابكاً.
- يجب وضع الجهاز على سطح ثابت ومستو.
- يجب ألا يغفل المستخدم عن الجهاز أثناء توصيله بالكهرباء
- تم تصميم هذا الجهاز للاستخدام المنزلي فقط وللأغراض التي صُنع من أجلها.
- ينبغي عدم استخدام هذا الجهاز بواسطة أطفال أصغر من 8 سنوات. يمكن استخدام هذا الجهاز بواسطة الأطفال من سن 8 سنوات وما فوق والأشخاص ذوي القدرات الجسدية أو الحسية أو العقلية المحدودة أو الذين يفتقرون إلى الخبرة والمعرفة إذا تم الإشراف عليهم أو إرشادهم بشأن كيفية استخدام الجهاز بطريقة آمنة وفهمهم للمخاطر المحتملة. يجب على الأطفال عدم اللعب بهذا الجهاز. احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 8 سنوات. يجب على الأطفال عدم القيام بعملية التنظيف وصيانة المستخدم إلا إذا كانوا أكبر من 8 سنوات وفي وجود من يشرف عليهم.
- لحماية نفسك من التعرض إلى صدمة كهربائية، لا تغمس السلك أو القابس أو الجهاز في الماء أو في أية سوائل أخرى.
- لا تسمح للأطفال باستخدام الجهاز بدون الإشراف عليهم.
- قم بإيقاف الجهاز وفصله عن مصدر الطاقة قبل تغيير الملحقات أو الاقتراب من الأجزاء المتحركة المستخدمة.
- قم دائماً بفصل الجهاز عن مصدر الطاقة في حالة تركه بدون مراقبة أو قبل التركيب أو الفك أو التنظيف.
- من الضروري للغاية الحفاظ على هذا الجهاز نظيف طوال الوقت، لأنه يلامس الطعام بشكل مباشر
- ملاحظة: إن شفرات الفرم حادة للغاية، لذلك تجنب ملامستها للجسم أثناء تفريغ الجهاز أو تنظيفه، لأن ذلك قد يصيبك بجرح بالغ.
- هذا الجهاز مخصص للاستخدام المنزلي وللاستخدام في الأماكن المشابهة مثل:
 - أماكن مطاعم الموظفين في الفنادق والمكاتب وأماكن العمل الأخرى.
 - أو من قبل نزلاء الفنادق والاسواق والأماكن السكنية الأخرى.
 - والأماكن التي تقدم مبيتاً ووجبة إفطار.
 - والمزارل الريفية.
- يجب عدم استخدام أي ملحقات أخرى غير المرفقة مع الجهاز.

وصف الأجزاء

- حافظ الطعام
- زر تبديل الوضع
- الغطاء
- قرص الشفرة
- وحدة التثبيت
- زر On/Off (تشغيل/إيقاف التشغيل)
- الوعاء
- شفرة حلزونية للتقطيع لشرايح رفيعة / للبادردله
- شفرة حلزونية للتقطيع لشرايح رفيعة / للتاليانيني
- شفرة حلزونية للتقطيع لشرايح خشنة / للتغويجي
- شفرة حلزونية للتقطيع لشرايح رفيعة / للسياجيتي

قبل الاستخدام الأول

- قم بإخراج الجهاز والملحقات خارج العلبة. قم بإزالة الملصقات، أو ورق البلاستيك أو ورق الألوมิเนียม الواقع عن الجهاز.
- قبل الاستخدام الأول، قم بمسح جميع الأجزاء القابلة للإزالة بقطعة قماش رطبة. لا تستخدم مطلقاً آلة متحات كاشطة.
- ضع كبل الطاقة في المقبس. (ملاحظة: تأكد من أن الجهد الذي يشار إليه على الجهاز يتطابق مع الجهد المحلي قبل توصيل الجهاز. الجهد 220 فولت -240 فولت 50/60 هرتز)
- تكون الشفرات حادة جداً، لذا توحي الحذر أثناء التنظيف. تجنب أي اتصال جسدي مع الشفرات، لأنها قد تسبب لك إصابة خطيرة.

الاستخدام

- توجد 4 شفرات متوفرة لوظيفة التقطيع الحلزوني والتقطيع لشرايح.
- وهي مناسبة بشكل خاص للمعالجة المختبرات المتشابهة الموجودة في صورة طوبلة كالفنجل والخيار والكوسا. وهي أيضاً مناسبة للاستخدام مع الفصل والمقطايع والفاشار والكشري الذبذبة اللب. بالنسبة للفأكهة أو الخضروات الطرية كالتيانجان أو الضماير أو الشستسل المنسوق أو الفوز قهي غير ملائمة أو أقل ملائمة للاستخدام.

تغير نوع الشفرة الموجودة في قرص الشفرة

- تكون الشفرات الحادة وملحقات التقطيع حادة للغاية. كن حذراً عند التعامل مع ملحق التقطيع.
- أزل قرص الشفرة من الجهاز
- ادفع زر القفل للتحايل الأسير.
- مسح الشفرة في نفس الوقت من القرص.
- قم بإدخال أحد الشفرات الأخرى التي تحتاج لاستخدامها.
- اضغط عليها حتى تسمع صوت القلقة الذي يدل على تثبيتها في القرص.
- وظيفة التقطيع الحلزوني والتقطيع لشرايح**
- اضغط مع الاستمرار على زر تبديل الوضع، يمكن تحروء عند إدارة الغطاء.
- أدر الغطاء باتجاه عقارب الساعة إلى الموضع الذي ترغب فيه، بحيث تحاذر بين وضع التقطيع الحلزوني ووضع التقطيع لشرايح.
- التشغيل**
- يجب أن يكون الغطاء مغلقاً بشكل آمن، ولا ين جعل الجهاز.
- اضغط على زر On/Off (تشغيل/إيقاف التشغيل) لتشغيل الجهاز.
- لا تستخدم الجهاز بشكل متواصل لمدة تزيد عن 1 دقائق. اترك الموتور ليبرد قبل التشغيل مرة أخرى

التنظيف والصيانة

- تأكد فصل قابس الجهاز قبل التنظيف.
- تنظف الجهاز بقطعة قماش رطبة. لا تستخدم مطلقاً مواد تنظيف قوية أو كاشطة، أو الوب الخشن أو الألياف السلكية الذي قد يصيب أو تلف الجهاز
- احرص ألا تغمس الجهاز الكهربائي أبداً في الماء أو أي سائل آخر. لا يمكن تنظيف الجهاز في غسالة الأطباق.
- قم بتنظيف للملحقات باستخدام ماء دافئ وصابون لتجنب نمو البكتيريا. كما يمكن تنظيف للملحقات في غسالة الأطباق.
- ارك جميع الأجزاء نجف تماماً قبل إعادة تجميع الجهاز.

ضمان

- هذا الجهاز مضمون لمدة عامين ، لمعرفة أحكام الضمان يرجى قراءة كرت ضمان المنتج.
- الكوابات أدناه غير مشمولة بالضمان:
 - المقابض.

— أجزاء البدن القابلة للكسر.

العمر الافتراضي للجهاز يعتمد على ظروف التشغيل العادية . العمر الافتراضي 3 سنوات تقريبا.

يرجى الاتصال على أرقام خدمة الصيانة والتصلح الآتية:

الشركة المتحدة للإلكترونيات

المملكة العربية السعودية (الهاتف المجاني) 800 124 0900

البيئة



وسبب العرض الثابت والضيق، يجب ألا يتم وضع هذا الجهاز في سلة النفايات المنزلية في نهاية عمره الافتراضي، ولكن يجب نقله إلى نقطة المركزية لإعادة تدوير الأجهزة المنزلية الكهربائية والإلكترونية. إن كلاً من الرمز الموجود على الجهاز، ودليل التعليمات والتعليق بجدارك من هذه السلسلة العامة، يمكن إعادة تدوير المواد المستخدمة في هذا الجهاز. من خلال إعادة تدوير الأجهزة المنزلية، فإنك تقدم إسهام هام للحفاظ على البيئة التي نعيش فيها. استفسر من السلطات المحلية عن نقطة التجميع.

الدعم

يمكنك الحصول على جميع المعلومات وقطع الغيار المتوفرة عبر الموقع الإلكتروني www.princesshome.eu

Made in China
صنع في الصين

© Princess 2018