




Electric heater (Halogen)
01.345019.09.001

PARTS DESCRIPTION / وصف الأجزاء

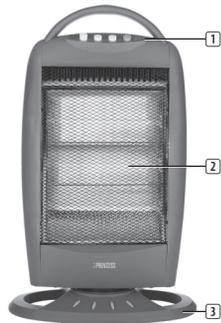

[WEEE Logo]



EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.

- WARNING:** In order to avoid overheating, do not cover the heater.
- CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Do not use the appliance with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Joists, beams and rafters shall not be cut or notched to install the appliance.
- Please do not install the appliance close to curtains and other combustible materials. This could cause a fire.
- Regulations concerning the discharge of air have to be fulfilled.
- The appliance shall, under no circumstances, be covered with insulating material or similar material.
- The heater must not be located immediately below a socket-outlet.
- The heater needs to be installed so that the switches and other controls cannot be touched by a person in the bath or shower.
- WARNING:** The heater must not be used if the ceramic panels are damaged.
- WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

PARTS DESCRIPTION

- Control panel
- Heating elements
- Base

BEFORE THE FIRST USE

- Remove the mounting screws from base of the heater.
- Insert the power cord through the slot placed in the middle part of the base and then assemble the body frame to the base.
- Secure the body frame to the base replacing the two mounting screws. Insert the power cord through the suitable slots and then fix it by the clamp.

Warning! Do not move the heater if the bulbs are still warm, this could damage the device.

USE

- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V ~ 50/60Hz).
- This heater is equipped with three different heating levels, select the desired heating level. Press the oscillating switch to make the heater oscillate. Press it again to shut off the oscillating movement.
- This appliance is provided with a safety switch, the safety switch will turn off the device when the heater is tilted or when it's tipped.

CLEANING AND MAINTENANCE

- The appliance needs only an external regular cleaning.

- Before cleaning, unplug the appliance and wait for the appliance to cool down.
- Clean the grilles from dust.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.

WARRANTY

- This product is warranted for 2 Years, for detailed terms, please refer to the Warranty Card.
- Following parts are not covered by warranty:
 - Knobs.
 - Any broken body parts.

Approximate life of this appliance under normal conditions is 3 Years.

For service and repairs, please call the following numbers:

United Electronics Co.
Saudi Arabia (Toll-free) 800 124 0900

ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

AR دليل الإرشادات

السلامة

- عند إهمال تعليمات السلامة لا تتحمل الشركة المصنعة أية مسؤولية عن وقوع تلفيات.
- في حالة تلف سلك الإمداد بالطاقة، يجب استبداله بواسطة الشركة المصنعة أو وكيل الصيانة أو أي فني مؤهل لتجنب التعرض إلى المخاطر.
- لا تحرك الجهاز مطلقاً عن طريق سحب السلك، وتأكد من أن السلك لن يصبح متشابكاً.
- يجب وضع الجهاز على سطح ثابت ومستو.
- يجب ألا يغفل المستخدم عن الجهاز أثناء توصيله بالكهرباء.
- تم تصميم هذا الجهاز للاستخدام المنزلي فقط ولأغراض التي صُنع من أجلها.
- ينبغي عدم استخدام هذا الجهاز بواسطة أطفال أصغر من 8 سنوات. يمكن استخدام هذا الجهاز بواسطة الأطفال من سن 8 سنوات وما فوق والأشخاص ذوي القدرات الجسدية أو الحسية أو العقلية المحدودة أو الذين يفتقرون إلى الخبرة والمعرفة إذا تم الإشراف عليهم أو إرشادهم بشأن كيفية استخدام الجهاز بطريقة آمنة وفهمهم للمخاطر المحتملة. يجب على الأطفال عدم اللعب بهذا الجهاز. احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 8 سنوات. يجب على الأطفال عدم القيام بعملية التنظيف وصيانة المستخدم إلا إذا كانوا أكبر من 8 سنوات وفي وجود من يشرف عليهم.
- لحماية نفسك من التعرض إلى صدمة كهربائية، لا تغمس السلك أو القابس أو الجهاز في الماء أو في أية سوائل أخرى.
- تحذير: لتجنب فرط التسخين، لا تغطي المدفأة.
- تنبيه: قد تصبح بعض الأجزاء الخاصة بهذا المنتج ساخنة للغاية وقد تسبب حروق. يجب الانتباه جيداً عند وجود أطفال أو ذوي احتياجات خاصة.
- لا تستخدم الجهاز مطلقاً مع مبرمج أو مؤقت أو نظام منفصل للتحكم عن بعد أو أي جهاز آخر يقوم بتشغيل المدفأة أو توماتيكياً؛ نظراً لوجود احتمالية التعرض لخطر نشوب حريق في حالة تغطية المدفأة أو وضعها بشكل غير صحيح.
- لا تستخدم المدفأة في المحيط المباشر للحمام أو منطقة الاستحمام أو حمام السباحة.
- يجب ألا يتم إزالة أو فتح الدعائم والحوامل والعارضات لتثبيت الجهاز.
- برجاء عدم تثبيت الجهاز بالقرب من الستائر أو من مواد أخرى قابلة للاحتراق. قد يتسبب هذا في نشوب حريق.
- يجب اتباع القوانين المتعلقة بتفريغ الهواء.
- يجب ألا يتم تغطية الجهاز تحت أي ظرف مادة عازلة أو مادة مشابهة.
- يجب ألا توضع المدفأة مباشرة تحت مقبس مخرج الطاقة.
- تحتاج المدفأة إلى تركيبها بحيث لا يمكن لأي شخص في الحمام أو أثناء الاستحمام لمس المفاتيح أو وحدات التحكم.
- تحذير: يجب ألا تستخدم المدفأة إذا كانت ألواح السيراميك تالفة.
- تحذير: إن لم يتم تجهيز المدفأة للجهاز للتحكم في درجة حرارة الغرفة. لا تستخدم المدفأة في غرف صغيرة عندما يتواجد بها أشخاص غير قادرين على معادلة الغرفة بأنفسهم ما لم يوجد من يشرف عليهم.

وصف الأجزاء

- لوحة التحكم
- عناصر التسخين
- القاعدة

قبل الاستخدام الأول

- أزل مسامير التثبيت من قاعدة المدفأة.
- ادخل سلك الطاقة في الفتحة الموجودة في منتصف القاعدة ثم قم بتجميع هيكل الجسم مع القاعدة.
- ثبت هيكل الجسم بالقاعدة بإعادة وضع مسامير التثبيت. أدخل سلك الطاقة في الفتحات المناسبة ثم ثبت بالشبك.

تحفظاً يجب تحريك سخان إذا كانت اللصقات مازالت ساخنة لأن هذا قد يهلك الجهاز.

الاستخدام

- ضع كابل الطاقة في المقبس (ملاحظة: تأكد أن الجهد الكهربائي المشار إليه على الجهاز مطابق للجهد المحلي قبل توصيل الجهاز. الجهد الكهربائي 220-240 فولت، 50 هرتز)
- هذه المدفأة مجهزة بثلاثة مستويات تدفئة مختلفة، قم بتحديد مستوى التدفئة المطلوب. اضغط على مفتاح الدوران لجعل المدفأة تدور. اضغط عليه مرة أخرى لإيقاف حركة الدوران.
- هذا الجهاز مزود بمفتاح أمان، سيمنع مفتاح الأمان على إيقاف تشغيل الجهاز عندما تكون المدفأة مائلة أو مقلوبة.

التنظيف والصيانة

- يجتنب تنظيف فقط تنظيف من الخارج.
- قبل التنظيف افصل الجهاز من المقبس وانظر حتى يبرد الجهاز.
- نظف الشبكات من الغبار.
- نظف الجهاز بقطعة قماش رطبة. لا تستخدم مطلقاً مواد تنظيف قوية أو كاشطة، أو الورق الخشن أو الألياف السلكية التي قد تتسبب في تلف الجهاز.

ضمان

- هذا الجهاز مضمون لمدة عامين ، لفترة أحكام الضمان يرجى قراءة كروت ضمان المنتج.
- المكونات أداء غير مضمونة بالصانع:
- المقابض.

— أجزاء البدن القابلة للكسر.

العمر الافتراضي للجهاز يعتمد على ظروف التشغيل العادية . العمر الافتراضي 3 سنوات تقريبا.

يرجى الاتصال على أرقام خدمة الصيانة والتصلح الآتية:
الشركة المتحدة للإلكترونيات
المملكة العربية السعودية (مكافئ الجاني) 800 124 0900

البيئة



وبسبب العرض الثابت والظيق، يجب ألا يتم وضع هذا الجهاز في سلة النفايات المنزلية في نهاية عمره الافتراضي، ولكن يجب نقله إلى نقطة المركزية لتدوير الأجهزة الكهربائية والإلكترونية. إن كلاً من الرمز الموجود على الجهاز، ودليل التعليمات والتنظيف يذكركم من هذه المسألة الهامة. يمكن إعادة تدوير المواد المستخدمة في هذا الجهاز. من خلال إعادة تدوير الأجهزة المنزلية، فإنك تقدم إسهام هام للحفاظ على البيئة التي نعيش فيها. استفسر من السلطات المحلية عن نقطة التجميع.