




EN Instruction manual
AR الاستخدام

Made in China
صنع في الصين



Stand fan
01.355840.04.001

PARTS DESCRIPTION / وصف الأجزاء

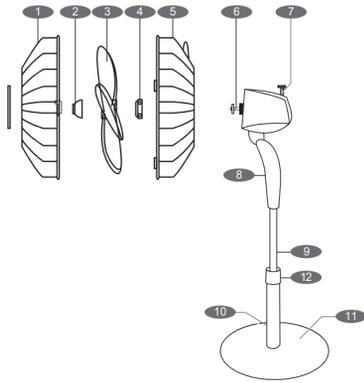

EN Instruction manual

SAFETY

This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.

- By ignoring the safety instructions the manufacturer can not be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.

PARTS DESCRIPTION

- Front guard
- Fan blade lock button
- Fan blades
- Locknut for the rear guard
- Rear guard
- Axle
- Oscillation pen
- Control panel
- Pole
- Stand
- Tighten knob for the stand

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.

Mounting

- Place the pole in the stand.
- Important: push the pole firmly in the base.** Tighten the pole by turning the tighten knob at the bottom of the stand.
- Loosen the screw on the housing by turning it to the left and place the housing on the pole and fasten the screw again.
- Mount the rear guard to the motor by matching the holes on the rear guard to the round pins on the motor housing. Put the guard over the pins.
- Secure the rear guard to the motor housing with the locknut for the rear guard.
- Put the blades onto the axle, tighten the blades by turning on the fan blade lock button.
- Test the blades by rotating with your hand. Make sure there is no friction, when there will be some friction repeat the previous steps again.
- Mount the front guard on the rear guard with the clips and the supplied screw.

- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.

- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50Hz)

USE

- Use the speed control knobs to choose the desired ventilation level.
- To make the fan head oscillate, push down the Oscillation Knob.
- To stop the fan head from oscillating, pull-up the Oscillation Knob.

CLEANING AND MAINTENANCE

- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.

GUARANTEE

- This product is guaranteed for 24 months granted. Your warranty is valid if the product is used in accordance to the instructions and for the purpose for which it was created. In addition, the original purchase (invoice, sales slip or receipt) is to be submitted with the date of purchase, the name of the retailer and the item number of the product.

ENVIRONMENT

- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

AR دليل الإرشادات

للسلامة

- ينبغي عدم استخدام هذا الجهاز بواسطة أطفال أصغر من 8 سنوات. يمكن استخدام هذا الجهاز بواسطة الأطفال من سن 8 سنوات وما فوق والأشخاص ذوي القدرات الجسدية أو الحسية أو العقلية المحدودة أو الذين يفتقرون إلى الخبرة والمعرفة إذا تم الإشراف عليهم أو إرشادهم بشأن كيفية استخدام الجهاز بطريقة آمنة وفهمهم للمخاطر المحتملة. يجب على الأطفال عدم اللعب بهذا الجهاز.

احرص على بقاء الجهاز والسلك بعيدين عن متناول الأطفال أقل من 8 سنوات.

يجب على الأطفال عدم القيام بعملية التنظيف وصيانة المستخدم إلا إذا كانوا أكبر من 8 سنوات وفي وجود من يشرف عليهم.

- عند إهمال تعليمات السلامة لا تتحمل الشركة المصنعة أية مسؤولية عن وقوع تلفيات.
- في حالة تلف سلك الإمداد بالطاقة، يجب استبداله بواسطة الشركة المصنعة أو وكيل الصيانة أو أي فني مؤهل لتجنب التعرض إلى المخاطر.
- لا تحرك الجهاز مطلقاً عن طريق سحب السلك، وتأكد من أن السلك لن يصبح متشابكاً.
- يجب وضع الجهاز على سطح ثابت ومستو.
- يجب ألا يفعل المستخدم عن الجهاز أثناء توصيله بالكهرباء
- تم تصميم هذا الجهاز للاستخدام المنزلي فقط وللأغراض التي صنع من أجلها.
- لحماية نفسك من التعرض إلى صدمة كهربائية، لا تعمس السلك أو القابس أو الجهاز في الماء أو في أية سوائل أخرى.

وصف الأجزاء

- الواقي الأمامي
- زر غلق شفرة مروحة
- شفرات المروحة
- صمولة تثبيت للواقي الخلفي
- الواقي الخلفي
- المحور
- قلم التذبذبات
- لوحة التحكم
- دعامة
- حامل
- تثبيت للقبض للحامل

قبل الاستخدام الأول

- قم بإخراج الجهاز والملحقات خارج العلبة. قم بإزالة الملصقات، أو ورق الألوينيوم الواقي عن الجهاز.
- التثبيت
- ضع الدعامة في الحامل.
- هام: ادفع الدعامة بقوة في القاعدة.** ثبت الدعامة من خلال تدوير المقبض لتثبيت أسفل الحامل.
- ثبت السلك الموجود في التثبيت من خلال تدويره إلى اليسار ووضع البيت على الدعامة ثم ربط السلك مرة أخرى.
- ثبت الواقي الخلفي بالفرق عن طريق وضع فتحات الواقي الخلفي على المسامير الدائرية الموجودة على مبيت المحرك. ضع الواقي على المسامير.
- أحكم تثبيت الواقي الخلفي بحيث المحرك باستخدام صمولة تثبيت للواقي الخلفي.
- ضع الشفرات على المحور ثم ثبت الشفرات عن طريق تشغيل زر غلق شفرة المروحة.
- اختبر الشفرات عن طريق تدويرها يدياً. تأكد من عدم وجود احتكاك، وعند وجود احتكاك أعد الخطوات السابقة مرة أخرى.
- ثبت الواقي الأمامي على الواقي الخلفي باستخدام للشدائد والسداد المرفق.
- ضع الجهاز على سطح ثابت ومستو وتأكد من وجود حد أدنى من المساحة الحرة حول الجهاز. قدرها 10 سم. هذا الجهاز غير مناسب للتثبيت في خزانة أو للاستخدام الخارجي.
- ضع كابل الطاقة في المقبض (ملاحظة: تأكد أن الجهد الكهربائي المشار إليه على الجهاز مطابق للجهد المحلي قبل توصيل الجهاز. الجهد الكهربائي 220-240 فولت. 50 هرتز

الاستخدام

- استخدم مقايض التحكم في السرعة لاختيار مستوى التهوية المطلوب.
- لتحريك رأس المروحة، اضغط على مفتاح التحكم في الدوران إلى أسفل.
- لإيقاف رأس المروحة بالحركة، اسحب مفتاح التحكم في الدوران إلى أعلى.

التنظيف والصيانة

- نظف الجهاز بقطعة قماش رطبة. لا تستخدم مطلقاً مواد تنظيف قوية أو كاشطة، أو اللف الحشن أو الألياف السلكية التي قد تتسبب في تلف الجهاز.
- احرص ألا تعمس الجهاز الكهربائي أبداً في الماء أو أي سائل آخر. لا يمكن تنظيف الجهاز في غسالة الأطباق.

الضمان

- يتمتع هذا المنتج بضمان لمدة 24 شهر. يعتبر هذا الضمان ساريًا طالما تم استخدام المنتج حسب التعليمات والأغراض التي صنع من أجلها الجهاز. إضافة إلى ذلك، يجب إرسال إثبات الشراء الأصلي (فاتورة أو ورقة بيع أو إيصال) مع تاريخ الشراء واسم بائع المتجر ورقم المنتج.

البيئة



- وبسبب العرض الثالث والضيء، يجب ألا يتم وضع هذا الجهاز في سلة النفايات المنزلية في نهاية عمره الافتراضي، ولكن يجب نقله إلى نقطة المركزية لإعادة تدوير الأجهزة المنزلية الكهربائية والإلكترونية. إن كلاً من الرمز الموجود على الجهاز، و دليل التعليمات والعلبيل بمحرك من هذه الشبكات الفنية، يمكن إعادة تدوير المواد المستخدمة في هذا الجهاز. من خلال إعادة تدوير الأجهزة المنزلية، فإنك تقدم إسهام هام للحفاظ على البيئة التي نعيش فيها. استفسر من السلطات المحلية عن نقطة التصحيح.

